


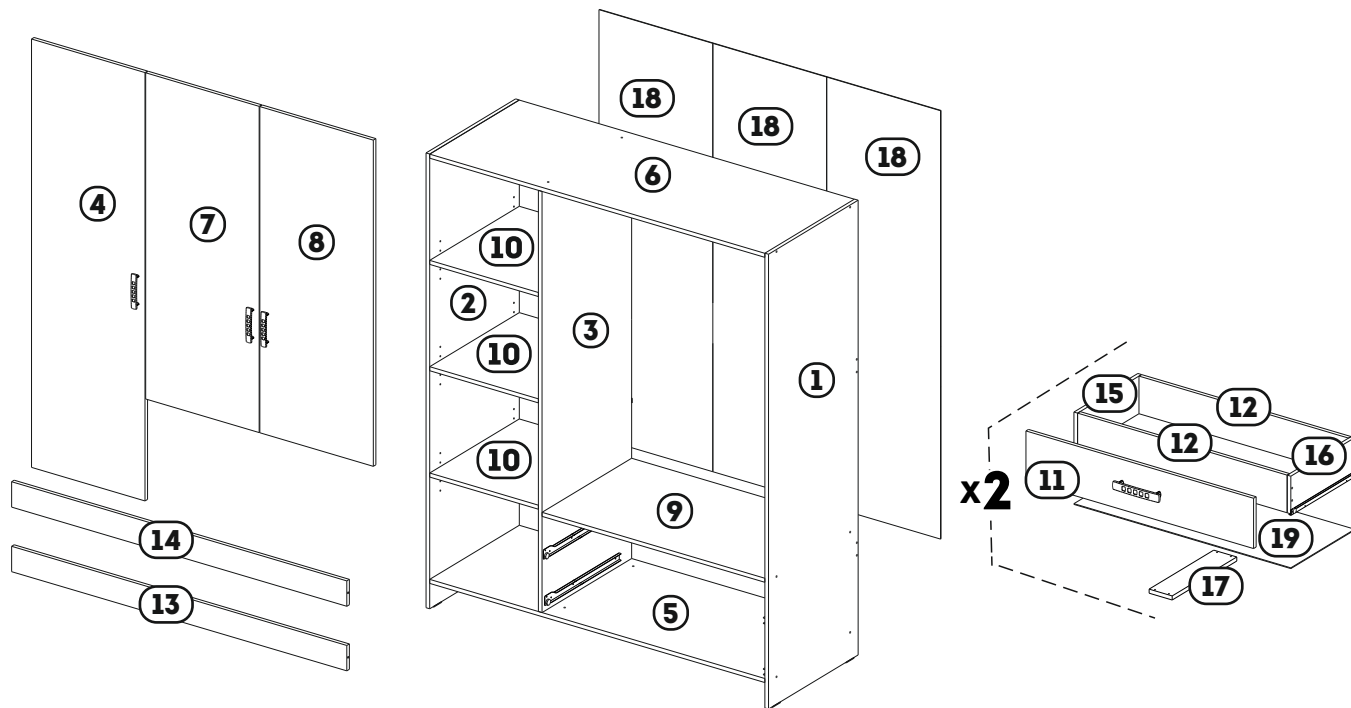
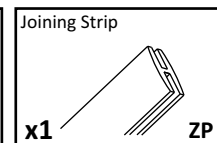
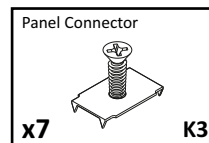
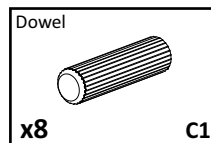
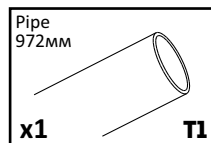
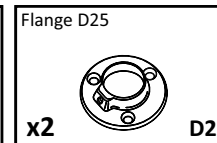
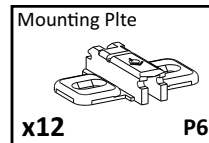
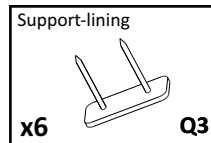
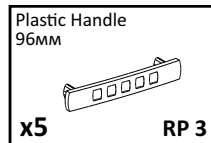
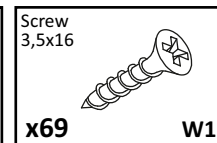
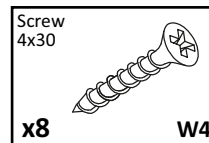
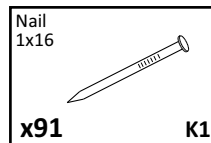
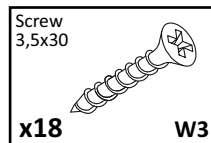
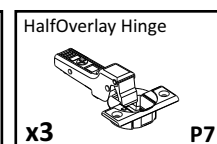
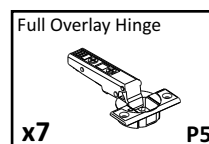
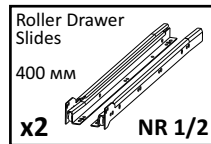
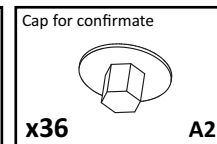
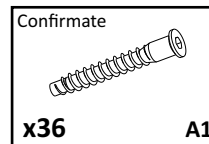
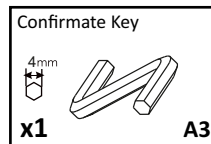





361-000117

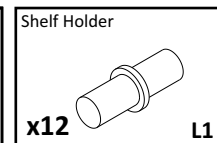

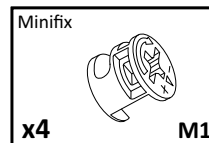


Nº	a*b	X	Pack
1	1769x560	1	1
2	1769x560	1	1
3	1656x560	1	3
4	1684x496	1	3
5	1467x560	1	2
6	1467x560	1	2
7	1238x496	1	4
8	1238x496	1	4
9	976x560	1	2
10	476x544	3	4
11	220x996	2	4
12	918x150	4	2
13	80x1467	1	2
14	1467x80	1	2
15	400x150	2	2
16	400x150	2	2
17	100x400	2	2
18	1684x498	3	1
19	950x400	2	1

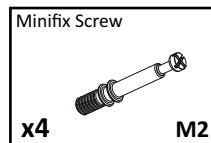

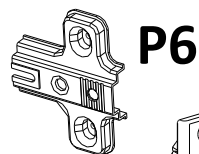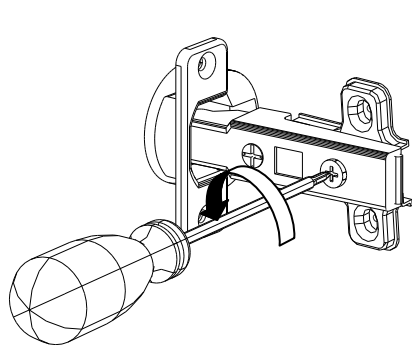


P6

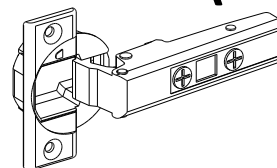


P5\ P7\ P8




M1




M2

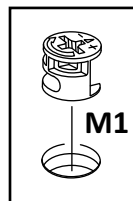

M1



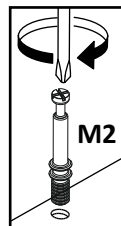


M2

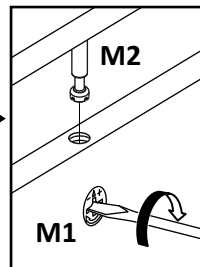

M2

M1

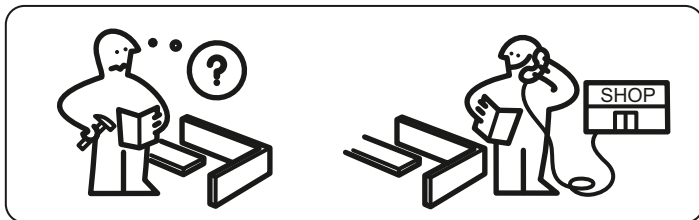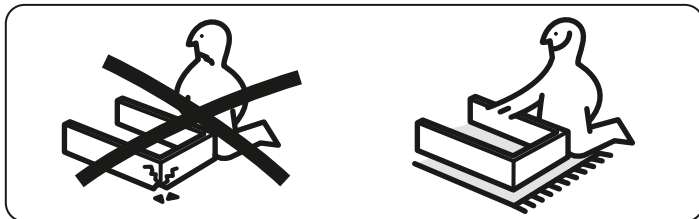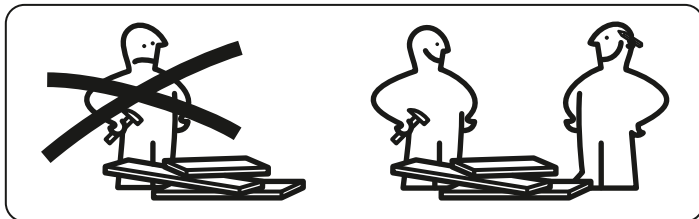

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE


- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

Mounting Pte

x12


P6



Roller Drawer
Slides
400 MM

x2

NR 1/2




Screw

3,5x16

x32

W1



Support-lining

x4

Q3



Minifix

x4



M1






Shelf Holder

x12


L1



Q3

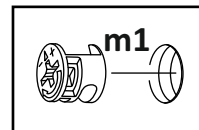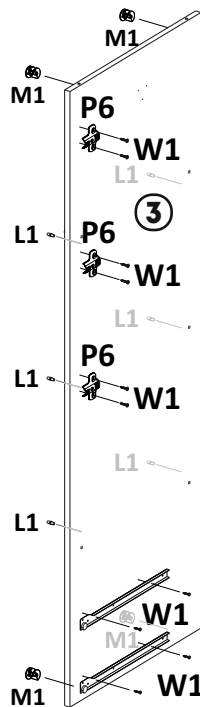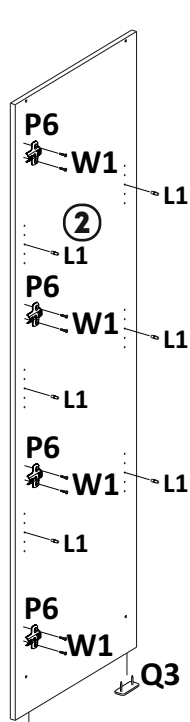


Q3

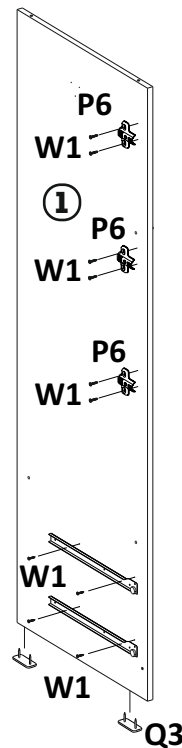




3

Minifix Screw




x4

M2

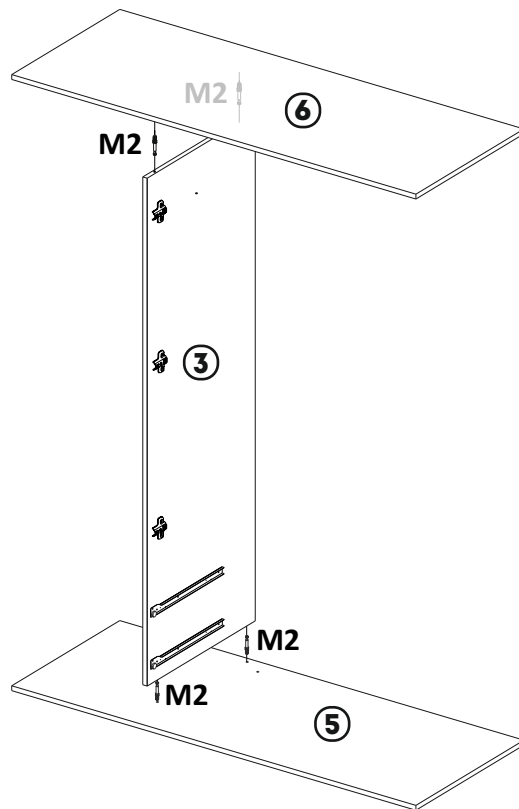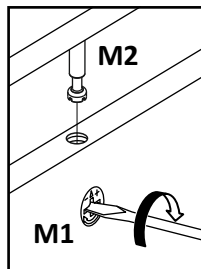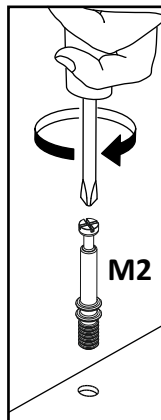




4

Confirmat




x20

A1

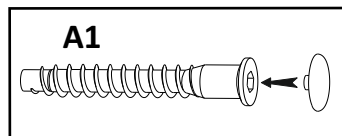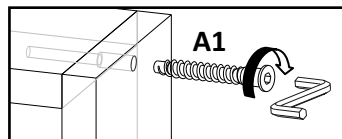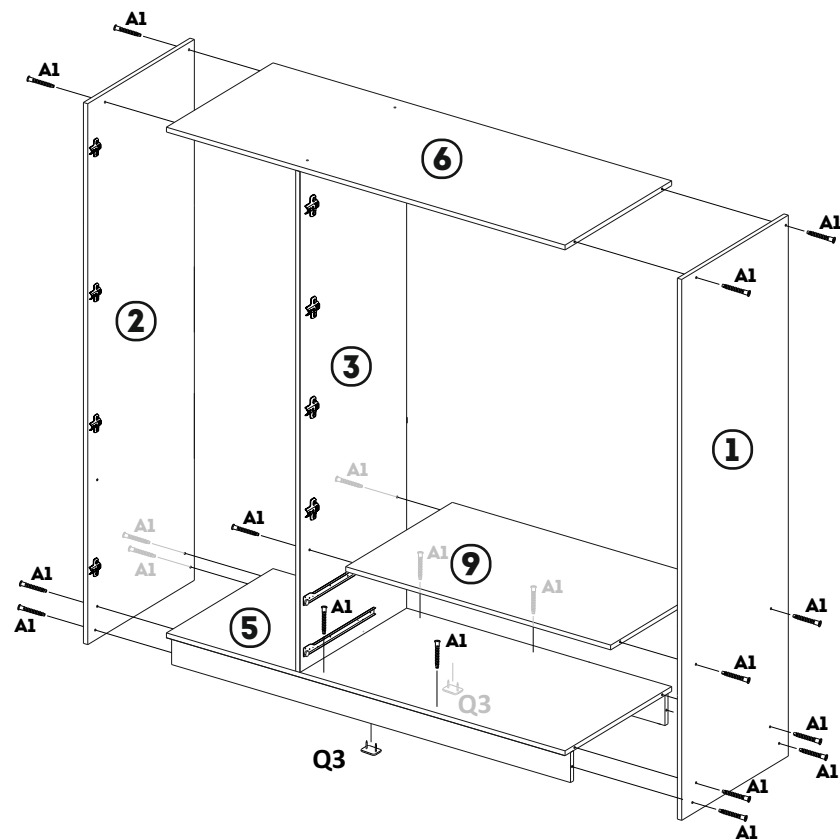

5

Nail
1x16



x51

K1


Joining Strip



x1

ZP


Screw
3,5x16



x7



W1

Rear Panel Fixing Screw




x7

K3

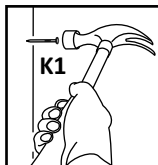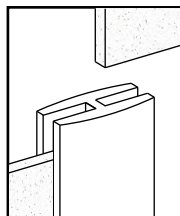

K1

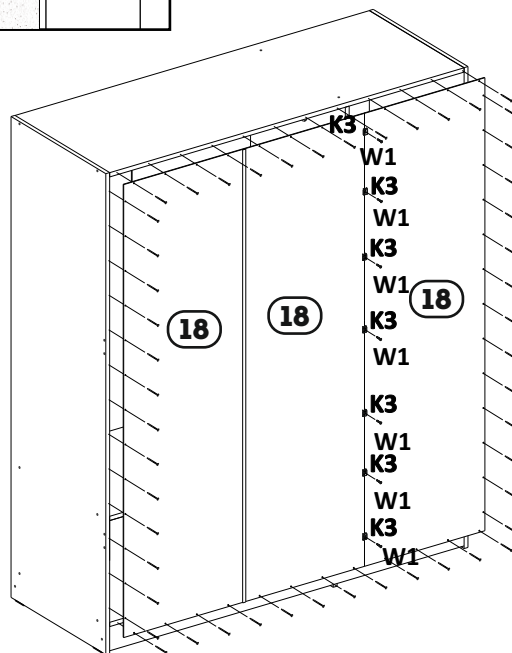

6

Pipe
972mm


x1

T1

Screw
3,5x16

x6






W1



Flange D25


x2

D2

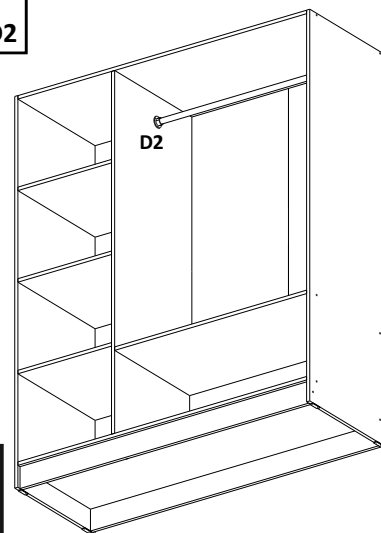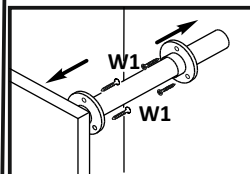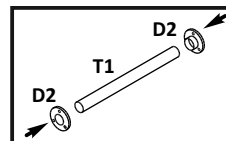

7

Confirmat



x8



A1

Cap for confirmate




x8

A2

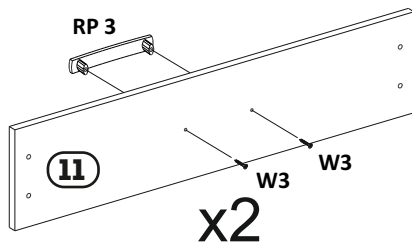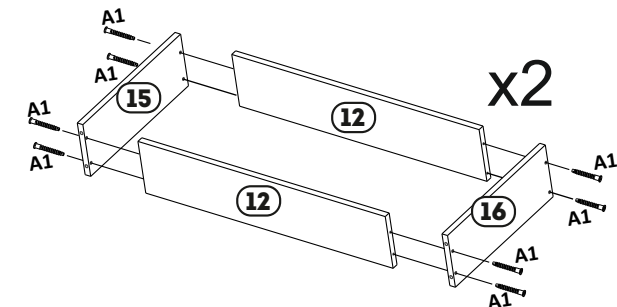


Plastic Handle
96mm



x5



RP 3

Screw
3,5x30




x4

W3



8


Dowel



x8


C1

Nail
1x16




x40

K1

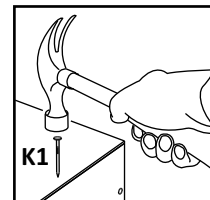

x2

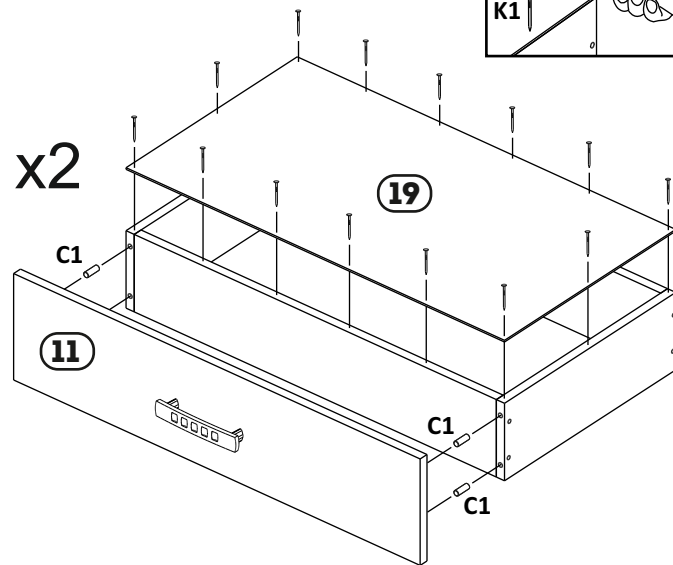

9

Telescopic Guide
400 mm


x2



NR 2

Screw
3,5x16


x8




W1

Screw
4x30

x8




W4

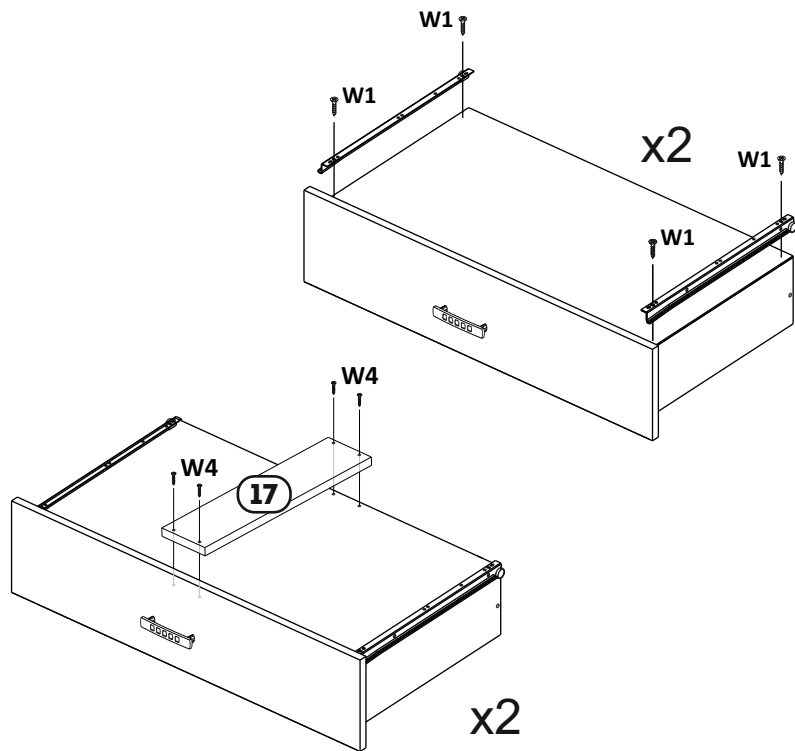


10

Screw
3,5x30

x8




W3

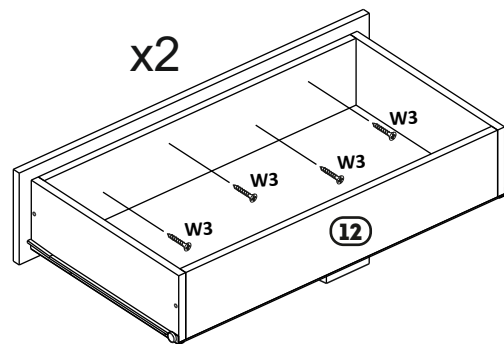

11

Full Overlay Hinge


x7



P5

Half Overlay Hinge


x3



P7

Screw
3,5x30


x6



W3

Plastic Handle
96mm


x3




RP 3

Screw
3,5x16

x20



W1

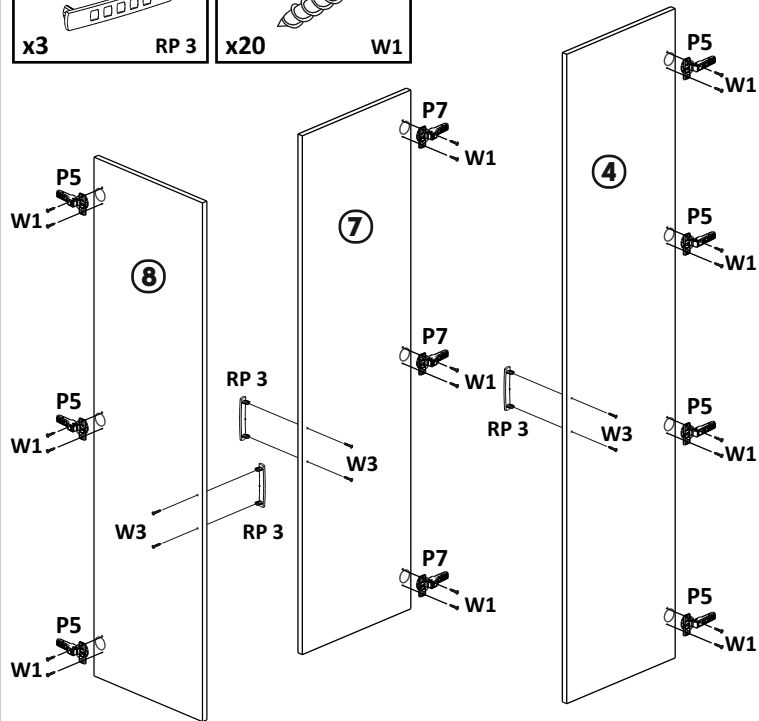

12

