


367-000004


Minifix Screw

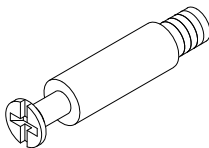

X12

A


Minifix

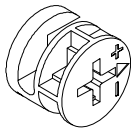

X12

B

Junction box

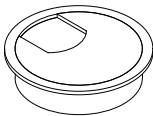

X2



C

Cleat




X4

D

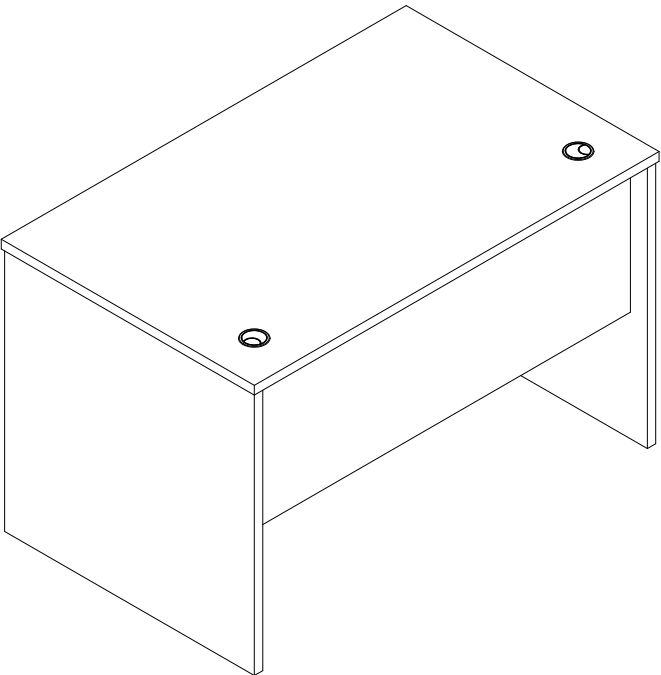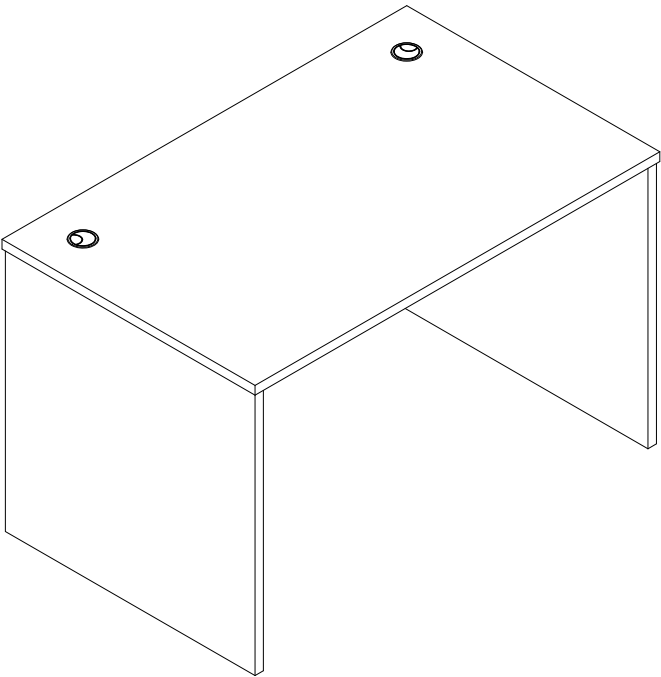

(1200\*750\*750H)


Minifix Screw

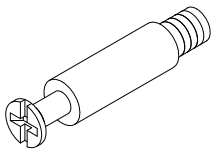

X12

A


Junction box

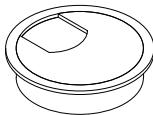

X2

C

Minifix

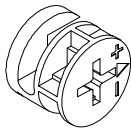

X14

B

Cleat




X4


D

# STEP: 1


To fix the panel 1、 2 、 3

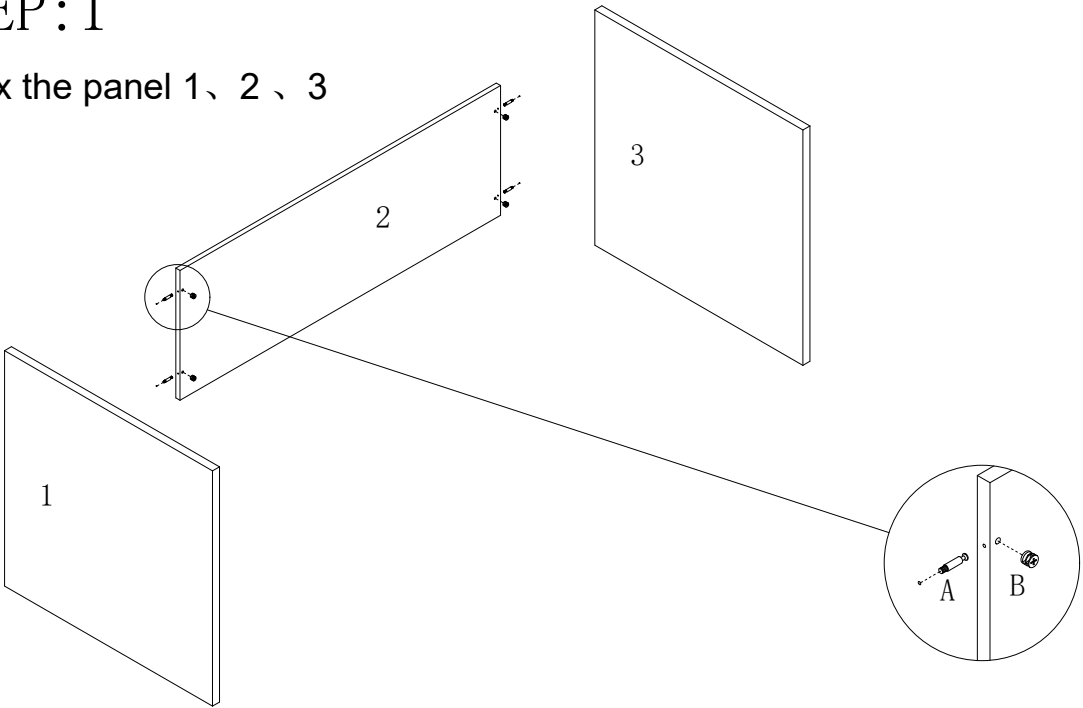

To fix the top panel 4


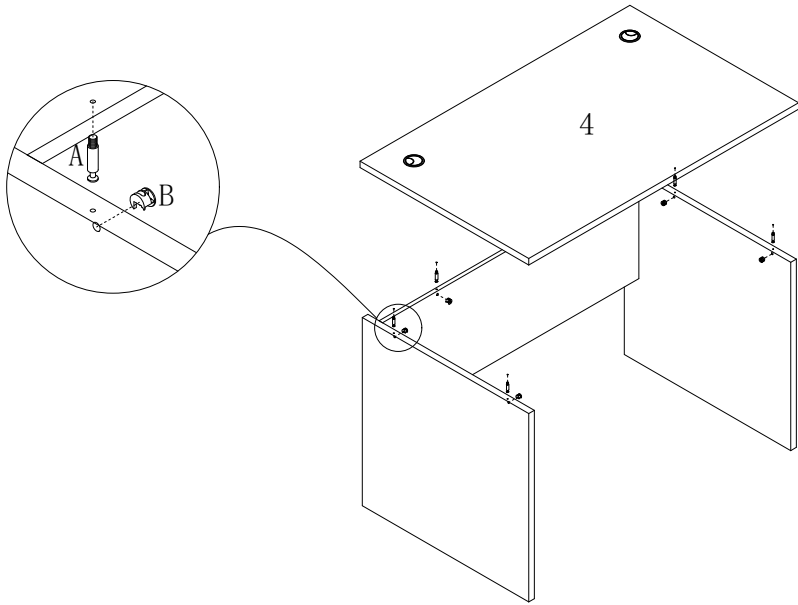











To fix the panel 6


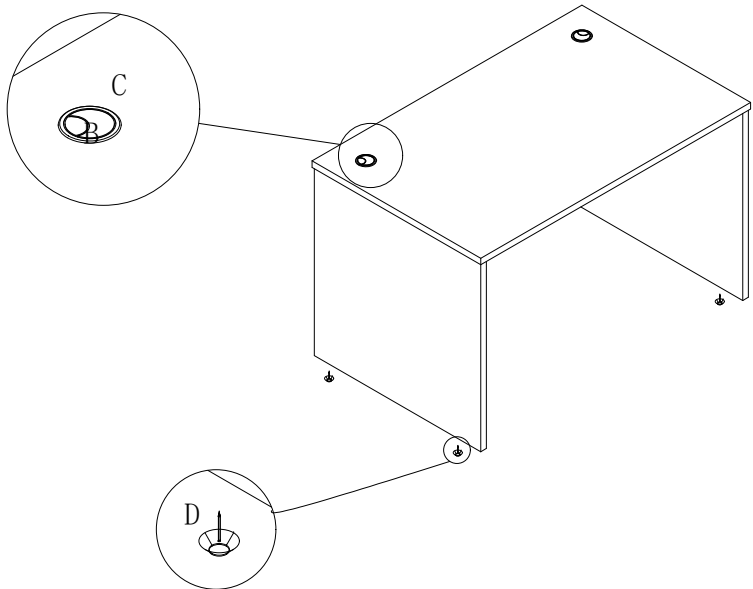


STEP:3

FINISH

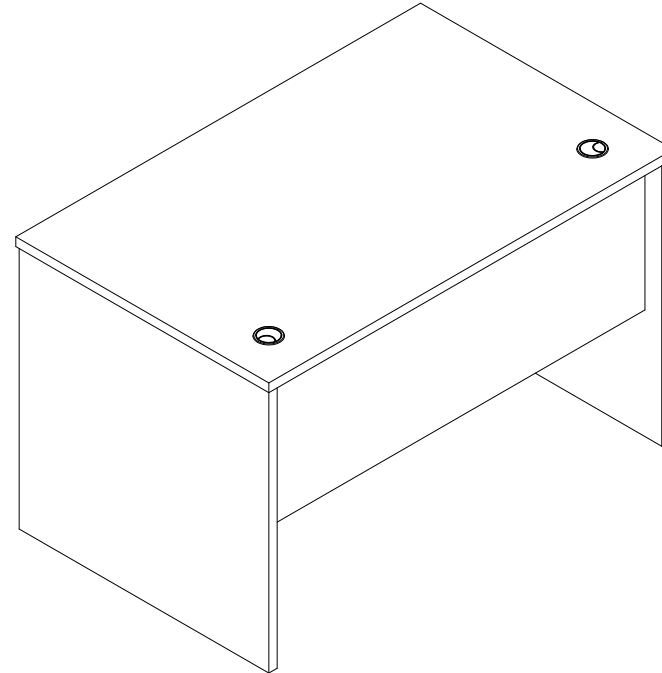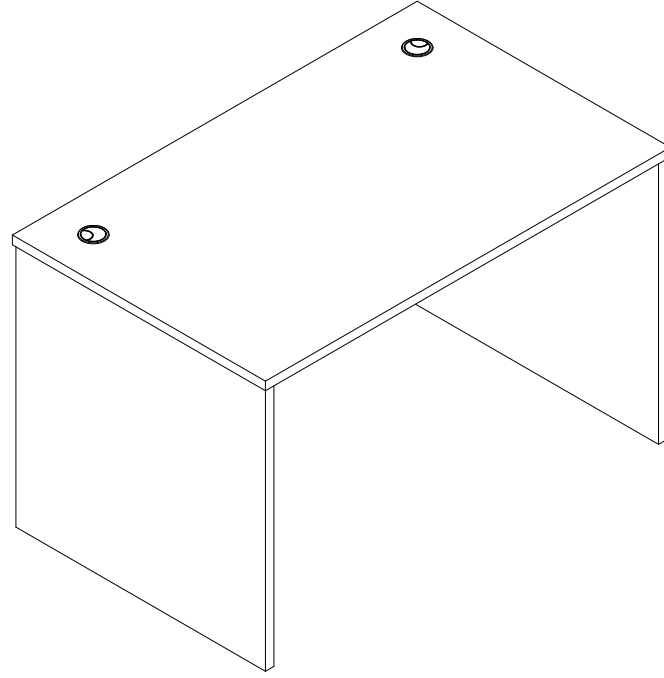

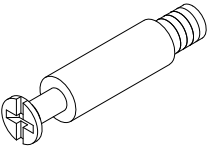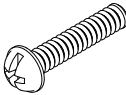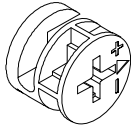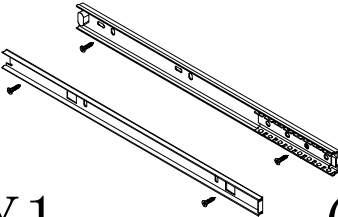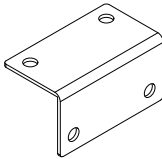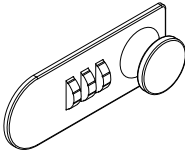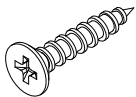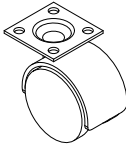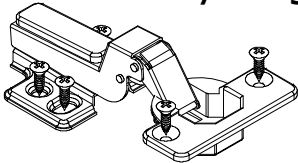
|                                                                                                                |                                                                                                                       |                                                                                                             |
|----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Minifix Screw<br><br>X24<br>A | vent hole<br><br>X1<br>F             | Screw 4*18<br><br>X4<br>K |
| Minifix<br><br>X24<br>B       | Drawer rail<br><br>X1<br>G           | Buckle<br><br>X1<br>L     |
| Screw 3.5*14<br><br>X52<br>C  | Lock<br><br>X1<br>H                  |                                                                                                             |
| Screw 3.5*40<br><br>X4<br>D | Caster<br><br>X4<br>I              |                                                                                                             |
| 128V<br><br>X2<br>E         | Whole overlay hinge<br><br>X2<br>J |                                                                                                             |

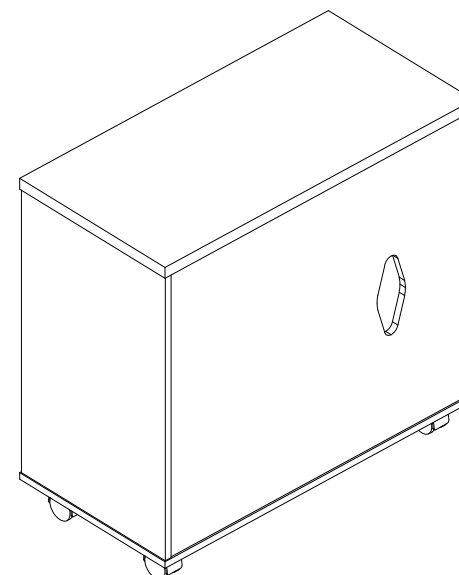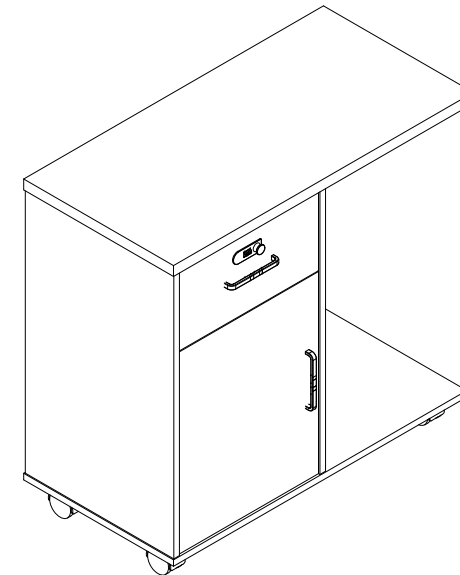

(800\*400\*750H)

Minifix Screw

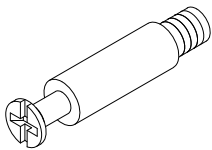

X12

A

vent hole




X1

F

# STEP : 1


To fix the panel 1 and 2

Minifix

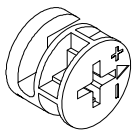


X14


B











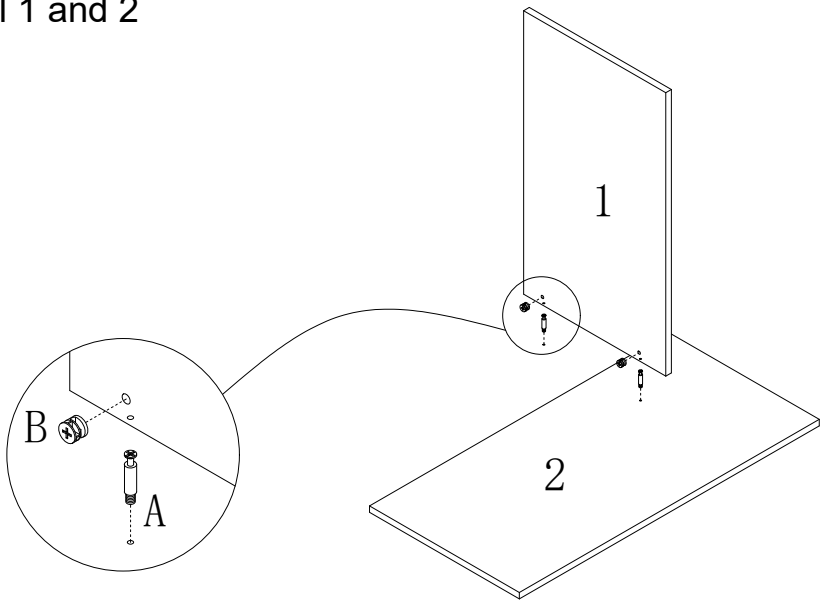


To fix the panel 3 、 4、 5

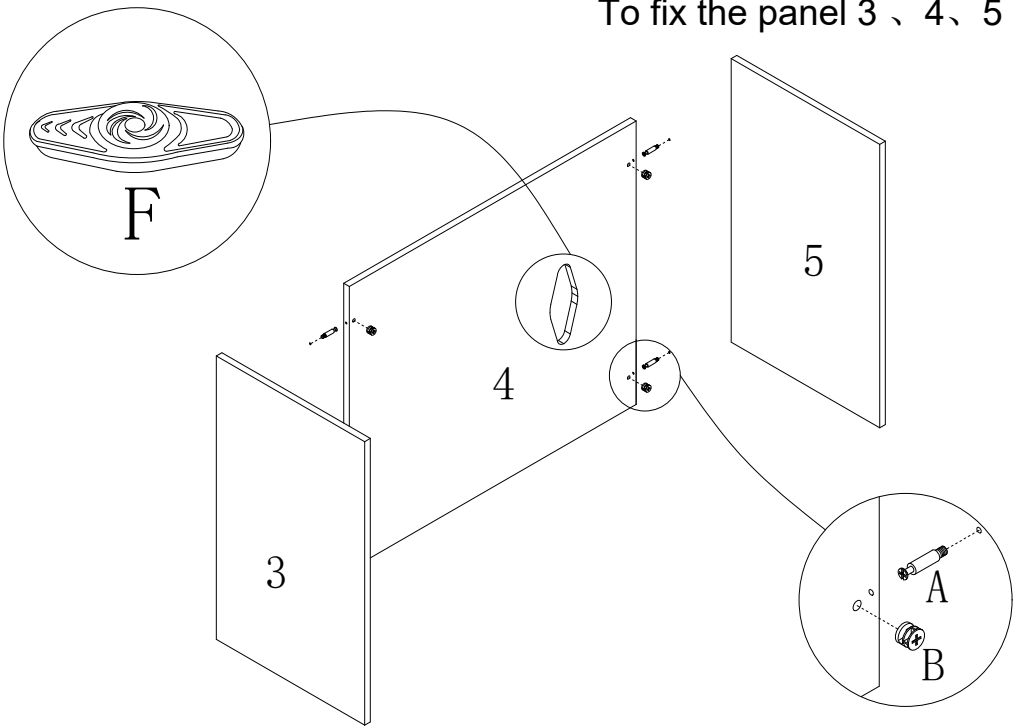

To fix the panel 6

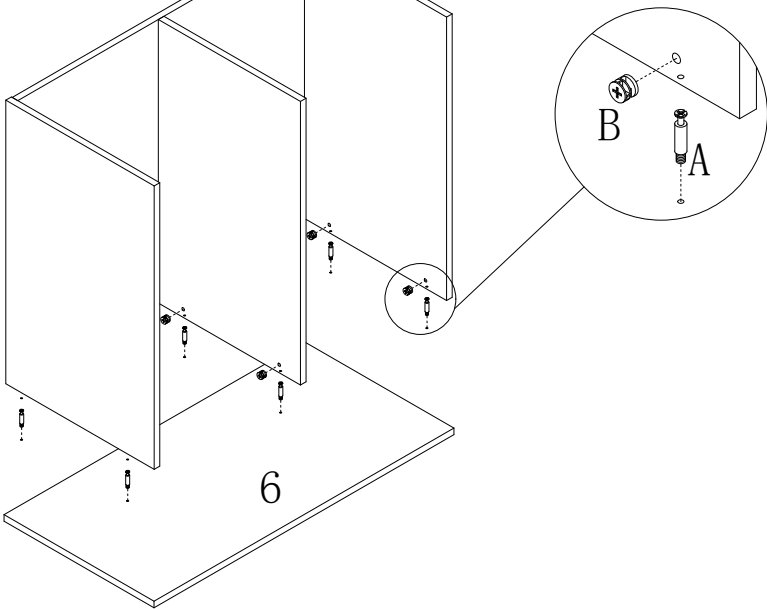

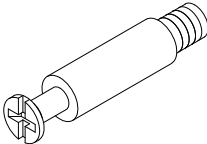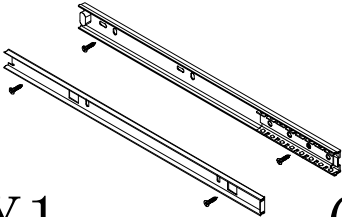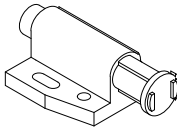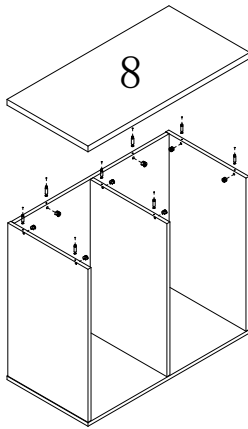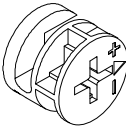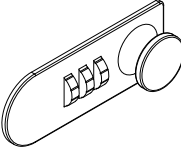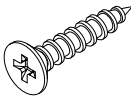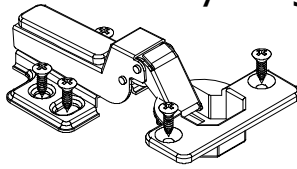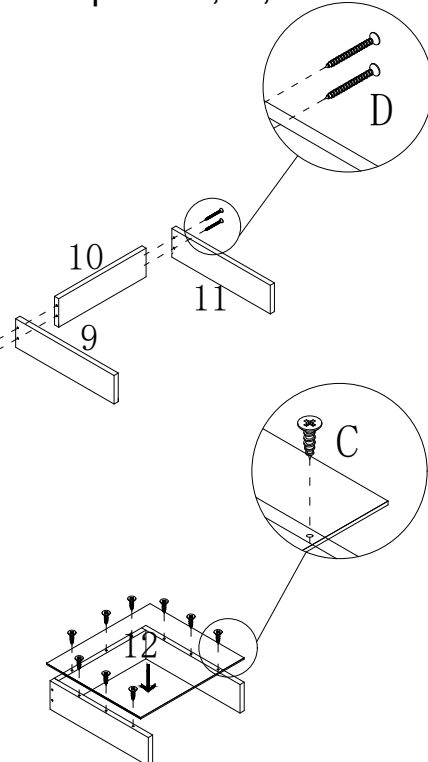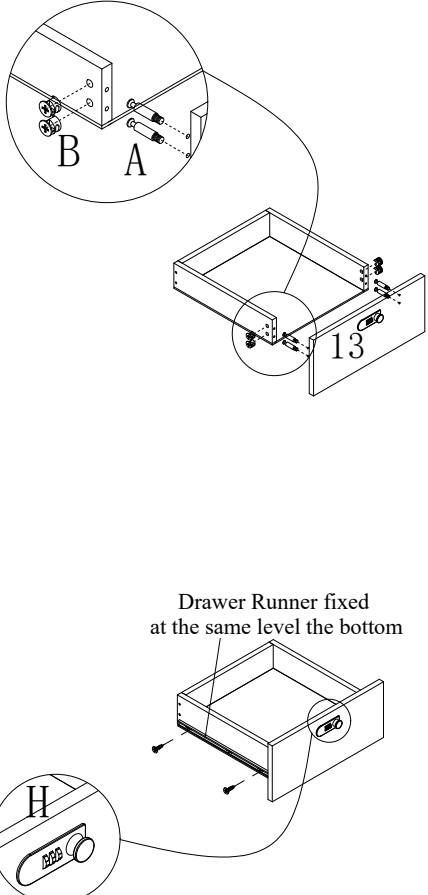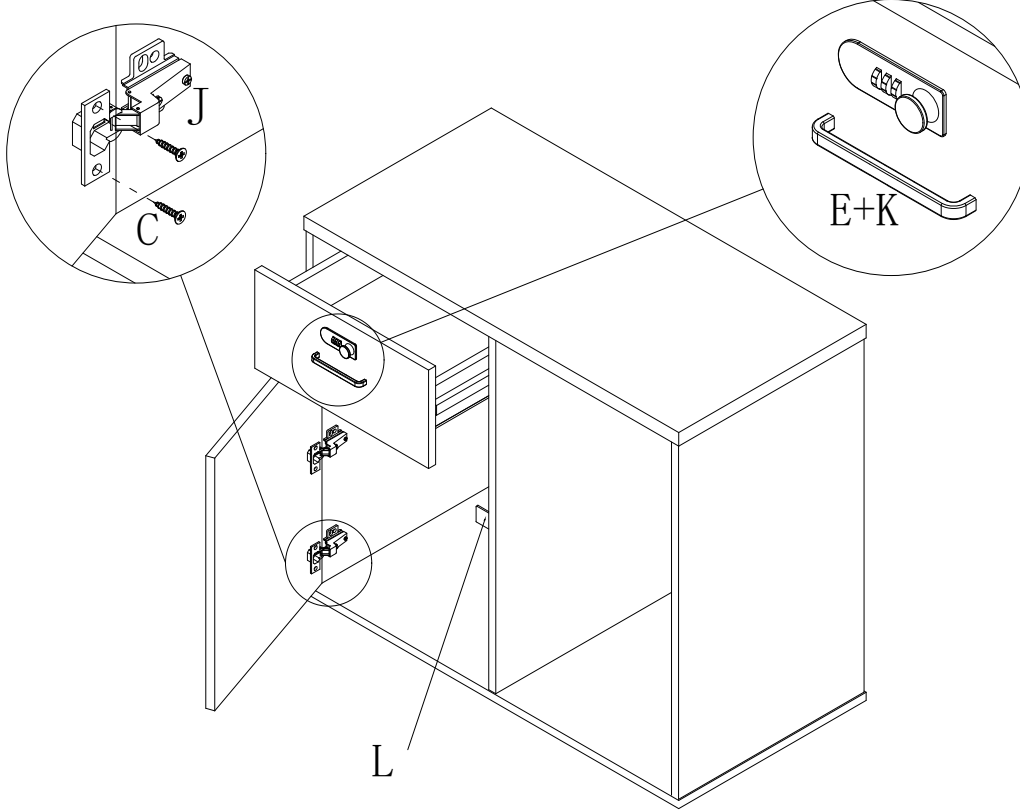
|                                                                                                                |                                                                                                            |                                                                                                                                            |                                                                                                                       |                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Minifix Screw<br><br>X12<br>A | Drawer rail<br><br>X1<br>G | Screw 3. 5*14<br><br>X35<br>C                            | Screw<br><br>X1<br>E               | STEP : 2<br>To fix the top panel 8<br> |
| Minifix<br><br>X12<br>B       | Lock<br><br>X1<br>H       | Screw 3. 5*40<br><br>X4<br>D                             | Whole overlay hinge<br><br>X2<br>J |                                                                                                                           |
| To fix the panel 9,10,11                                                                                       |                                                                                                            |                                                                                                                                            |                                                                                                                       |                                                                                                                           |
| <br>Bottom Panel fixed        |                                                                                                            | <br>Drawer Runner fixed<br>at the same level the bottom |                                                                                                                       |                                                                                                                           |
|                            |                                                                                                            |                                                                                                                                            |                                                                                                                       |                                                                                                                           |

STEP:3

Install casters

FINISH

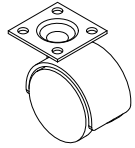

X4

I

Screw

3.5\*14



X16

C

