
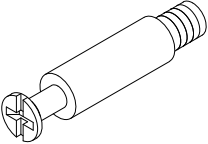
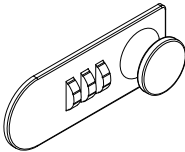
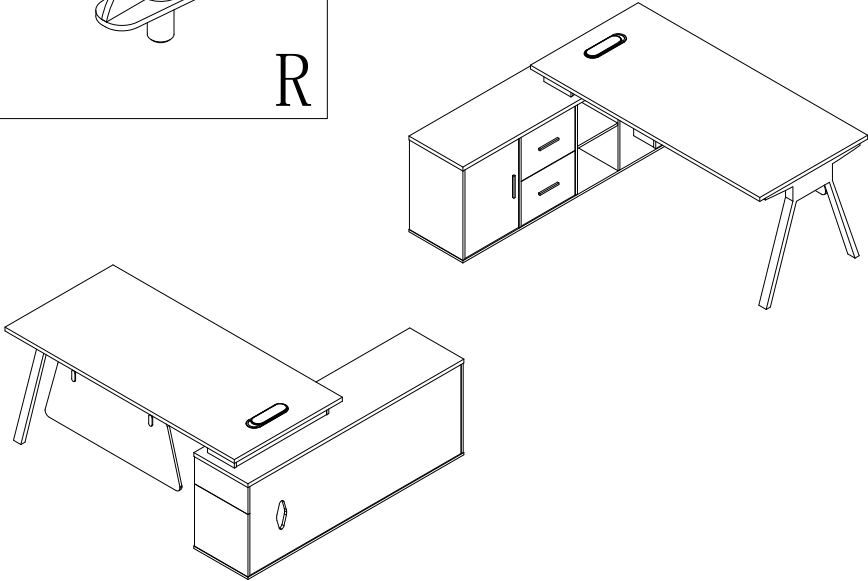
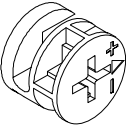



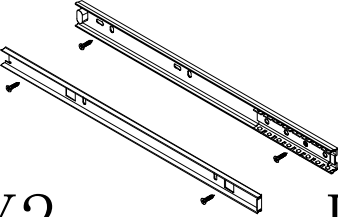

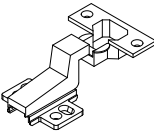


Minifix Screw  X63 A	Lock  X1 F	Screw 3. 5*14  X54 K	Screw 6*35  X4 P	367-000023 
Minifix  X63 B	Handle  X3 G	Screw 3. 5*20  X24 L	junction box  Q	
junction box  X1 C	vent hole  X1 H	Screw 3. 5*40  X8 M	Shelf bracket  R	
Drawer rail  X2 D	Sling code  X2 I	Screw 4*18  X6 N		
Whole overlay hinge  X2 E	support leg  X6 J	Screw 6*15  X4 O		

Minifix Screw

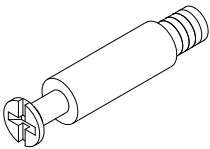


X43

A

X1

M

Minifix

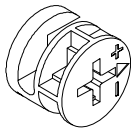


X43

B

X1

H

junction box




vent hole




STEP : 1


To fix the panel 1、2、3、4











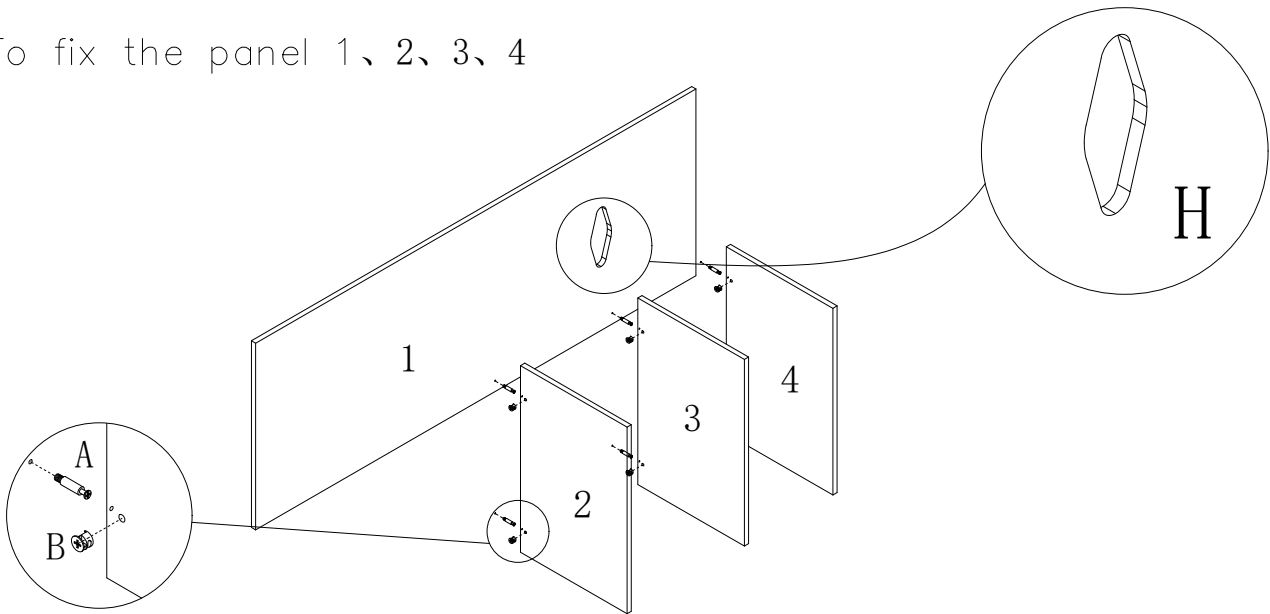





To fix the panel 5 and 6


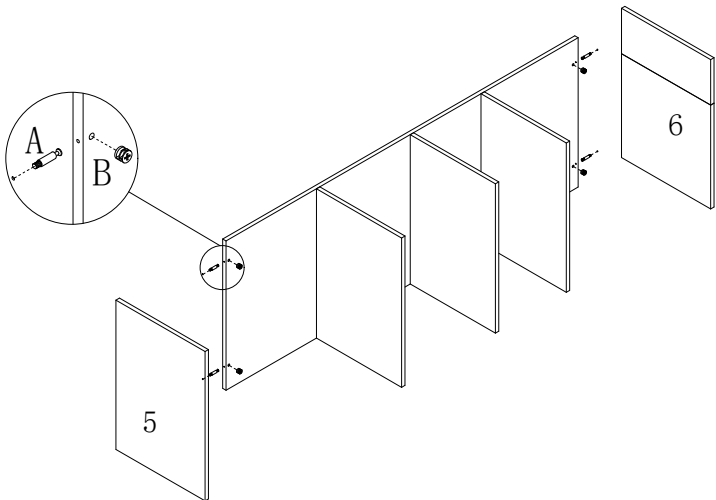


To fix the panel 7、8、9、10

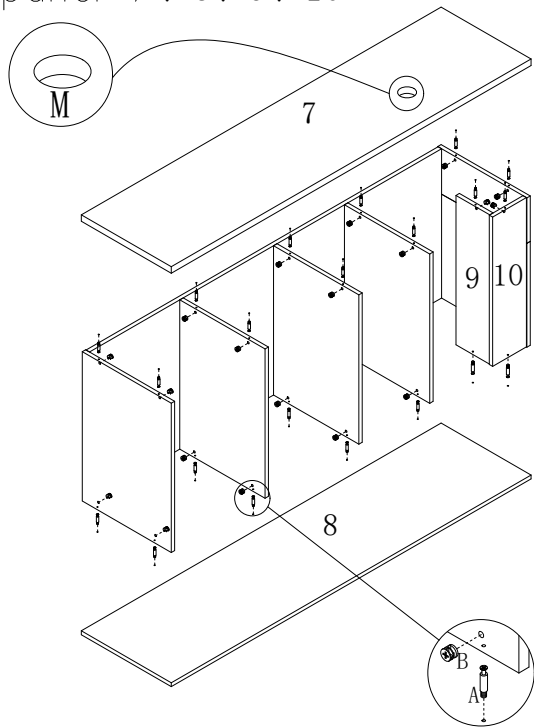

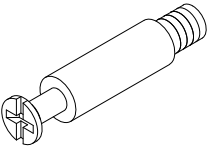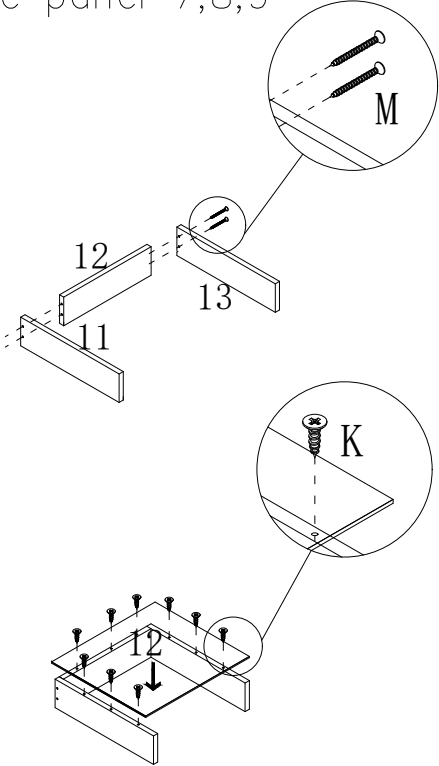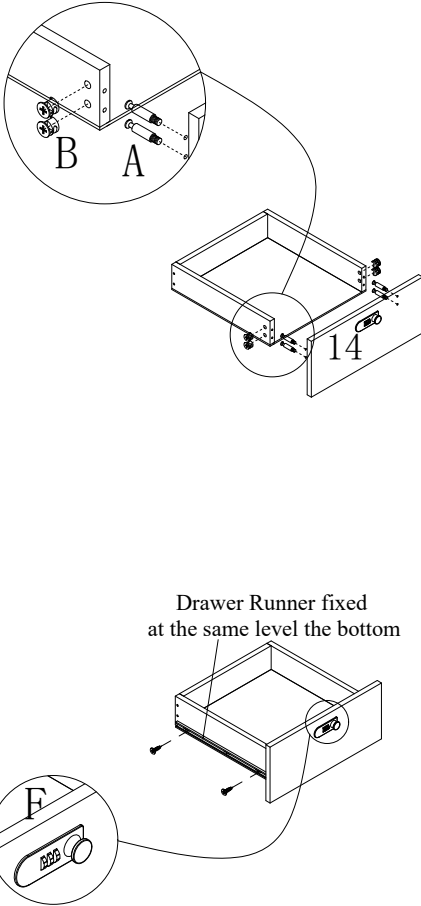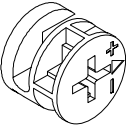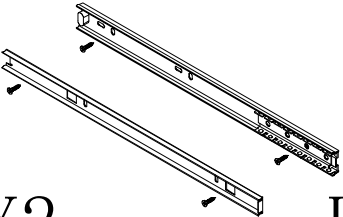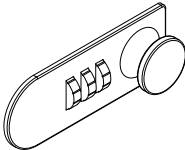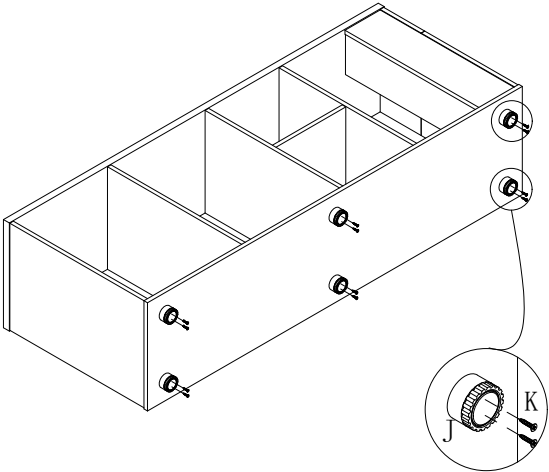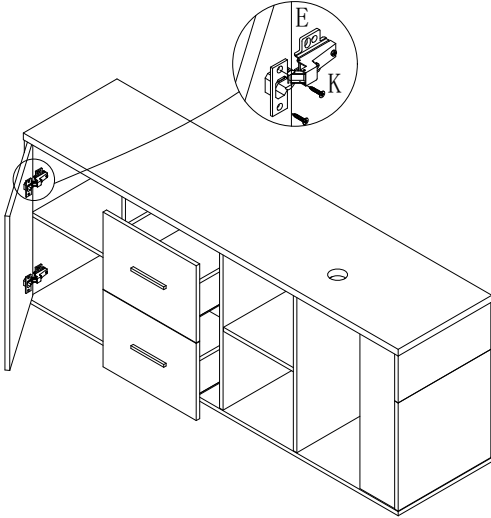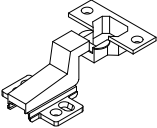Minifix Screw  X8 A	support leg  X6 J	STEP:2 To fix the panel 7,8,9  Bottom Panel fixed		 Drawer Runner fixed at the same level the bottom
Minifix  X8 B	Drawer rail  X2 D			
Screw 3. 5*14  X54 K	Lock  X1 F	Install support feet 		Install doors and drawers 
Screw 3. 5*40  X8 M	Whole overlay hinge  X2 E			
Screw 3. 5*20  X18 L	Shelf bracket  X4 R			

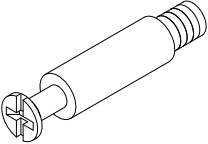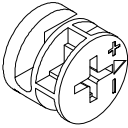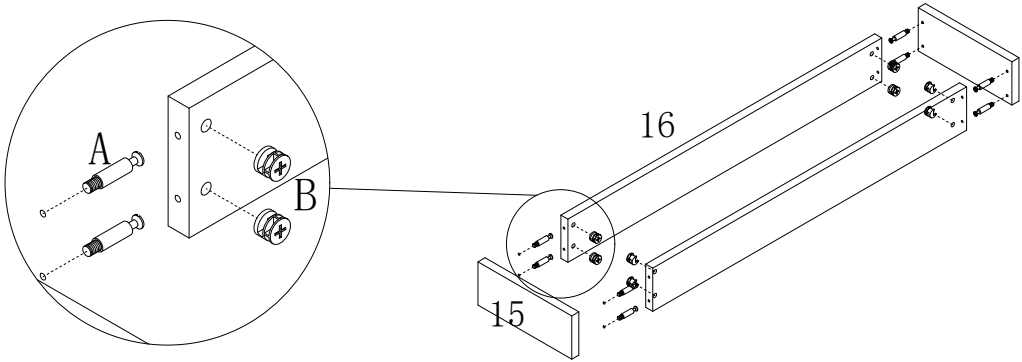Minifix Screw  X8 A	Screw 6*35  X4 P	STEP : 3 To fix the panel 15 and 46
Minifix  X8 B		

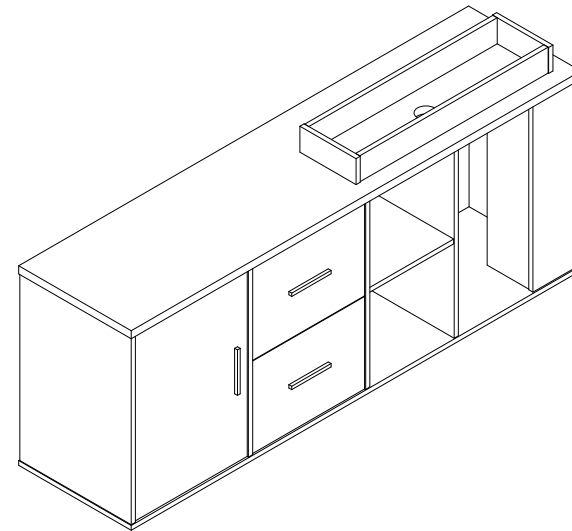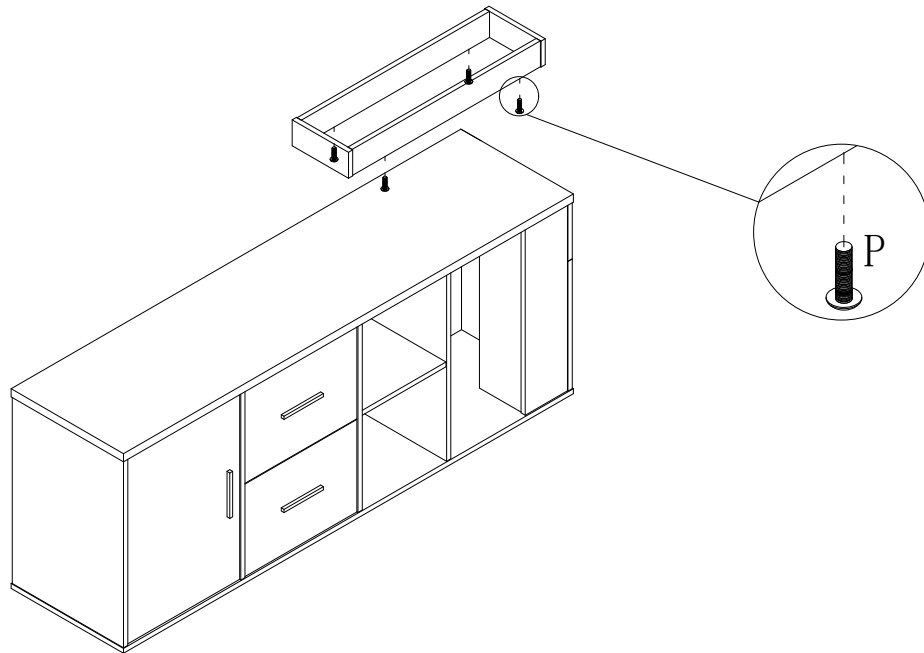

Screw

3. 5*20

Minifix Screw

X8

K

X4

A

junction box

Minifix


Q

X4

B

STEP:4

Install hanging code

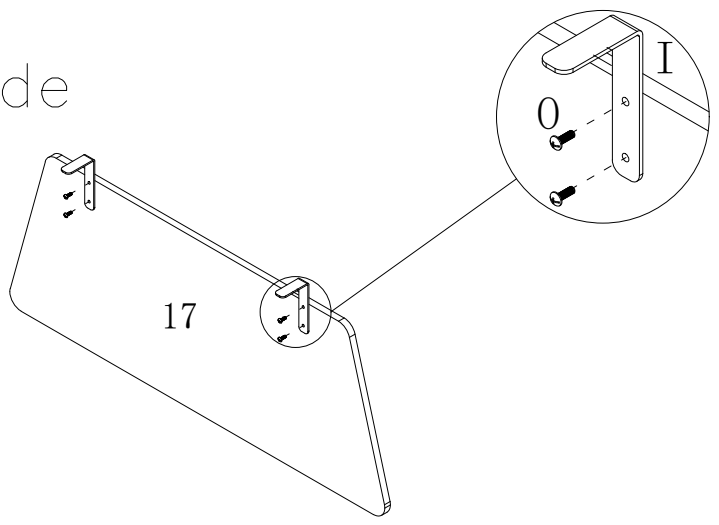

Sling code


X2


M

Screw

6*15

N

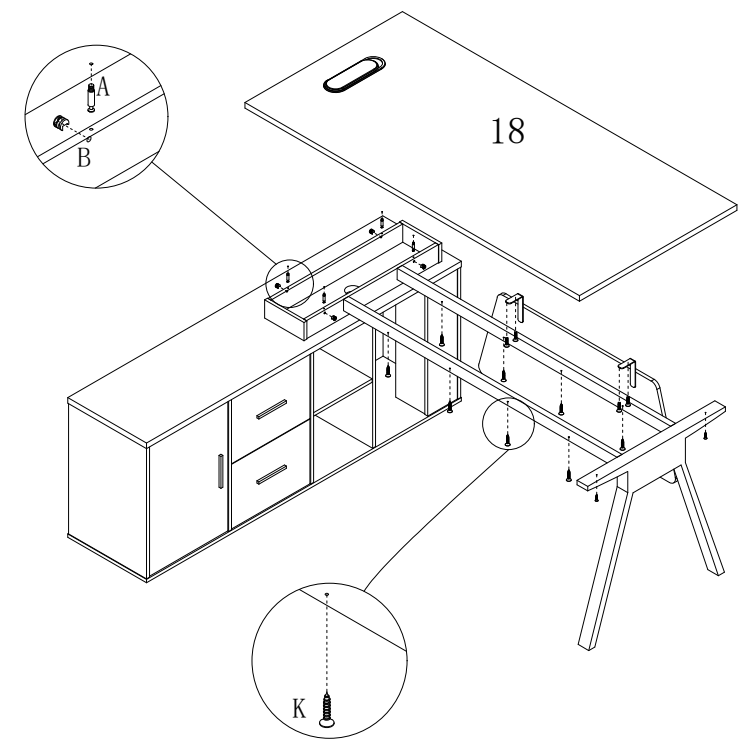

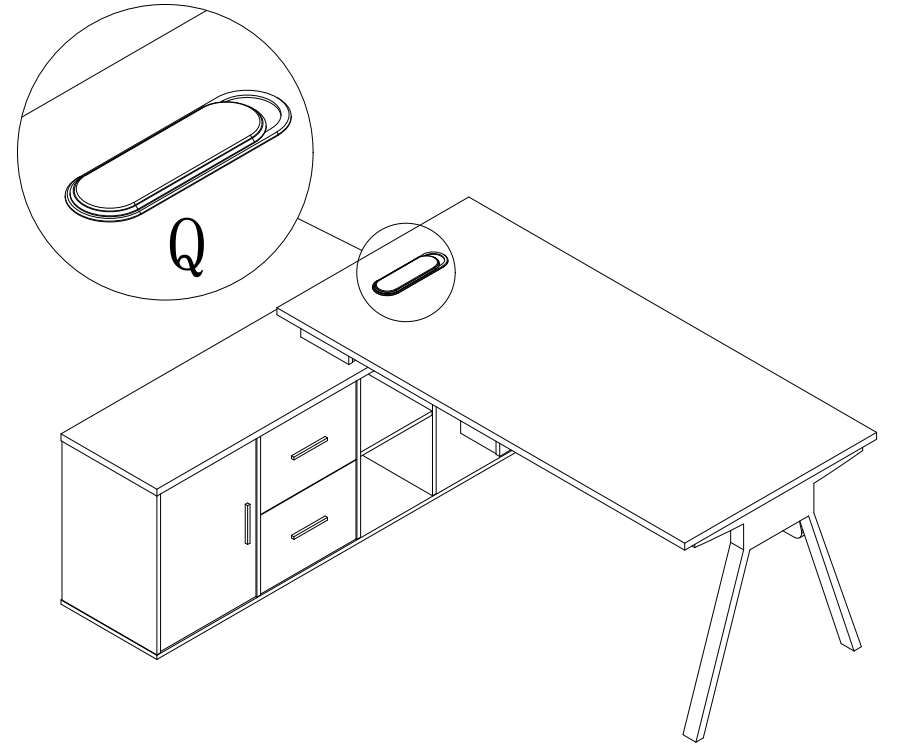

To fix the top panel 18