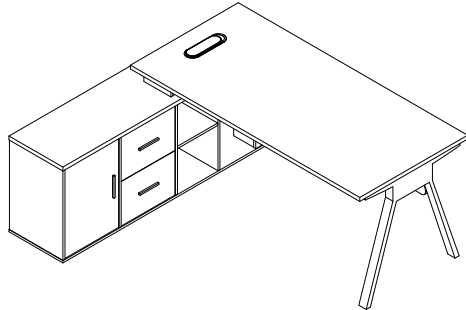
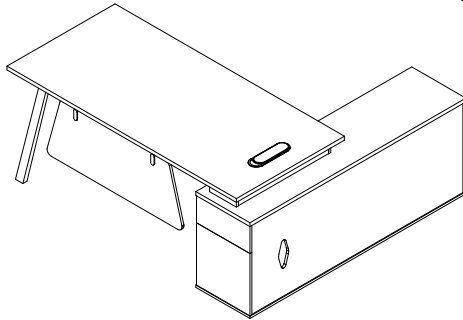
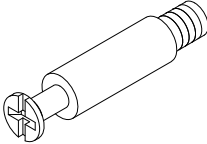
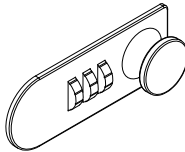
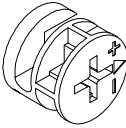


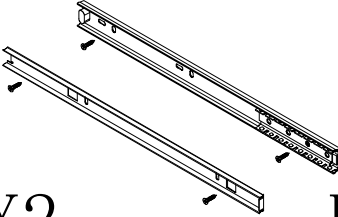

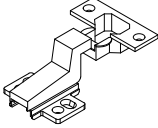
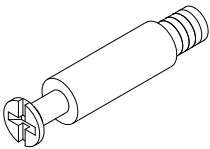


Minifix Screw	Lock	Screw 3. 5*14	Screw 6*35	367-000024  
				
X63 A X1 F	X54 K X4 P			
Minifix	Handle	Screw 3. 5*20	junction box	
				
X63 B X3 G	X24 L Q			
junction box	vent hole	Screw 3. 5*40	Shelf bracket	
				
X1 C X1 H	X8 M R			
Drawer rail	Sling code	Screw 4*18		
				
X2 D X2 I	X6 N			
Whole overlay hinge	support leg	Screw 6*15		
				
X2 E X6 J	X4 O			

Minifix Screw



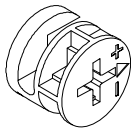
X43

A

X1

M

Minifix




X43

B

X1

H

junction box




vent hole




STEP : 1

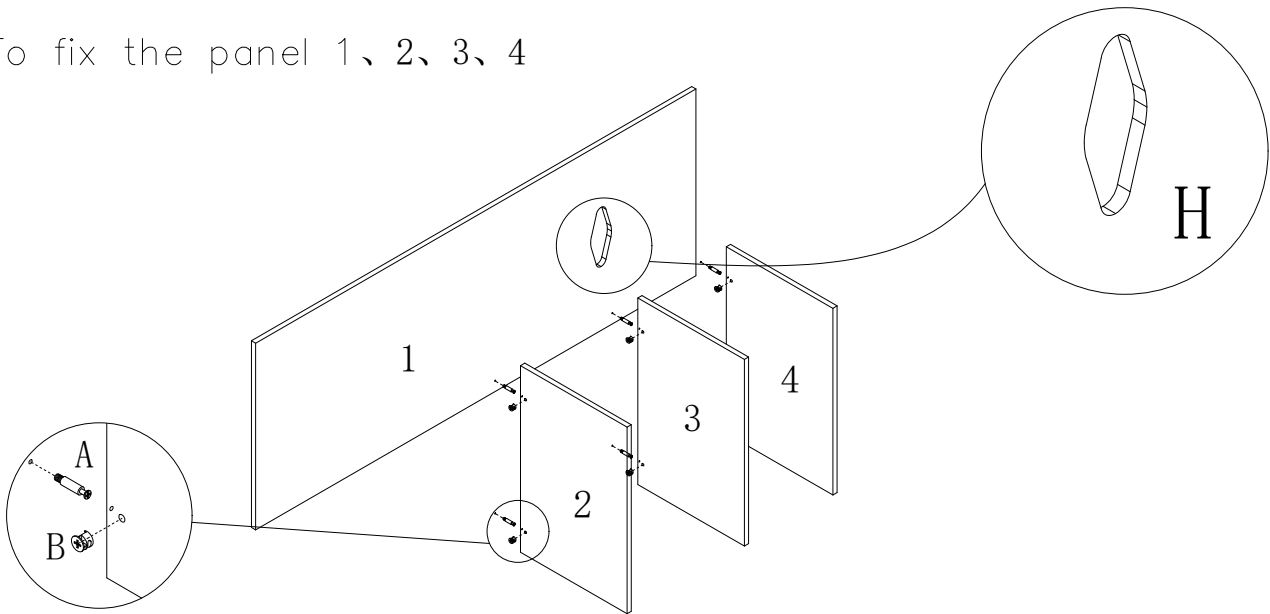
To fix the panel 1、2、3、4
























To fix the panel 5 and 6


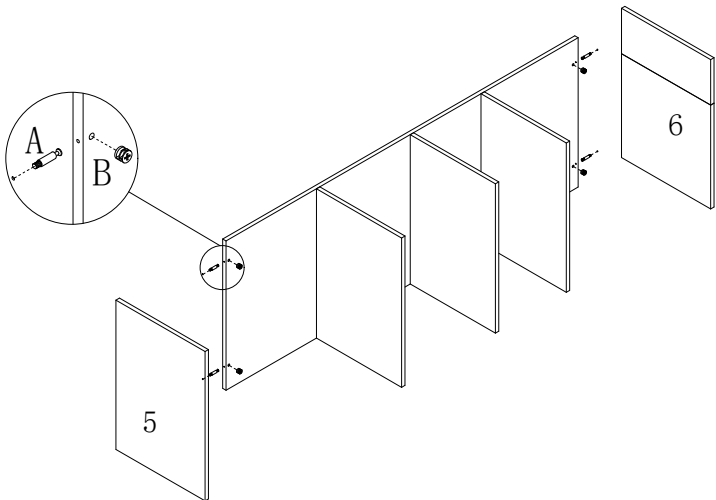


To fix the panel 7、8、9、10

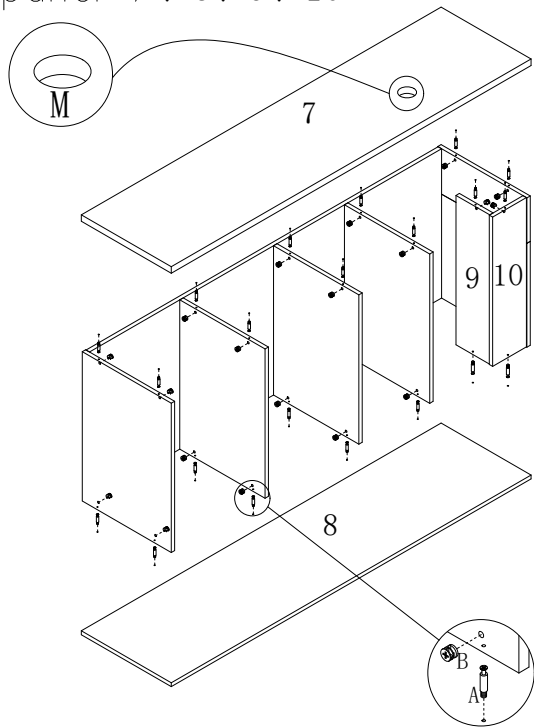

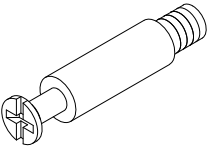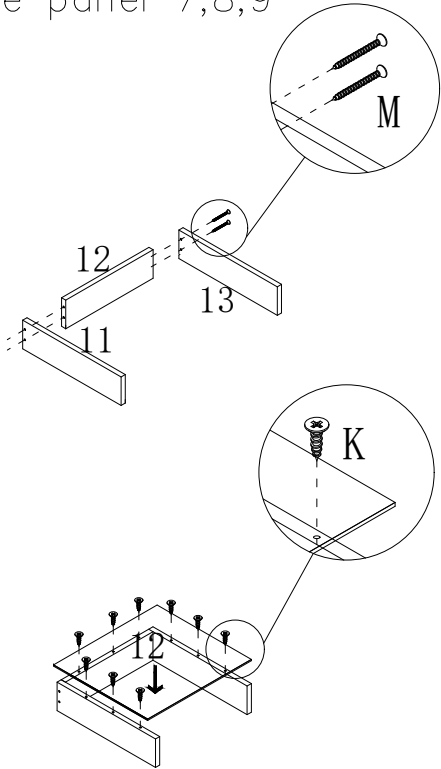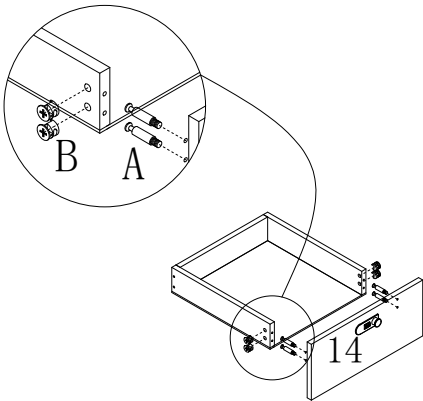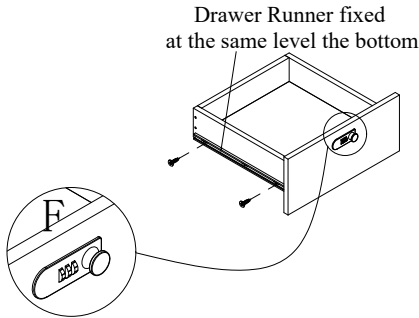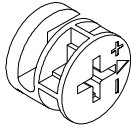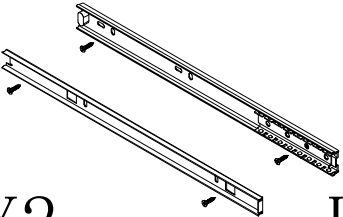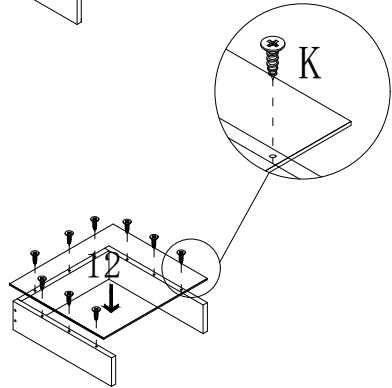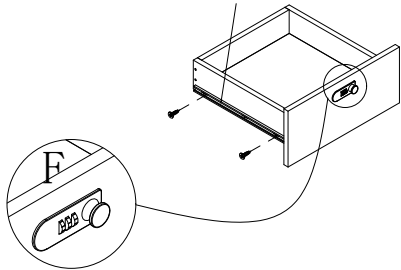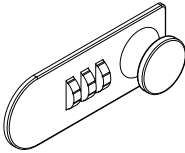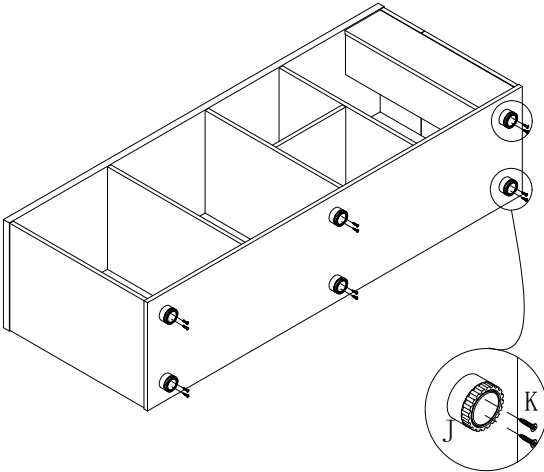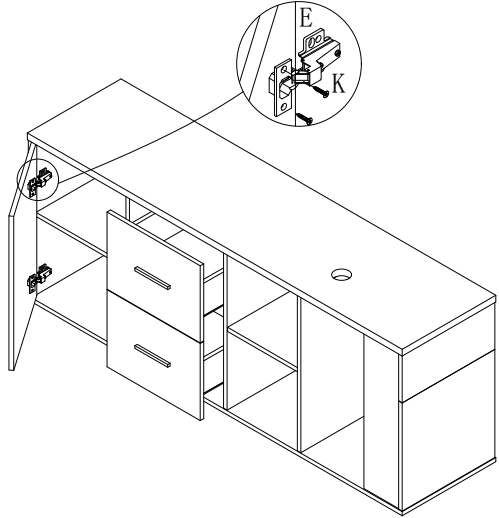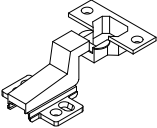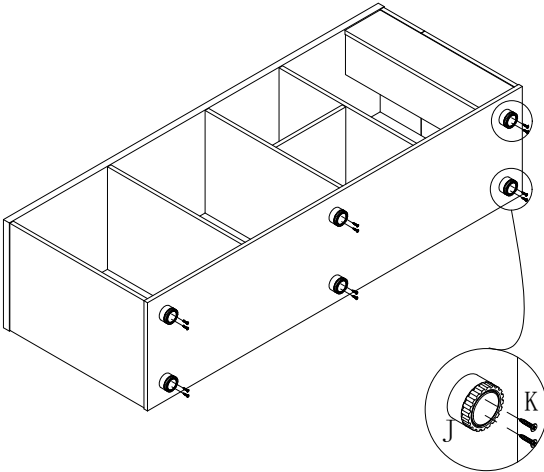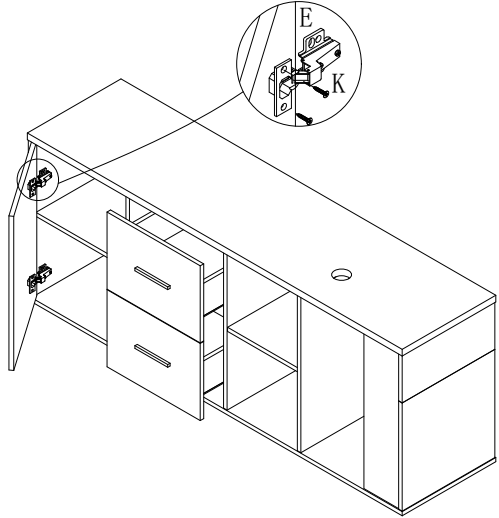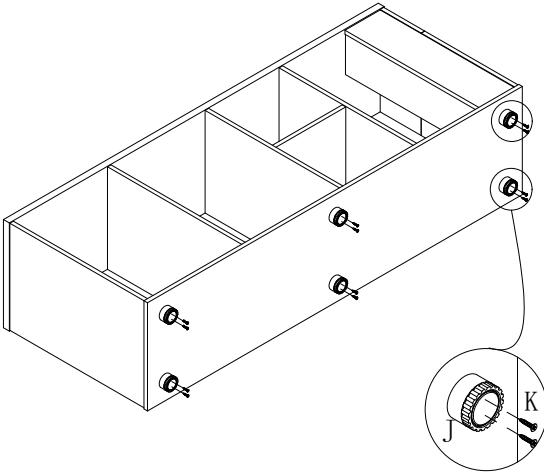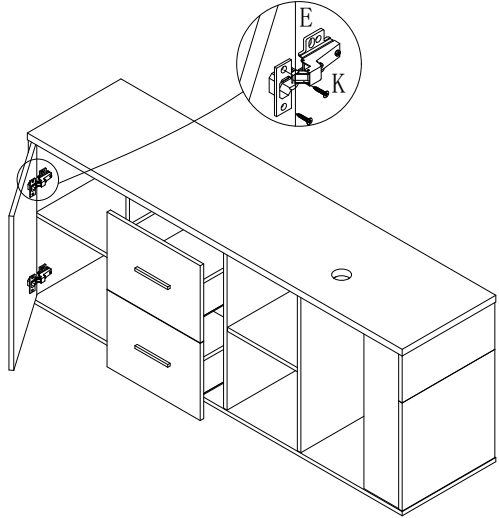Minifix Screw  X8 A	support leg  X6 J	STEP:2 To fix the panel 7,8,9  Bottom Panel fixed		  Drawer Runner fixed at the same level the bottom
Minifix  X8 B	Drawer rail  X2 D	 Bottom Panel fixed		
Screw 3. 5*14  X54 K	Lock  X1 F	Install support feet 		Install doors and drawers 
Screw 3. 5*40  X8 M	Whole overlay hinge  X2 E	Install support feet 		Install doors and drawers 
Screw 3. 5*20  X18 L	Shelf bracket  X4 R	Install support feet 		Install doors and drawers 

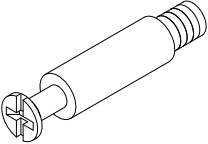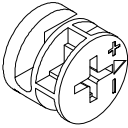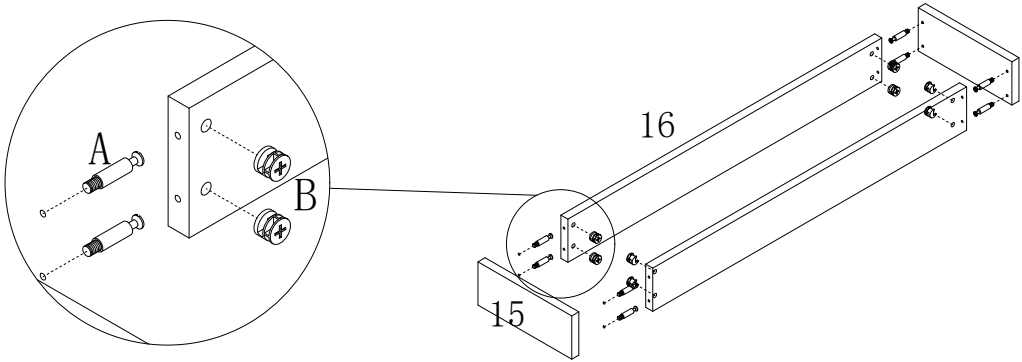Minifix Screw  X8 A	Screw 6*35  X4 P	STEP : 3 To fix the panel 15 and 46
Minifix  X8 B		

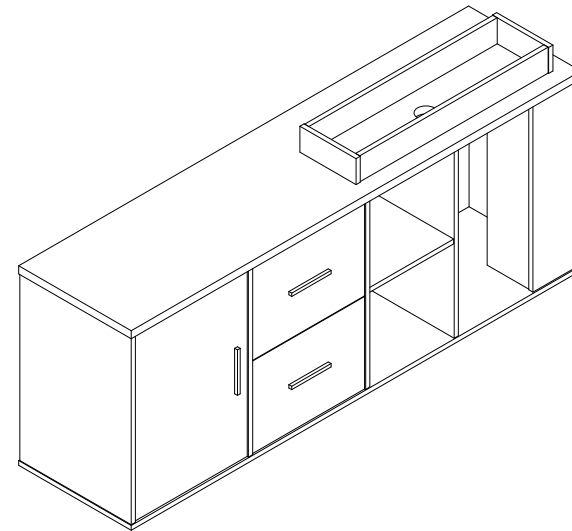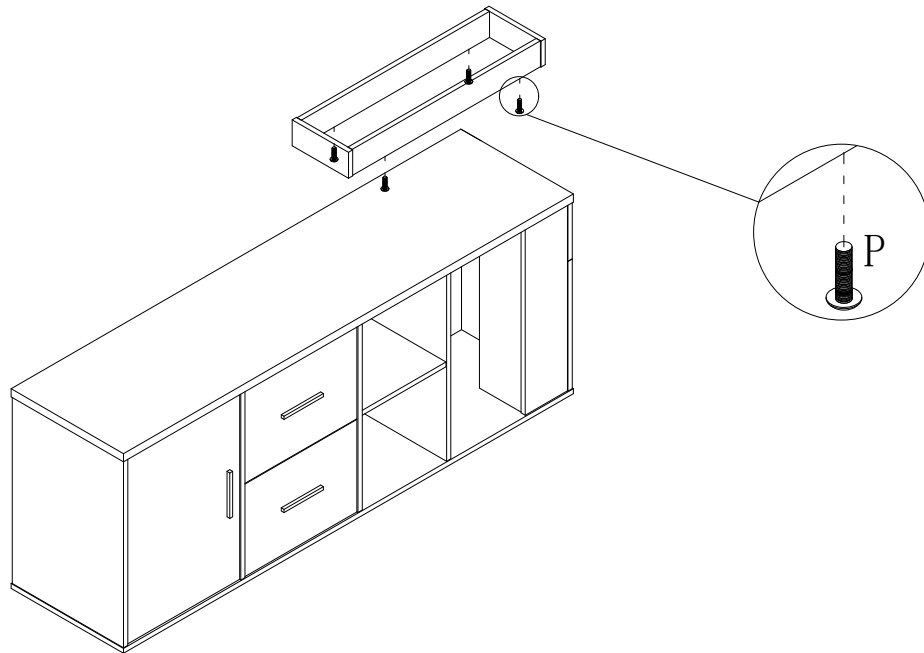

Screw

3. 5*20

Minifix Screw

X8

K

X4

A

junction box

Minifix

Q

X4

B

STEP:4

Install hanging code

17

I

O

Sling code

X2

M

Screw

6*15

N

To fix the top panel 18

A

B

K

Q

Q