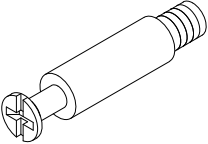
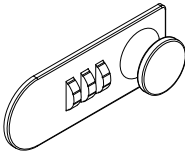
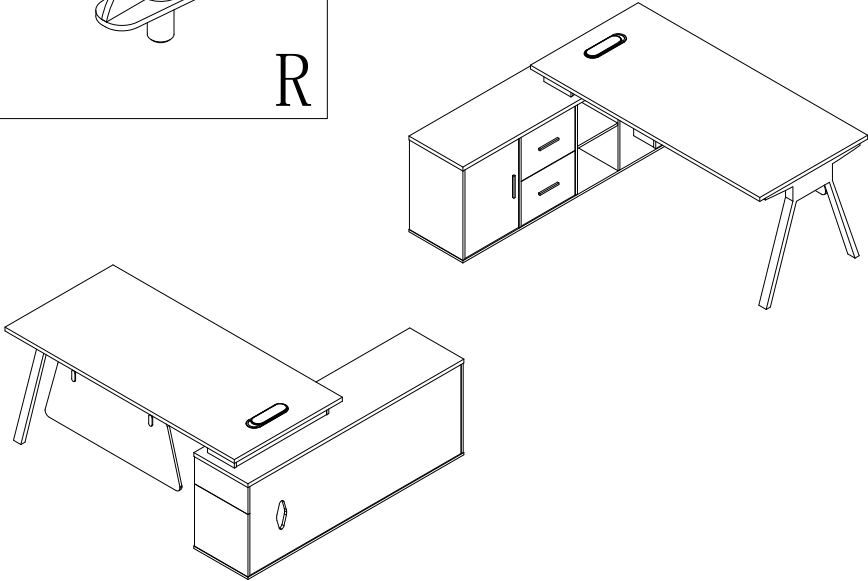
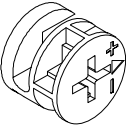


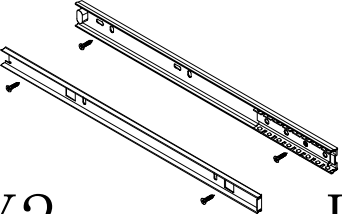

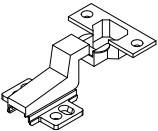
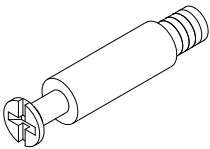


Minifix Screw 	Lock 	Screw 3. 5*14 	Screw 6*35 	367-000025 
X63 A X1 F X54 K X4 P	Minifix 	Handle 	Screw 3. 5*20 	
X63 B X3 G X24 L Q	junction box 	vent hole 	Screw 3. 5*40 	
X1 C X1 H X8 M R	Drawer rail 	Sling code 	Screw 4*18 	
X2 D X2 I X6 N	Whole overlay hinge 	support leg 	Screw 6*15 	
X2 E X6 J X4 O				

Minifix Screw



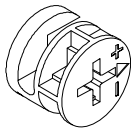
X43

A

X1

M

Minifix




X43

B

X1

H

junction box




vent hole




STEP : 1

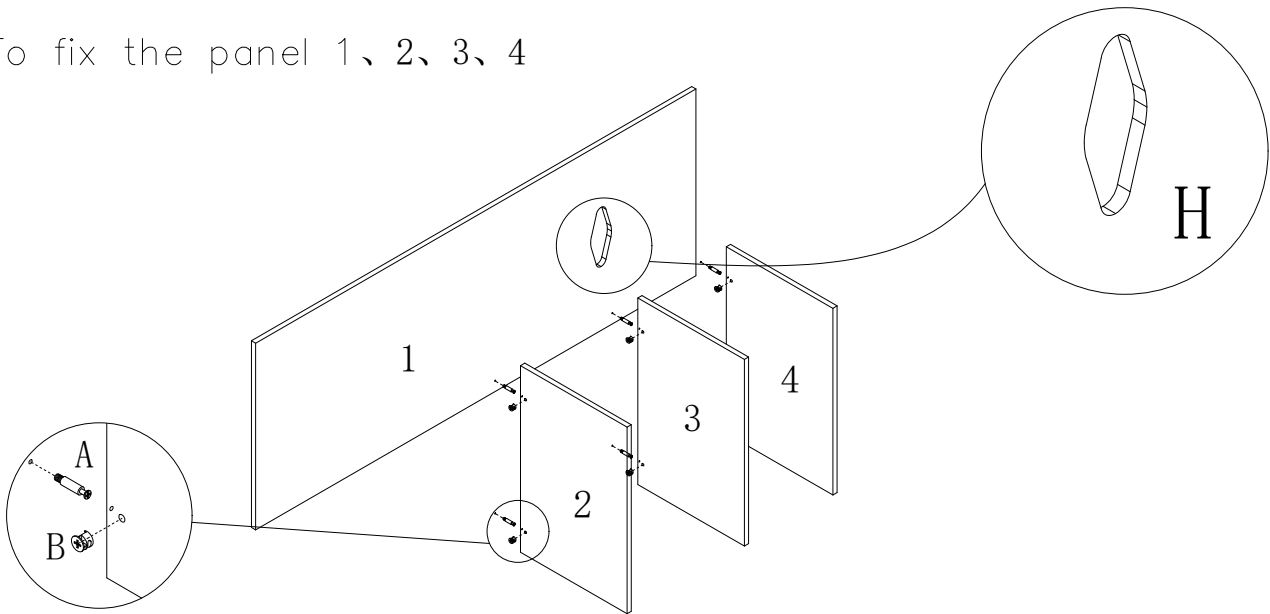
To fix the panel 1、2、3、4






















To fix the panel 5 and 6


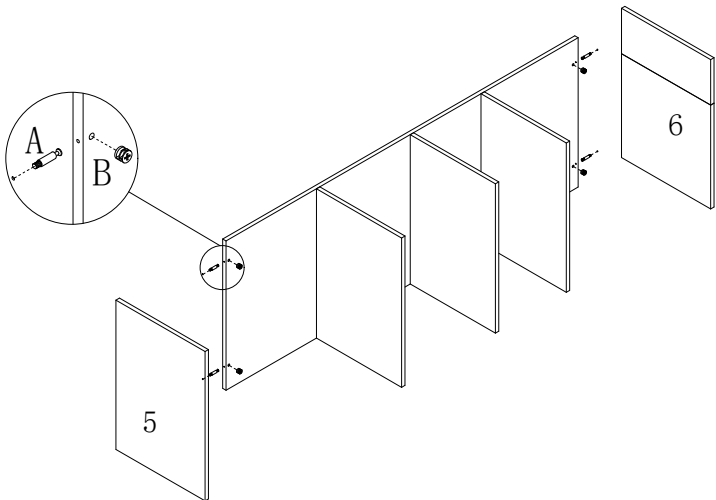


To fix the panel 7、8、9、10

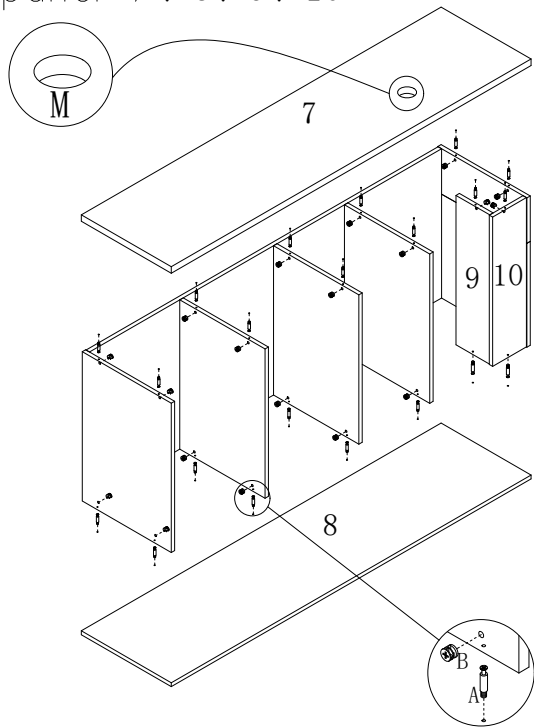

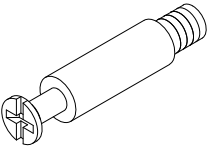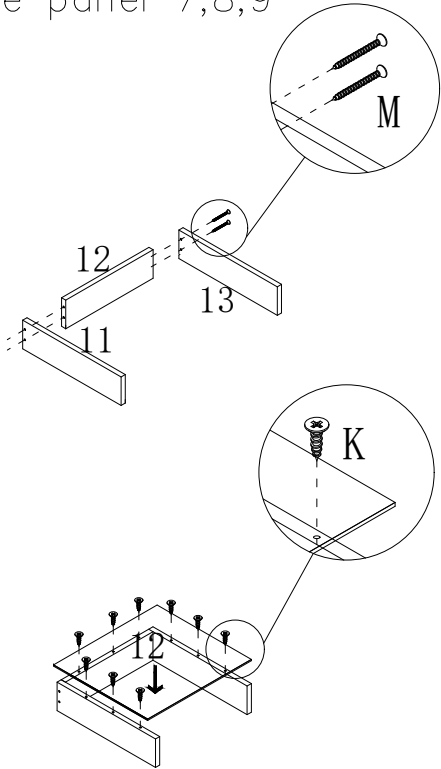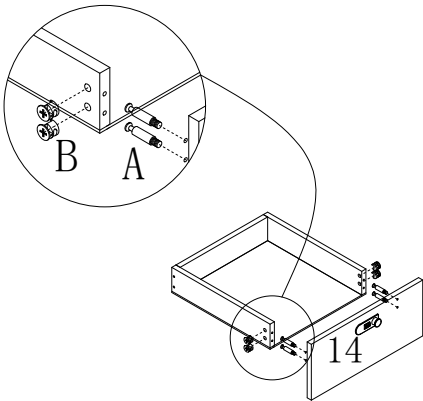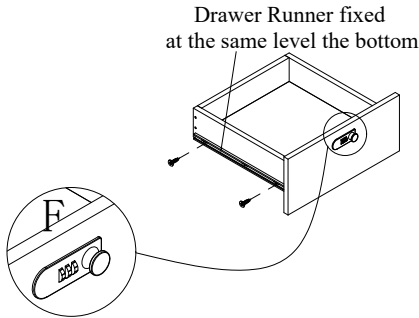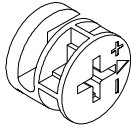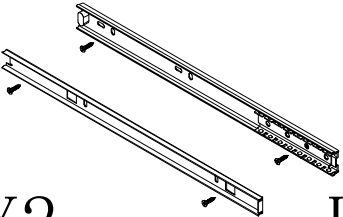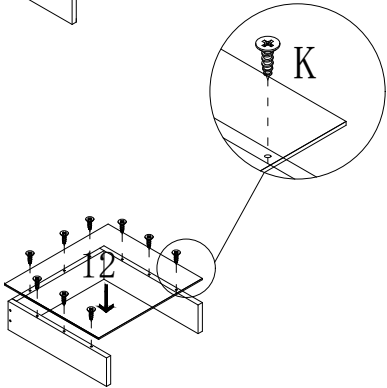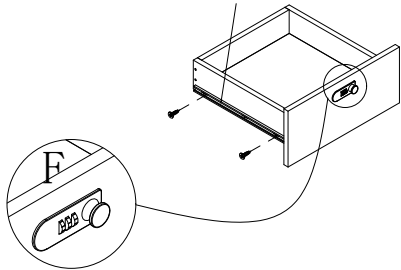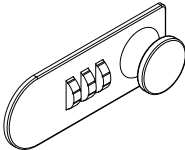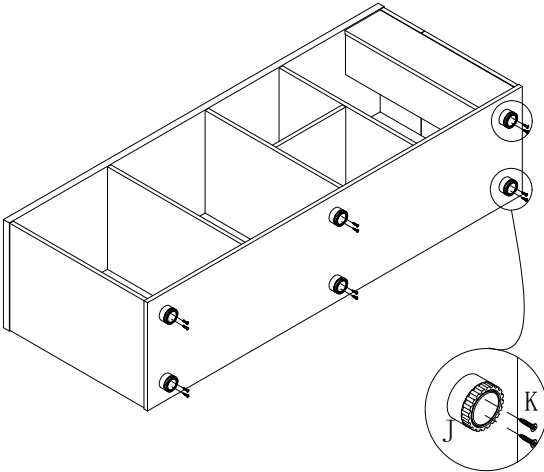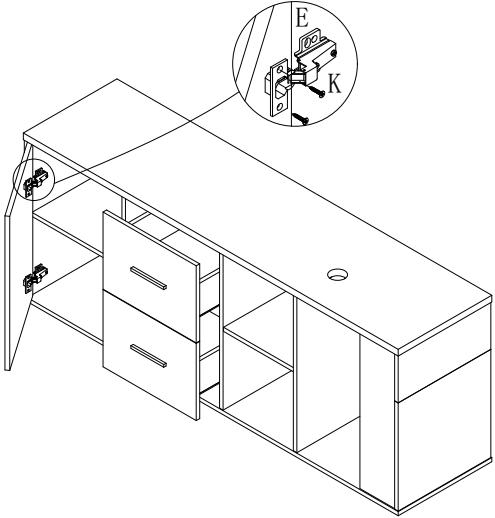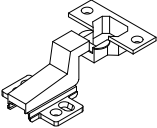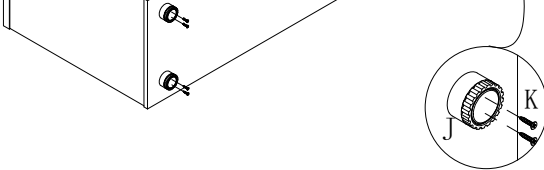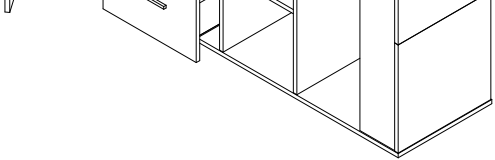Minifix Screw  X8 A	support leg  X6 J	STEP:2 To fix the panel 7,8,9  Bottom Panel fixed		  Drawer Runner fixed at the same level the bottom
Minifix  X8 B	Drawer rail  X2 D	 Bottom Panel fixed		
Screw 3. 5*14  X54 K	Lock  X1 F	Install support feet 		Install doors and drawers 
Screw 3. 5*40  X8 M	Whole overlay hinge  X2 E			
Screw 3. 5*20  X18 L	Shelf bracket  X4 R			

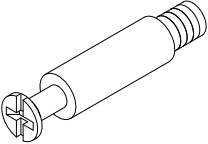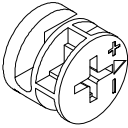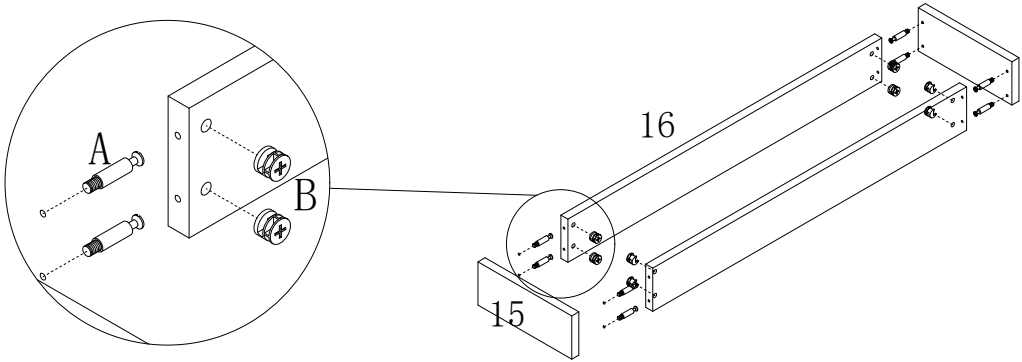Minifix Screw  X8 A	Screw 6*35  X4 P	STEP : 3 To fix the panel 15 and 46
Minifix  X8 B		

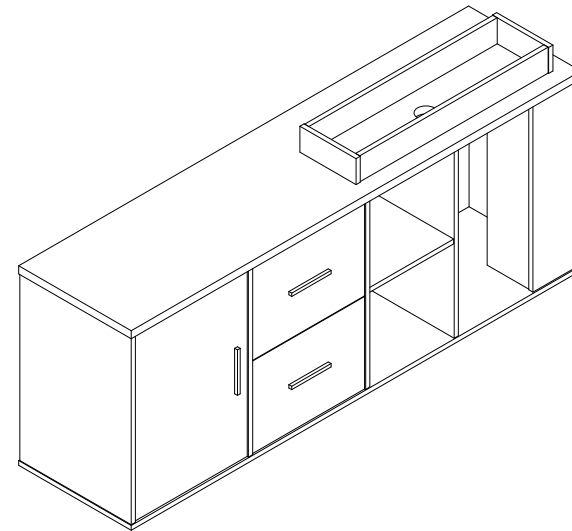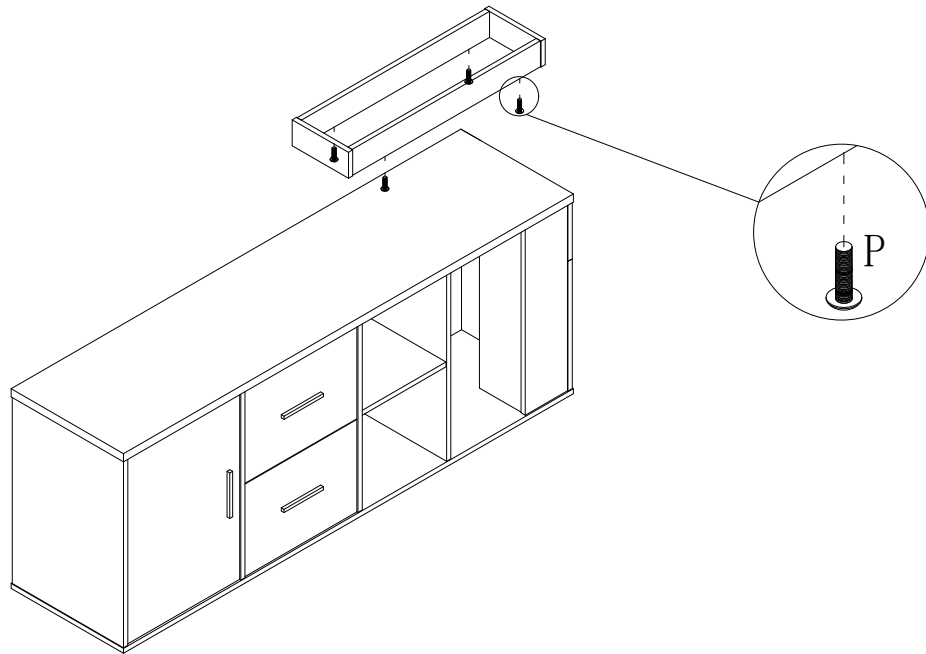

Screw

3. 5*20

Minifix Screw

X8

K

X4

A

junction box

Minifix

Q

X4

B

STEP:4

Install hanging code

17

I

O

Sling code

X2

M

Screw

6*15

N

To fix the top panel 18

A

B

K

Q