
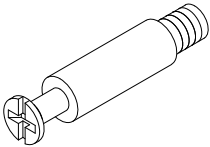
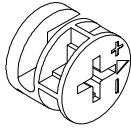
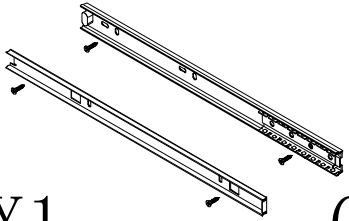

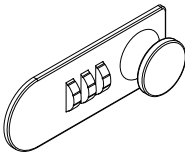


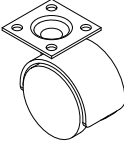

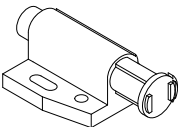
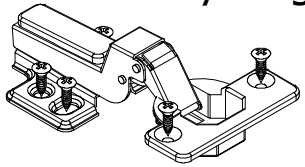
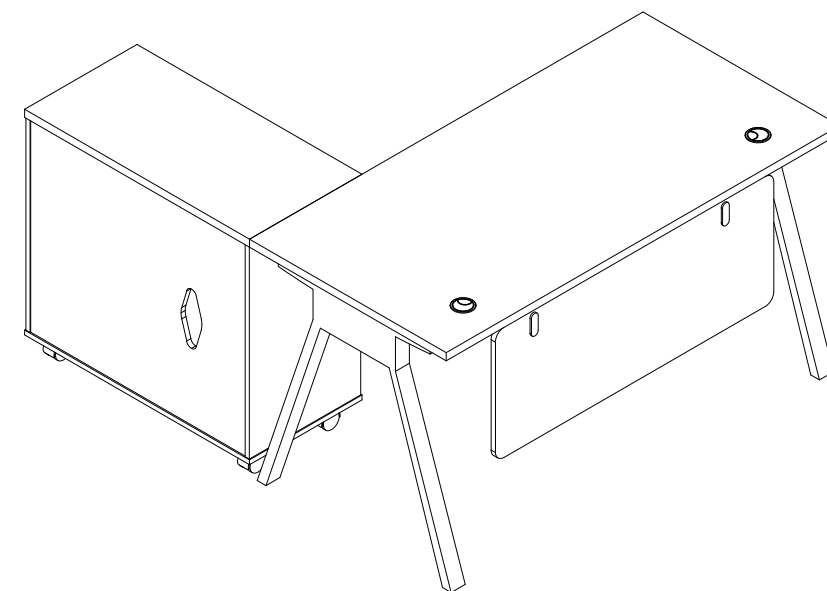
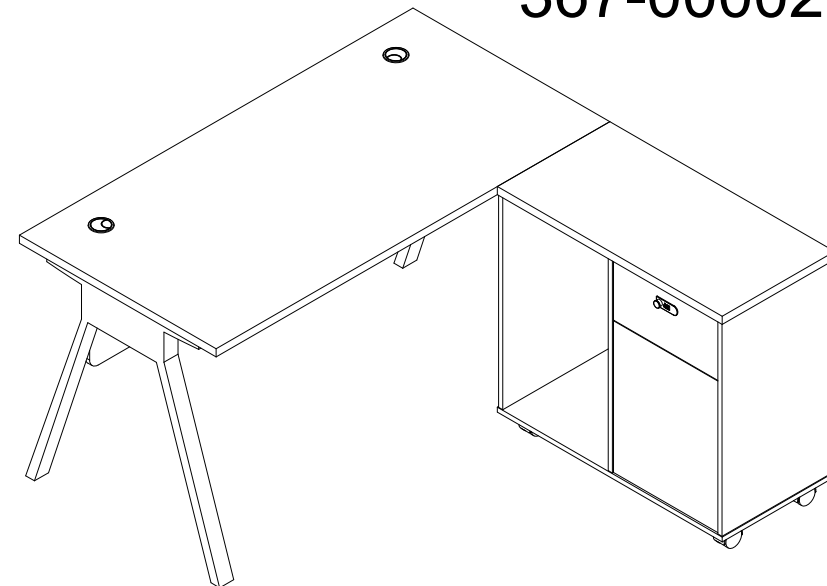
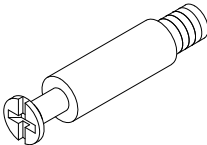
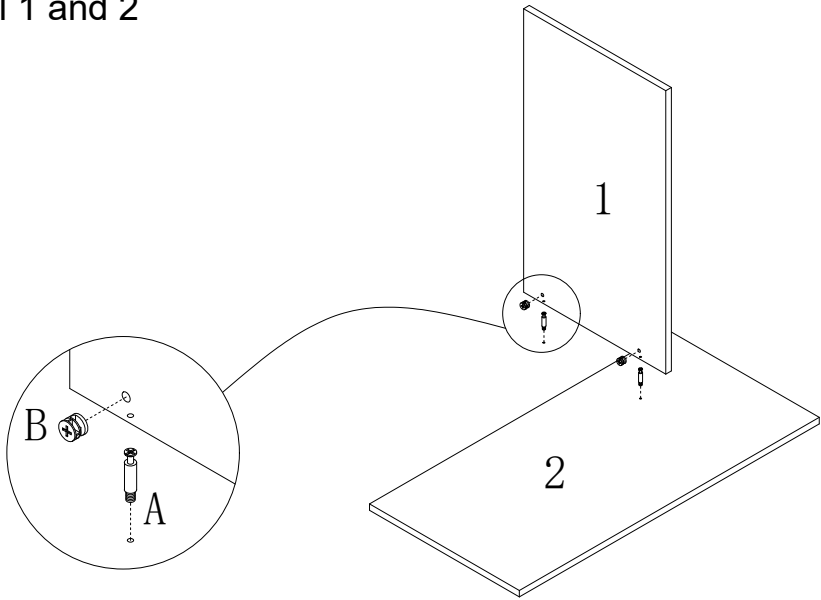
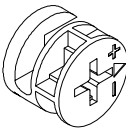
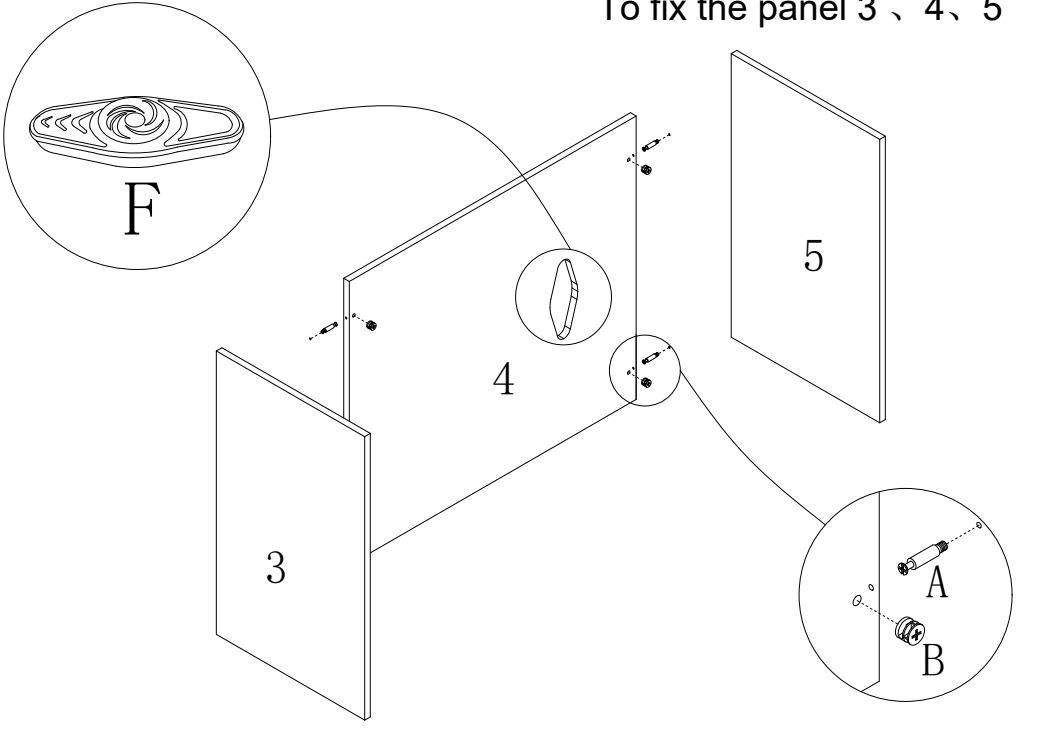













Minifix Screw  X24 A	vent hole  X1 F	Screw 3.5*20  X10 K
Minifix  X24 B	Drawer rail  X1 G	junction box  X2 L
Screw 3.5*14  X51 C	Lock  X1 H	Sling code  X2 M
Screw 3.5*40  X4 D	 X4 I	Screw 6*15  X4 N
Rebounder  X1 E	Whole overlay hinge  X2 J	

367-000026

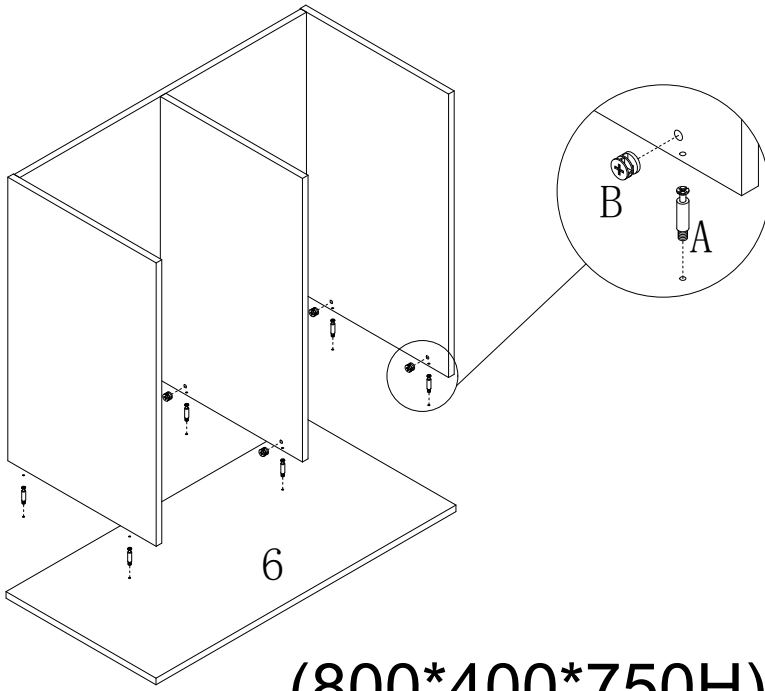


(1400*700*750H)

Minifix Screw  X12 A	vent hole  X1 F	STEP : 1 To fix the panel 1 and 2 	
Minifix  X14 B			
To fix the panel 3 、 4、 5 			To fix the panel 6  (800*400*750H)

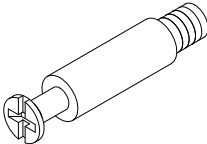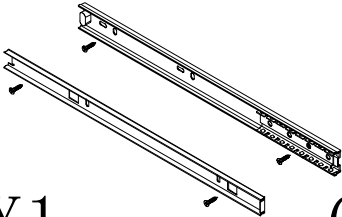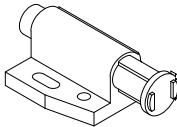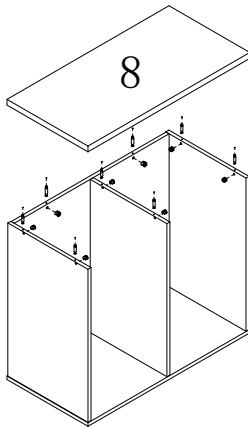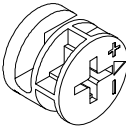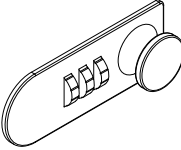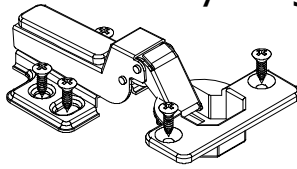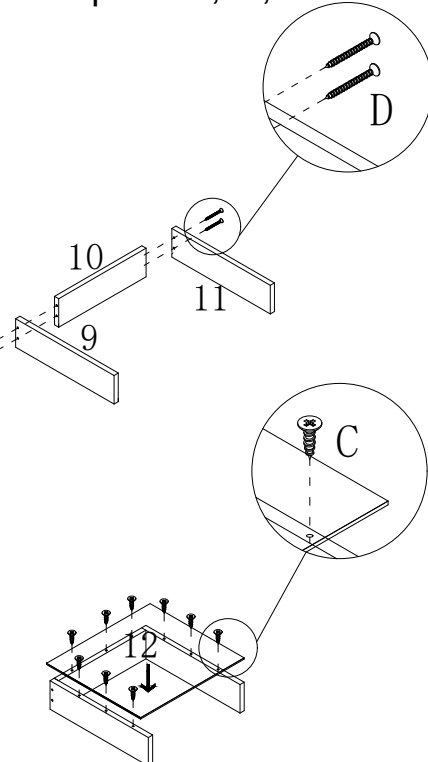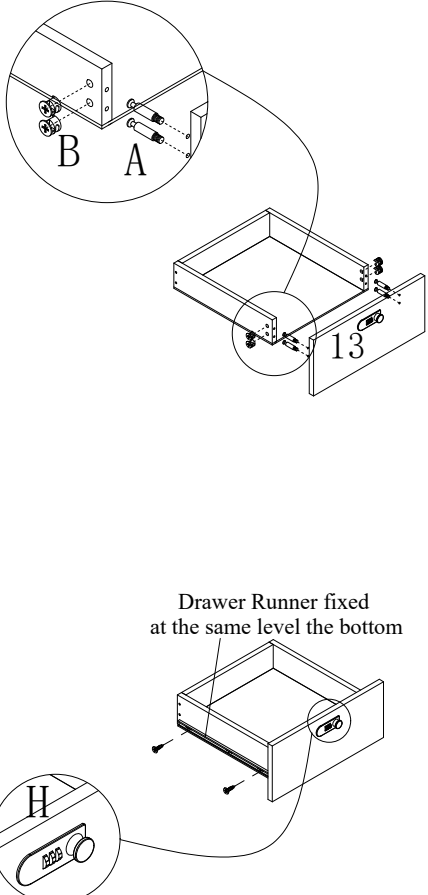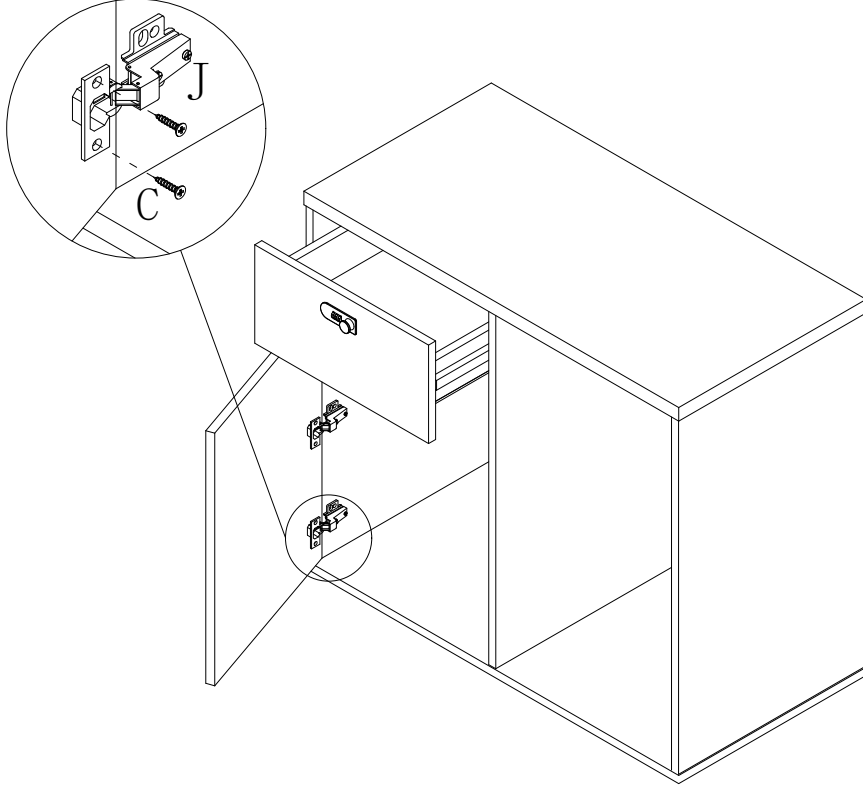Minifix Screw  X12 A	Drawer rail  X1 G	Screw 3. 5*14  X35 C	Screw  X1 E	STEP : 2 To fix the top panel 8 
Minifix  X12 B	Lock  X1 H	Screw 3. 5*40  X4 D	Whole overlay hinge  X2 J	
To fix the panel 9,10,11				
 Bottom Panel fixed		 Drawer Runner fixed at the same level the bottom		
				

STEP:3



Install casters

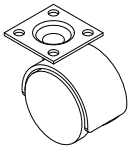

X4	I
Screw	3.5*14



X16	C
-----	---

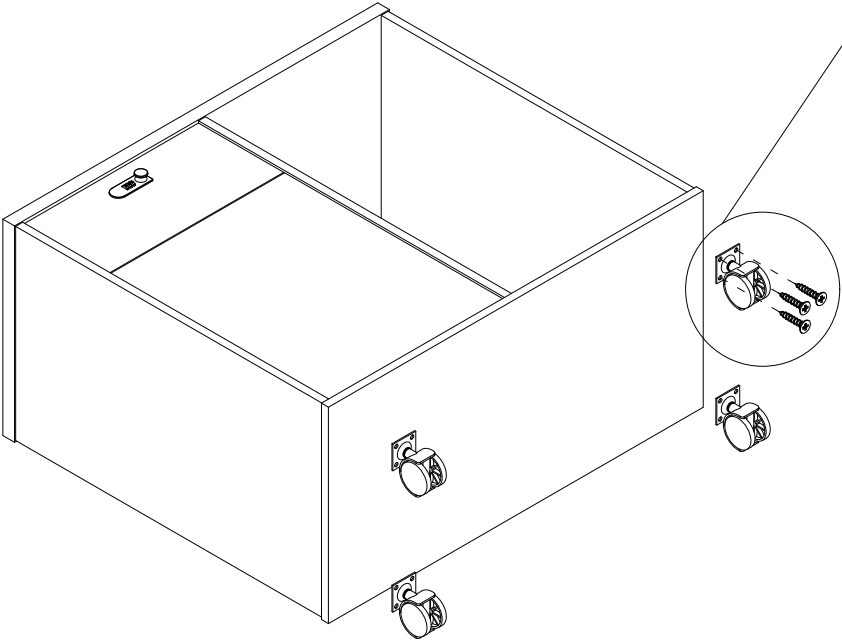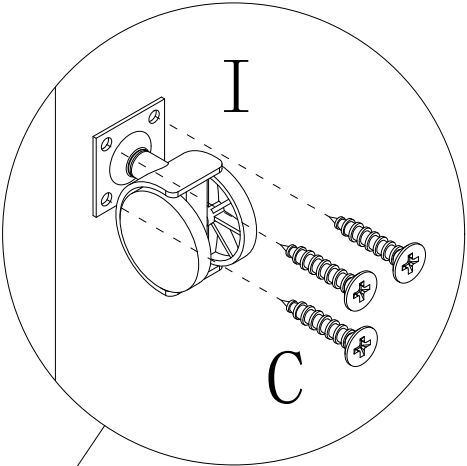

Screw 3. 5*20

STEP:4

Install hanging code

X10 K

junction box




X2 L

Sling code

X2 M

Screw 6*15

X4 N

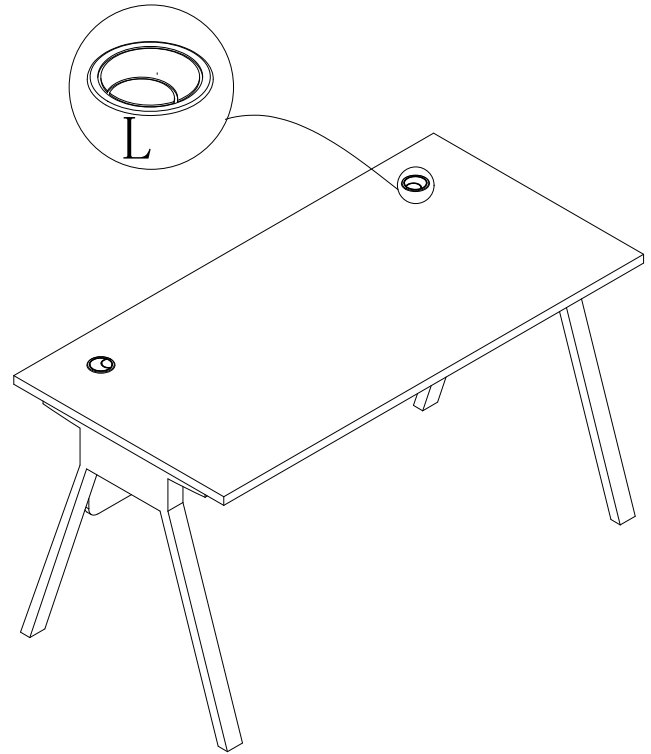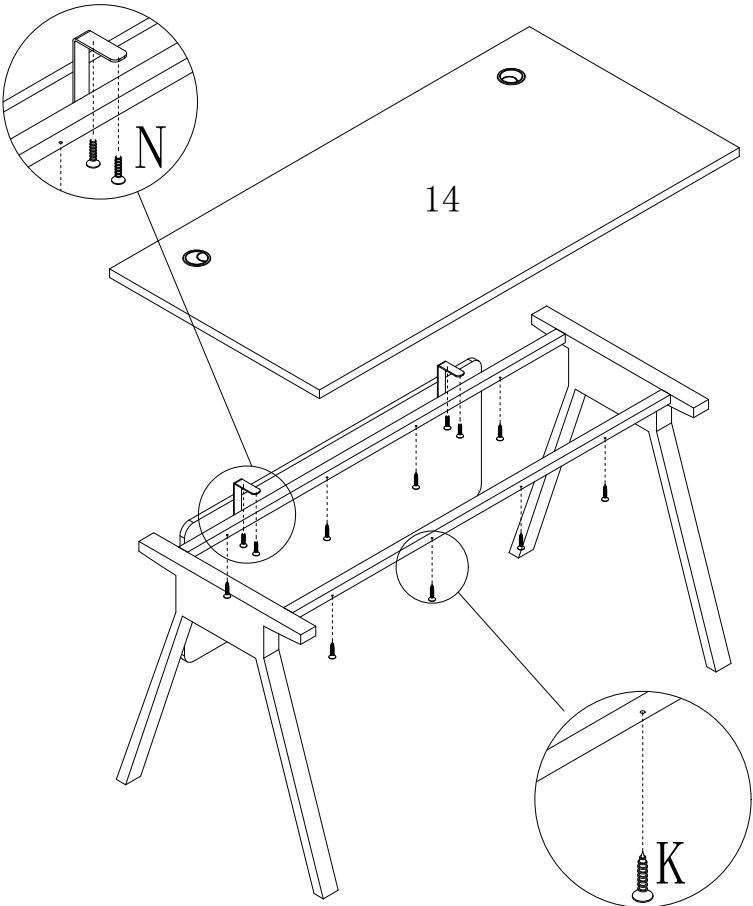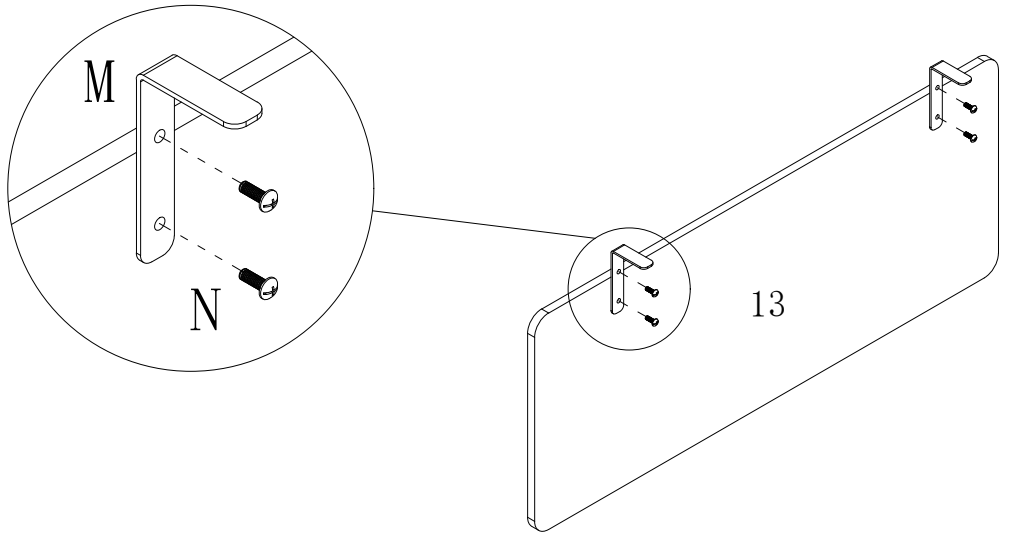

To fix the top panel 14

STEP:4

FINISH

