
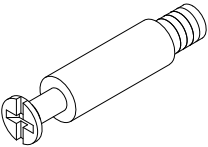
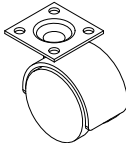
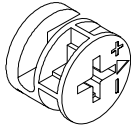
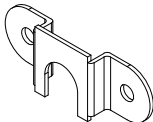
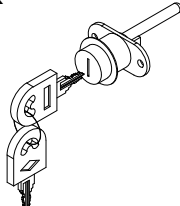

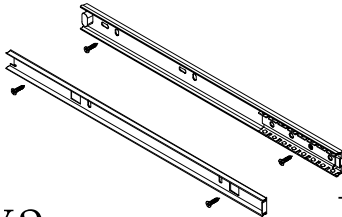

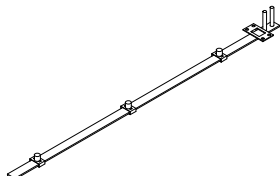
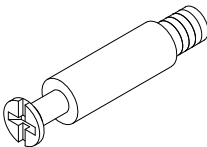
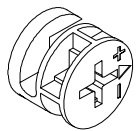
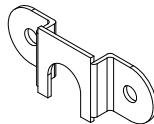
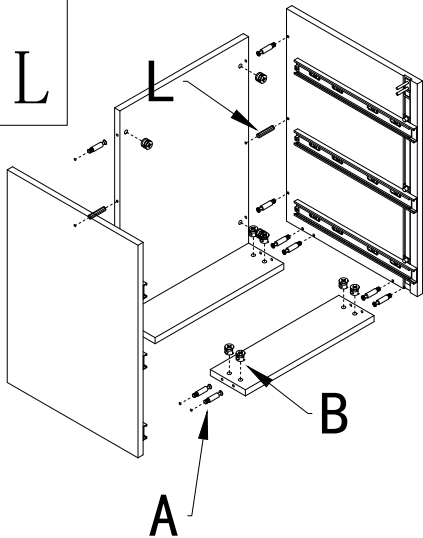
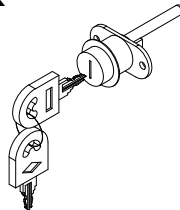

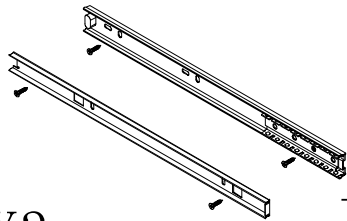

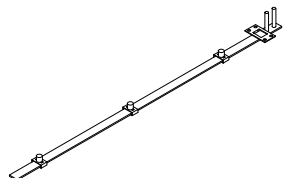


367-000031

Minifix Screw  X28 A	Door handle 128V  X3 F	Caster  X4 K
Minifix  X28 B	Buckle  X3 G	Wooden tenon  X2 L
Screw 3.5*14  X95 C	Lock  X1 H	
Screw 3.5*40  X12 D	Drawer rail  X3 I	
Screw 4*18  X6 E	Lock bar 500MM  X1 J	

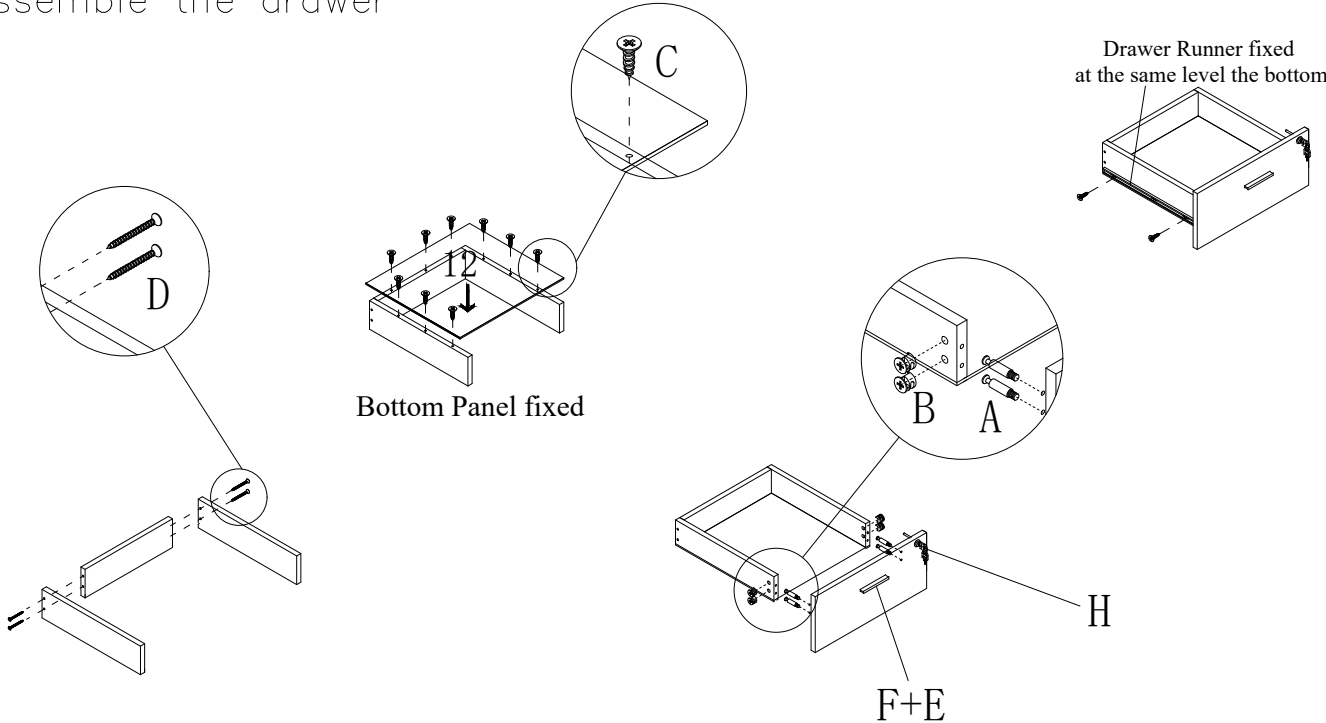

Minifix Screw  X28 A	Door handle 128V  X3 F	Wooden tenon  X2 L	STEP : 1	
Minifix  X28 B	Buckle  X2 G			
Screw 3. 5*14  X95 C	Lock  X1 H			
Screw 3. 5*40  X12 D	Drawer rail  X3 I	Assemble the drawer		
Screw 4*18  X6 E	Lock bar 500MM  X1 J			

Screw 3.5*14


STEP:2

Install the drawer




X95

C

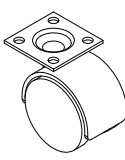



X1

K

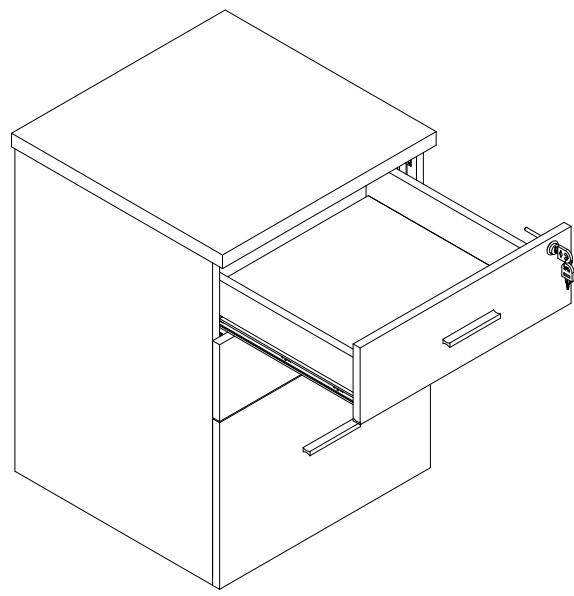

Install casters

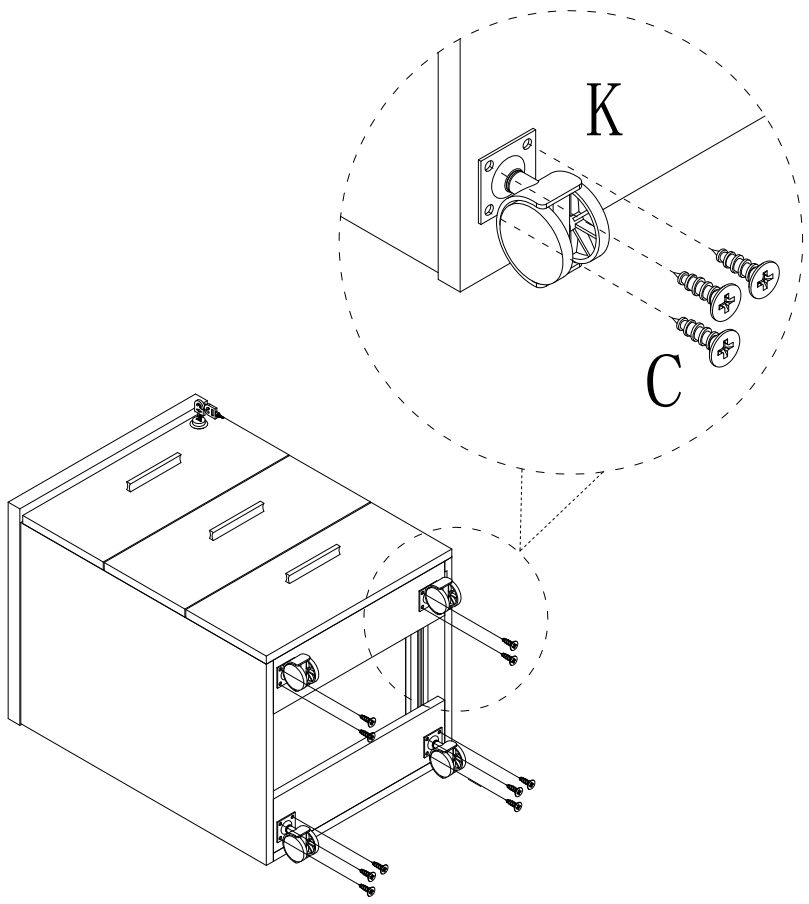

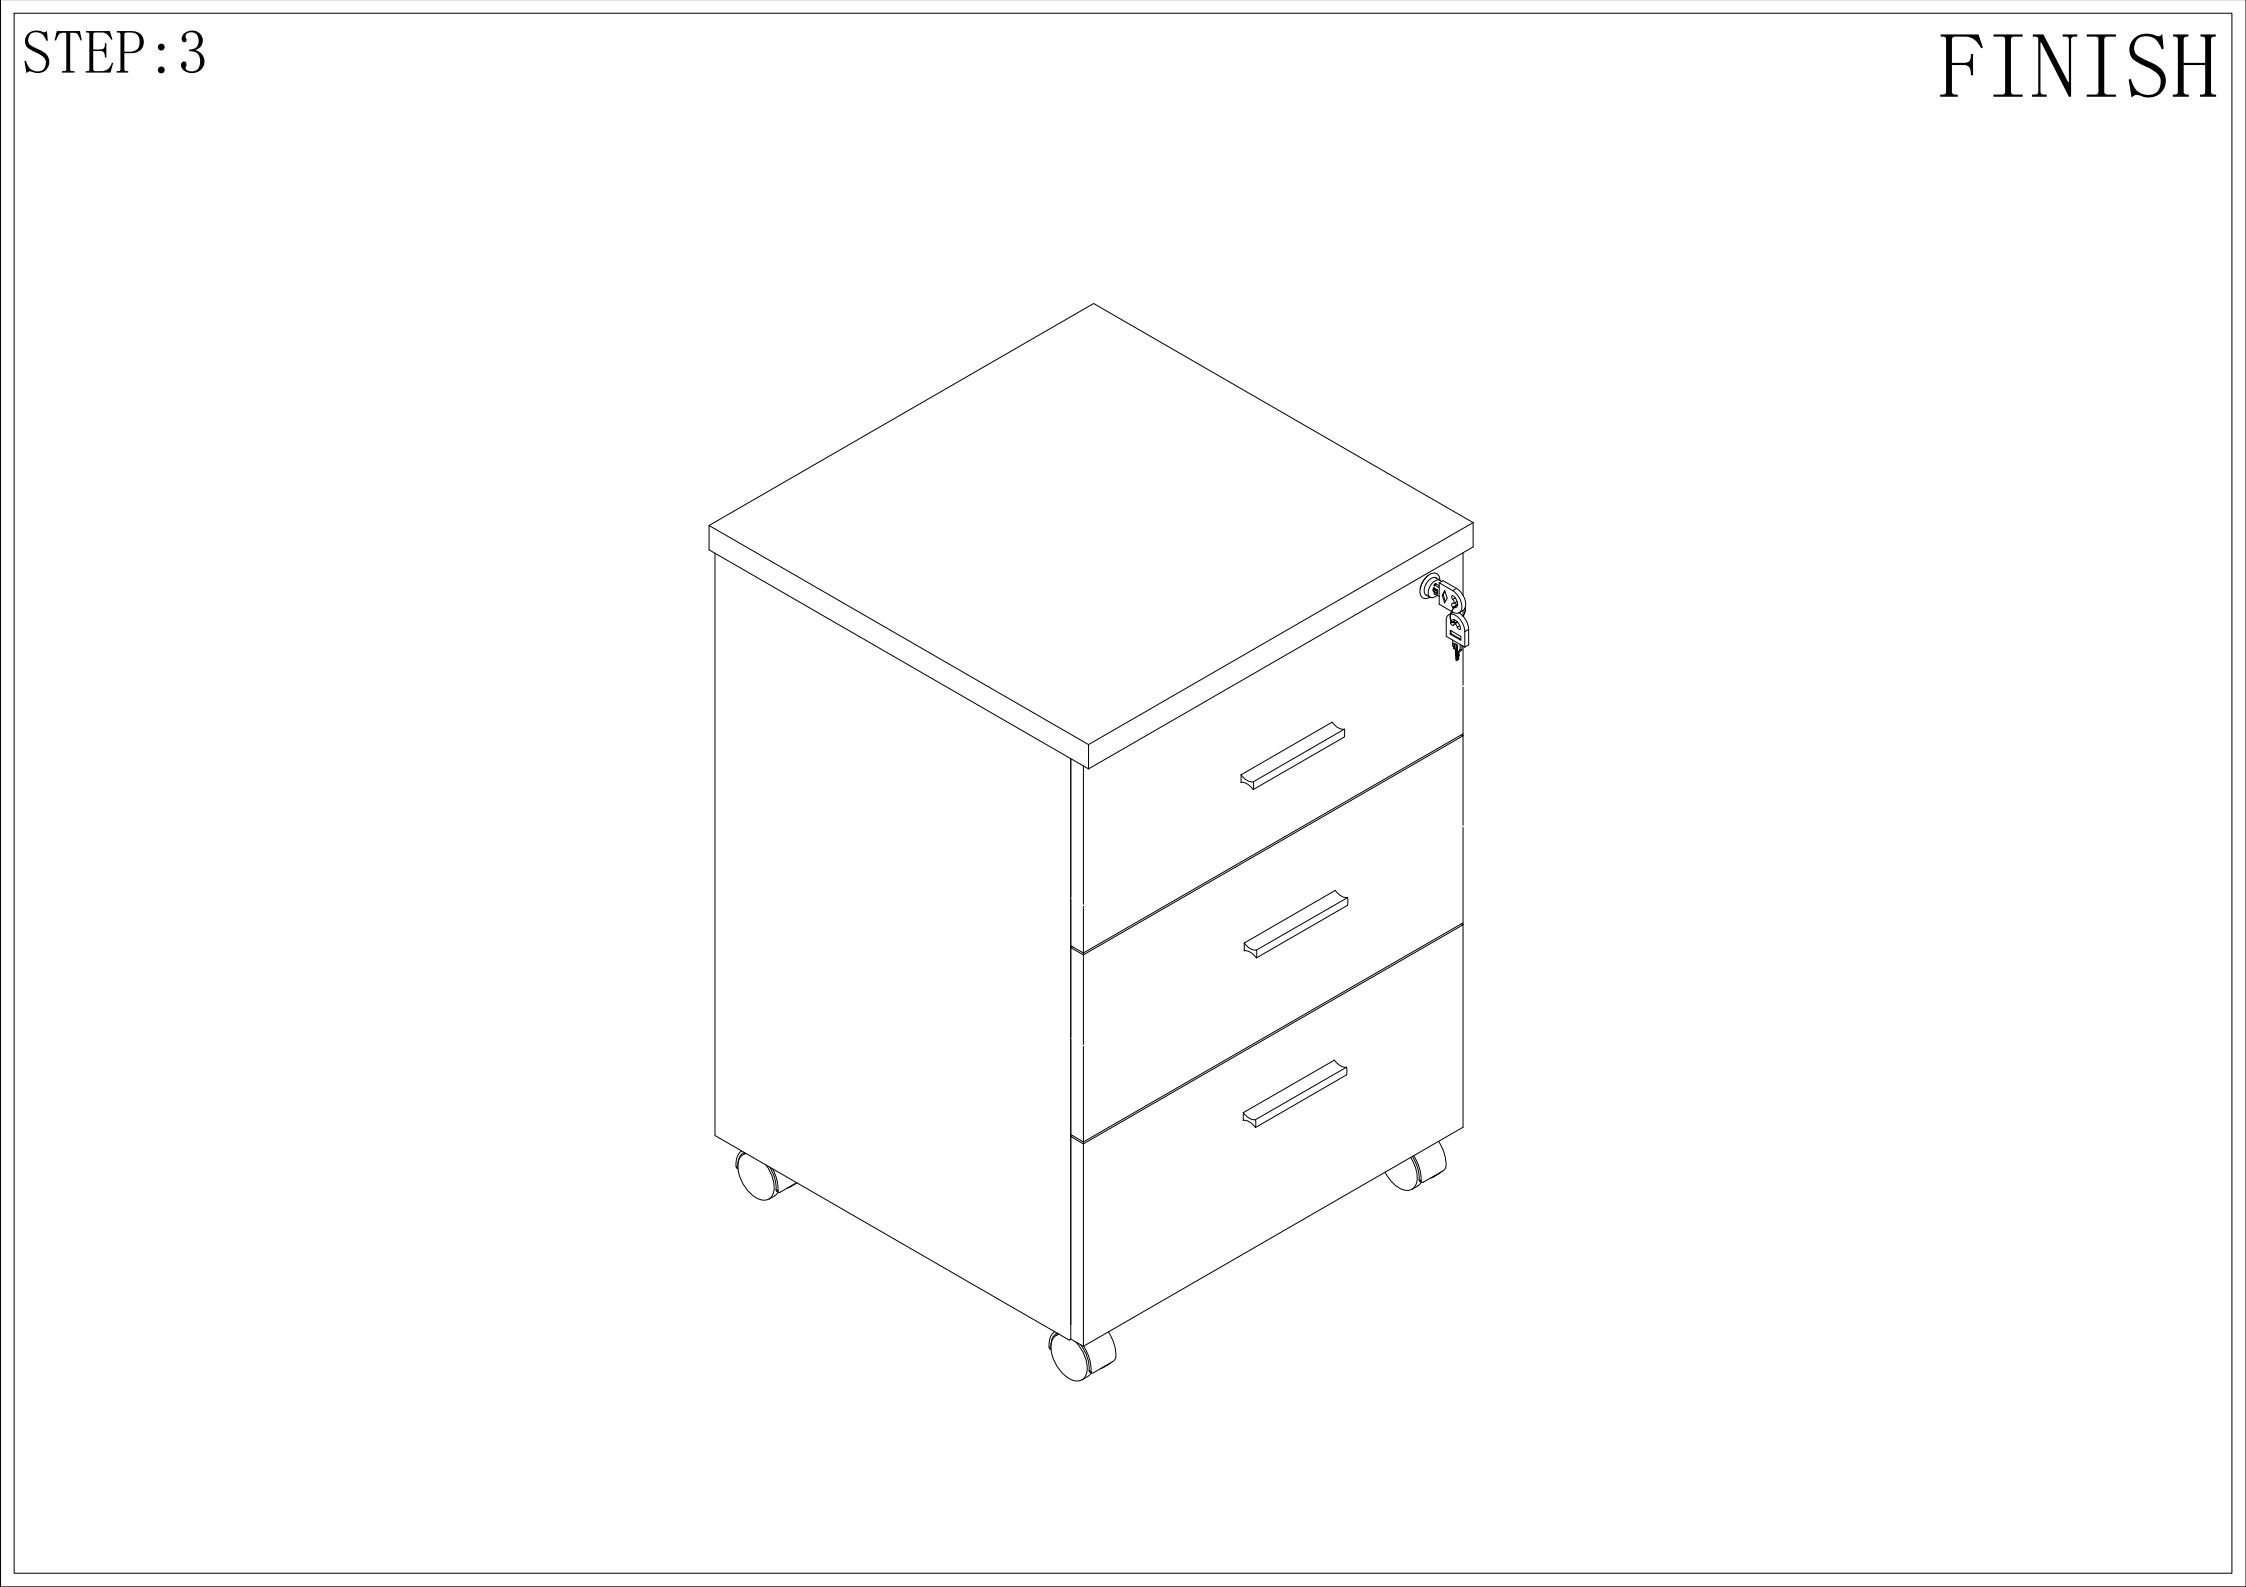

STEP:3

FINISH