

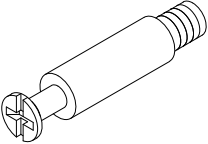
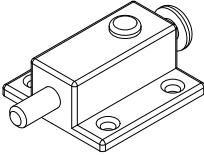
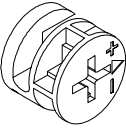

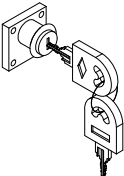


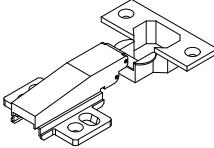
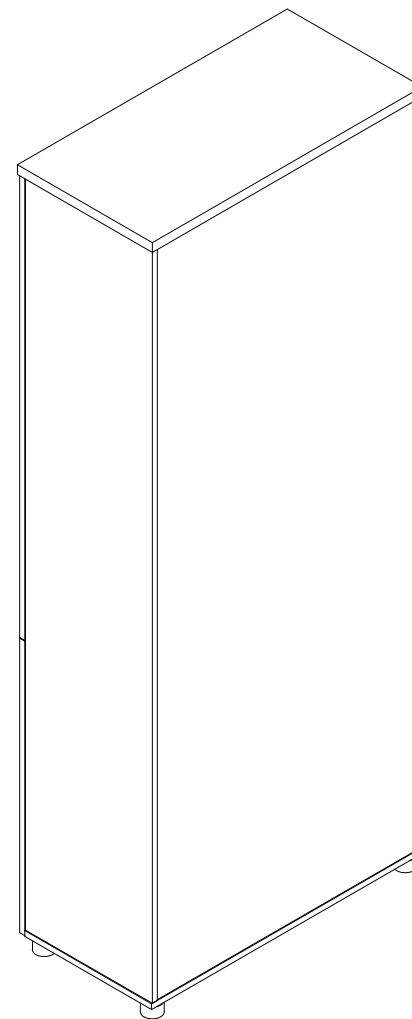


Minifix Screw 	Door handle 128V 	Bolt 
X44 A	X4 F	X2 K
Minifix 	Buckle 	
X44 B	X4 G	
Screw 3. 5*14 	Lock 	
X76 C	X2 H	
Screw 3. 5*20 	support leg 50*30H 	
X28 D	X4 I	
Screw 4*18 	Full cover hinge 	
X8 E	X10 J	

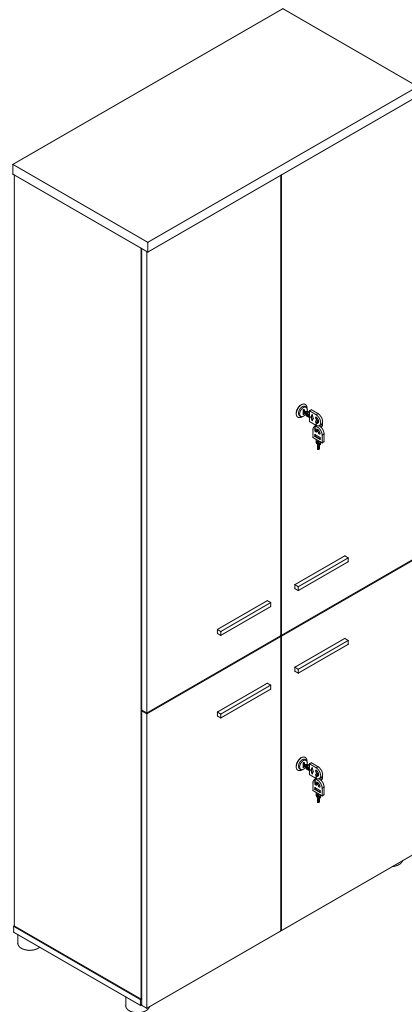

367-000034


Minifix Screw

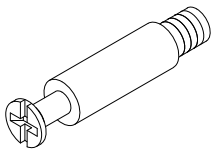

X36

A

Minifix

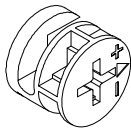


X36


B

STEP : 1


To fix the panel 1、2、3、4、6

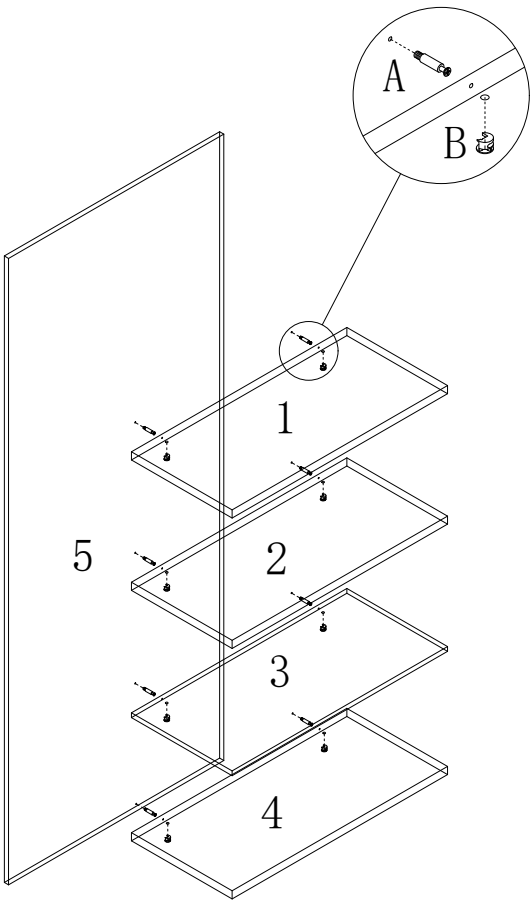

To fix the panel 6 and 7

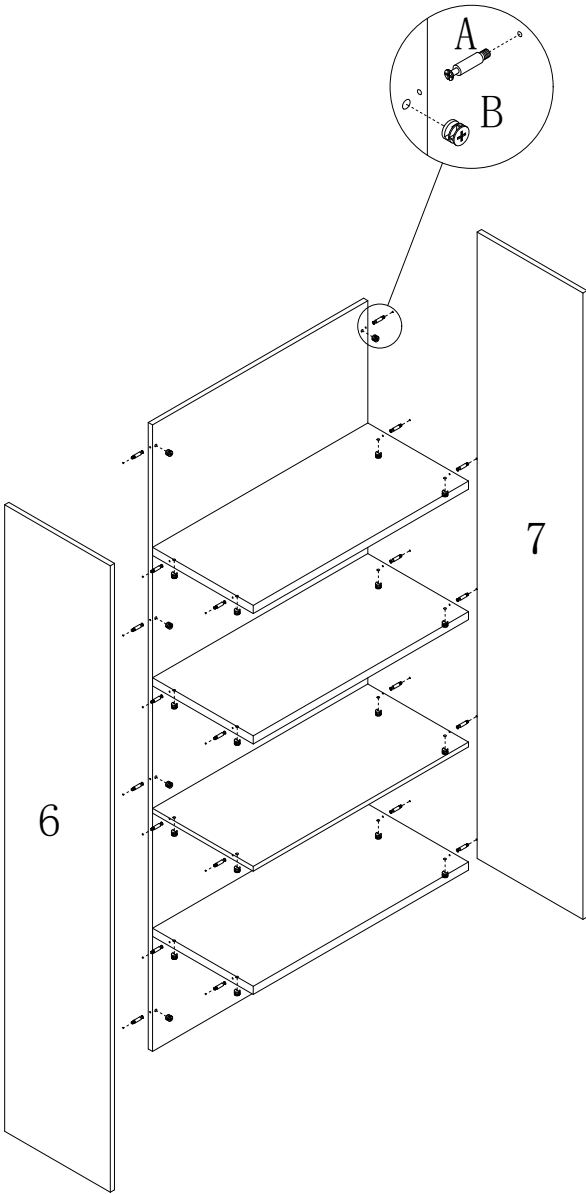


Minifix Screw

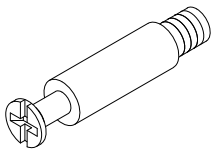

X8

A


Minifix

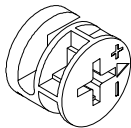

X8


B

Screw 3.5*20



X12 support leg 50*30H

D




I


X4

STEP:2


To fix the panel 8、9

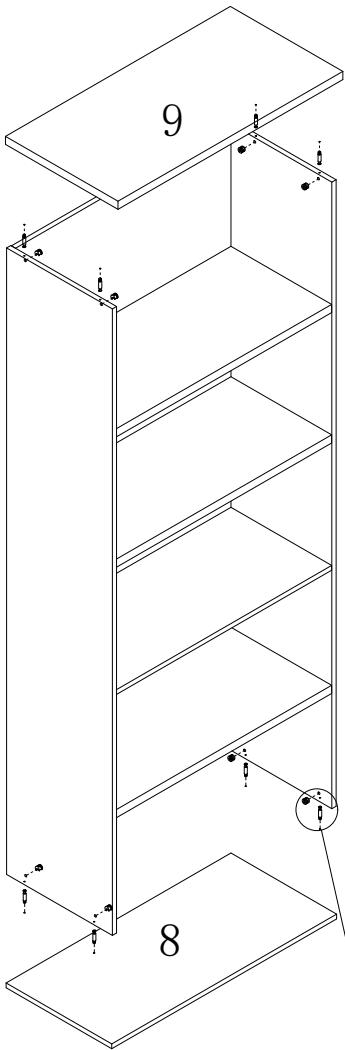

Install support feet

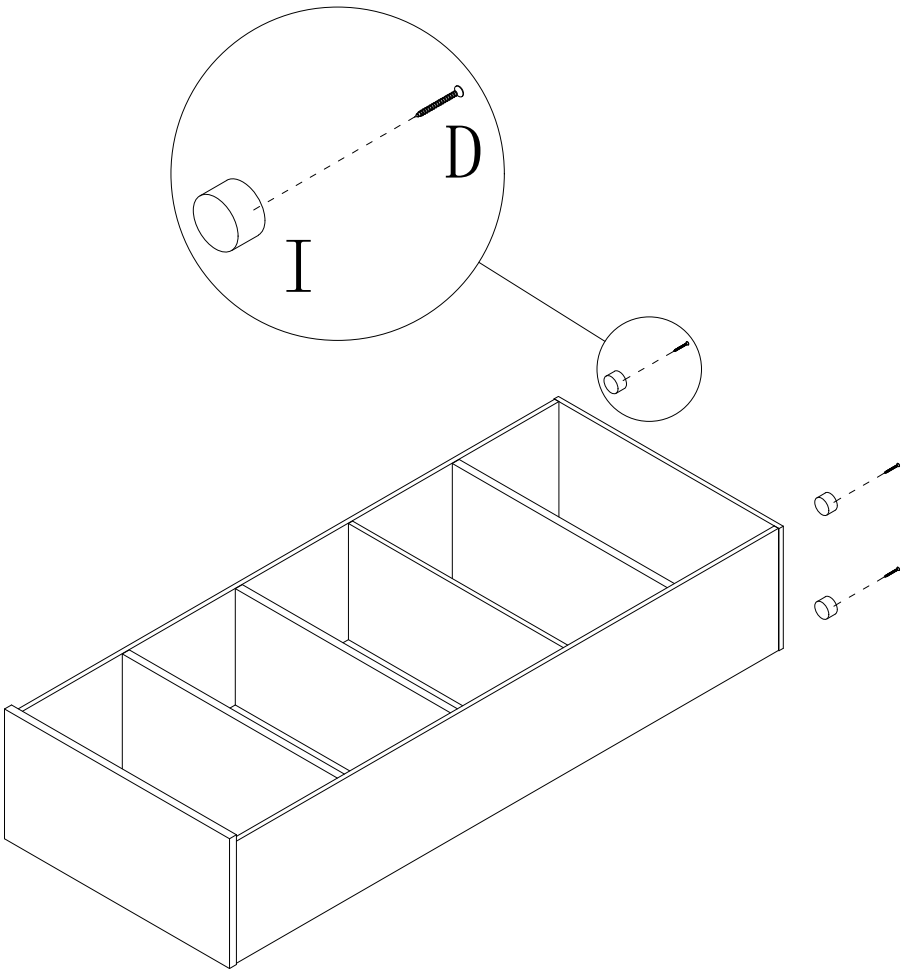

Full cover hinge

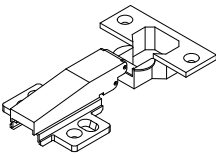


X10 J

Screw 3. 5*14




X76 C

Screw 3. 5*20




X28 D

Screw 4*18




X8 E

Bolt

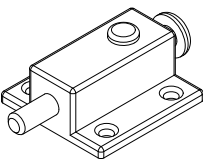


X2 K

Buckle



X4 G

Lock

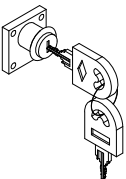

X2 H




Door handle 128V



X4 F

STEP:4

Install the door panel

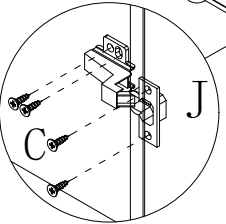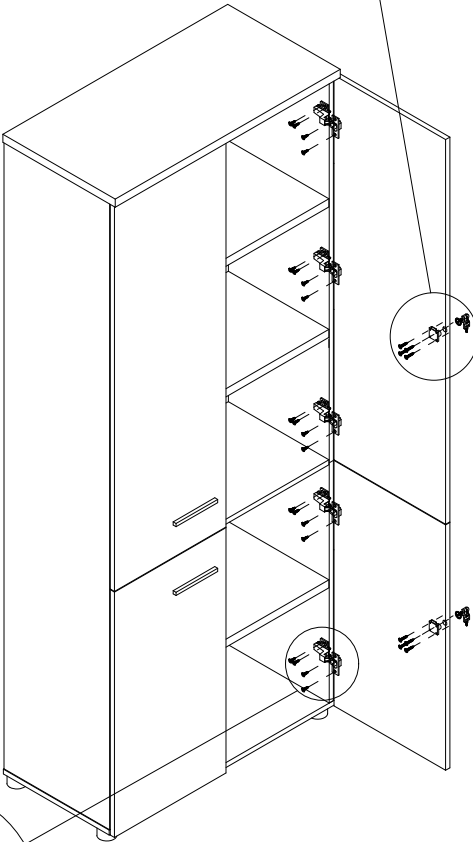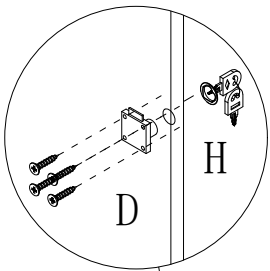

FINISH

