

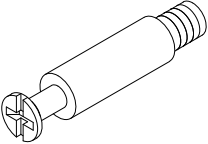

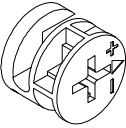

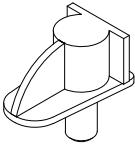

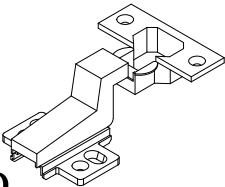



Minifix Screw	Rebounder
	
X62	A X2 F
Minifix	support leg 50*30H
	
X62	B X6 G
Screw 3. 5*14	Shelf bracket
	
X84	C X24 H
Screw 3. 5*20	Embedded hinge
	
X24	D X12 I
Rebounder	
	
X1	E

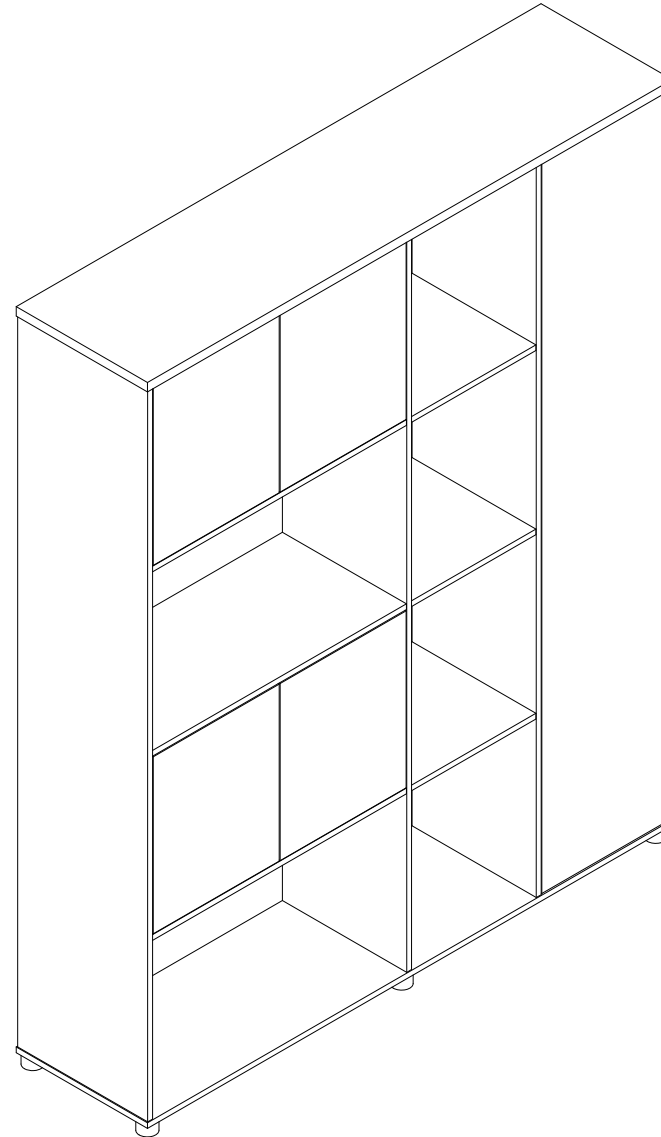

367-000037


Minifix Screw

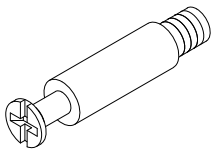

X28

A

Minifix

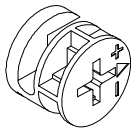


X28


B

STEP : 1


To fix the panel 1、2、3

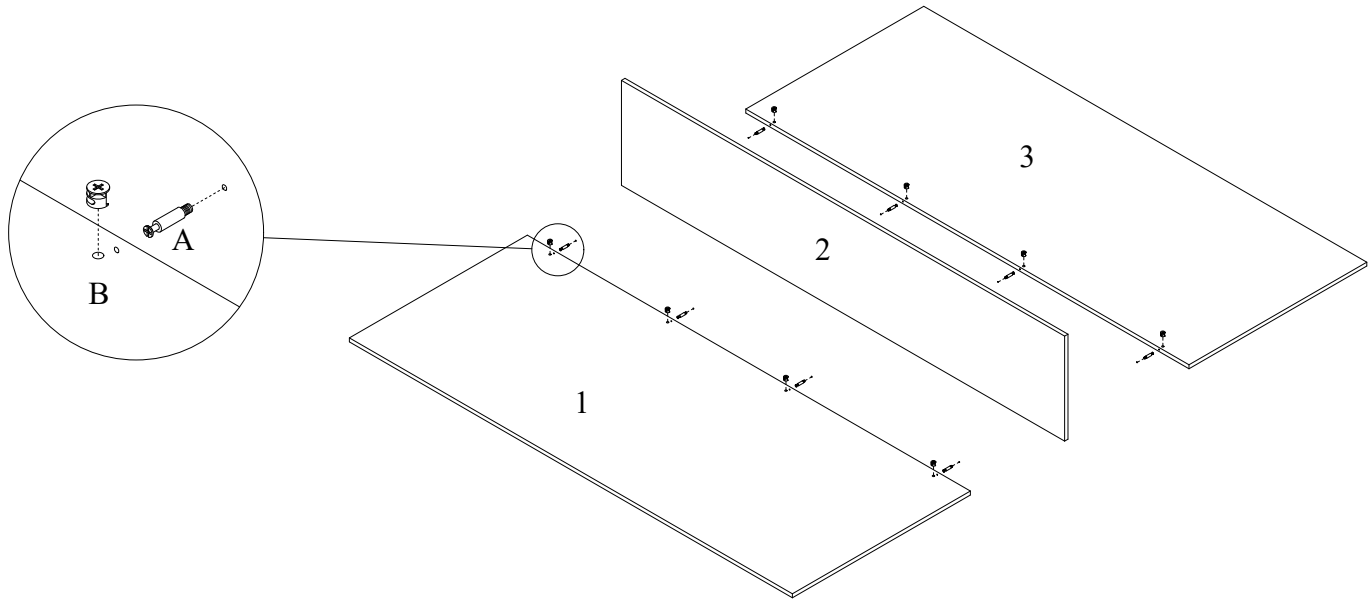

To fix the panel 4、5、6、7

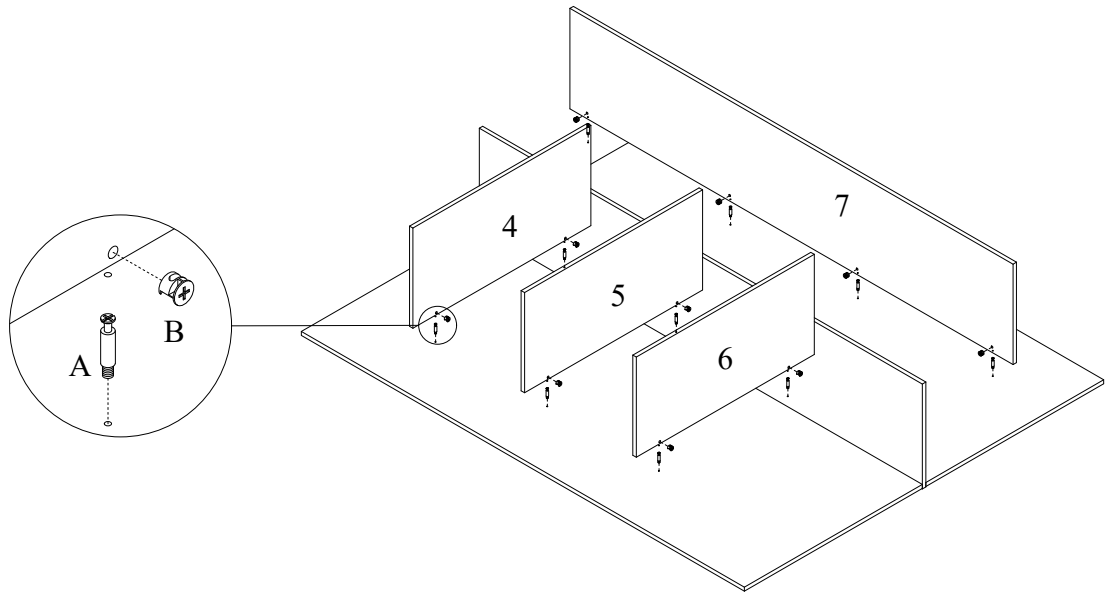


Minifix Screw

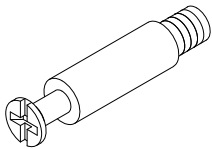

X28

A


Minifix

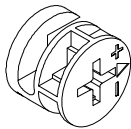

X28

B


support leg 50*30H



X6

G

Screw 3.5*20





X24




D

STEP : 1


To fix the panel 8、9

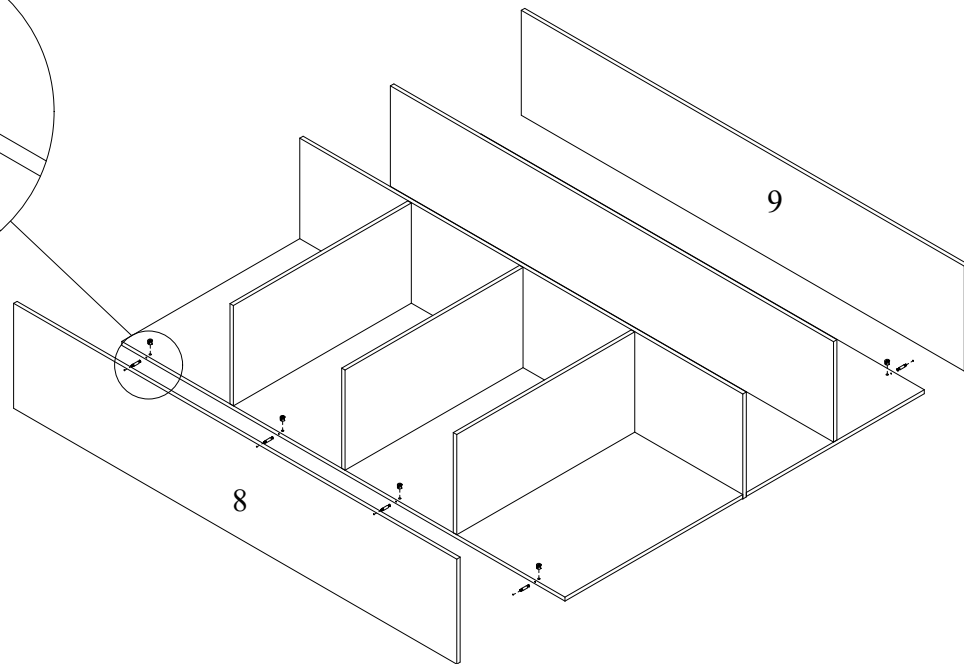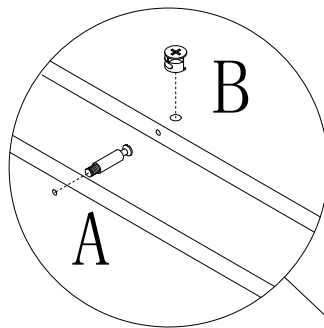

To fix the panel 10、11

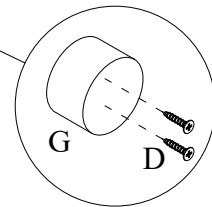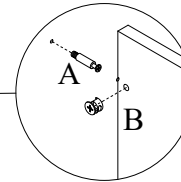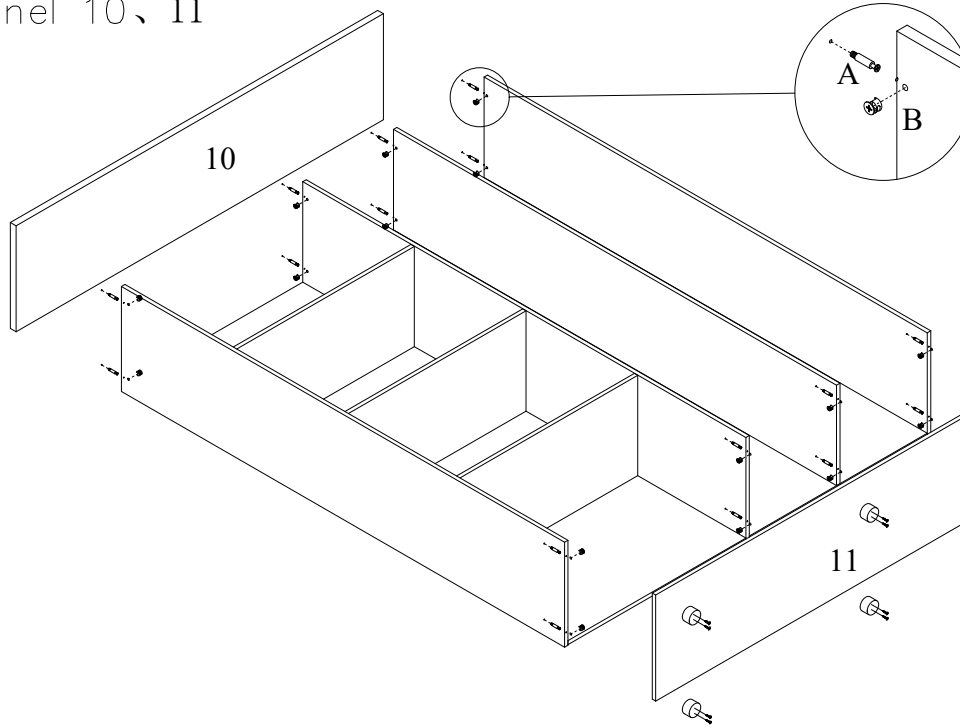


Shelf bracket

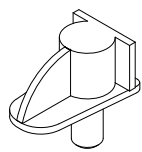


X24 H

Embedded hinge

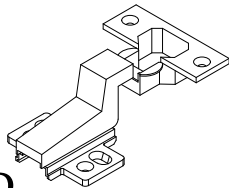


X12 I

Rebounder

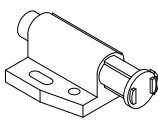

X1 E

Rebounder

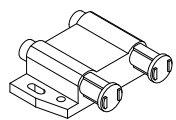


X2 F

Screw 3.5*14



X84 C

STEP:3
Install the door panel

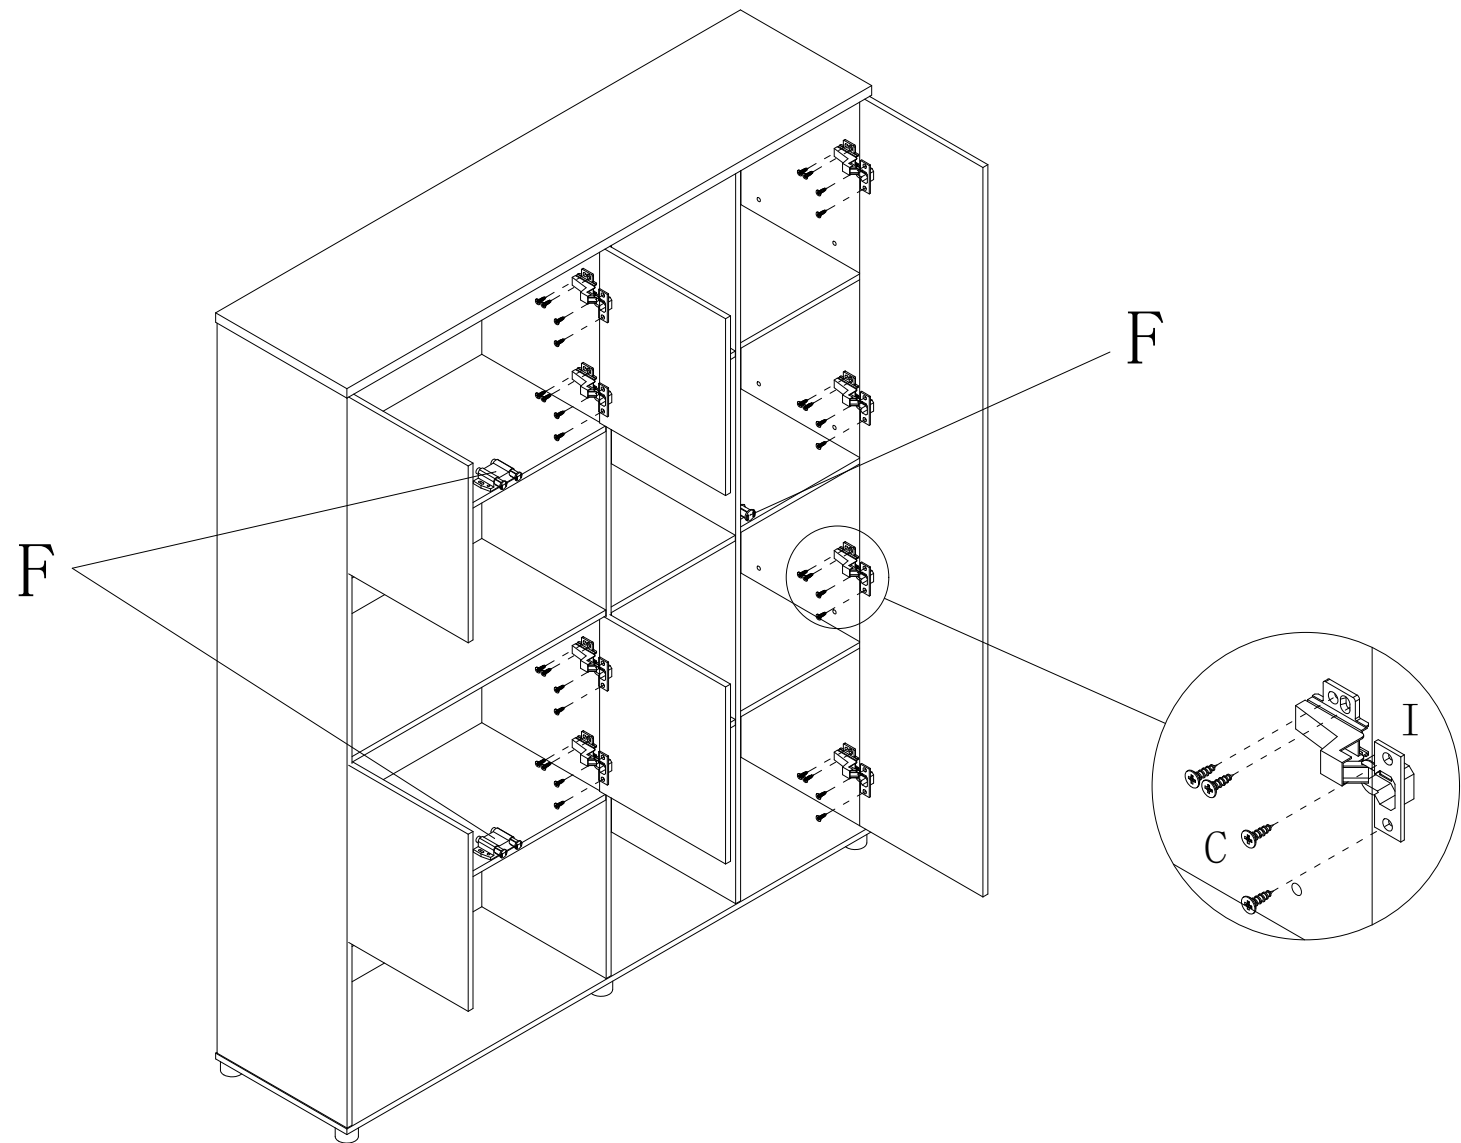

STEP:4

FINISH

