

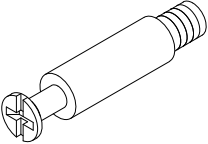
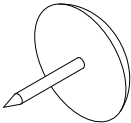
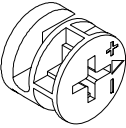
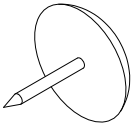


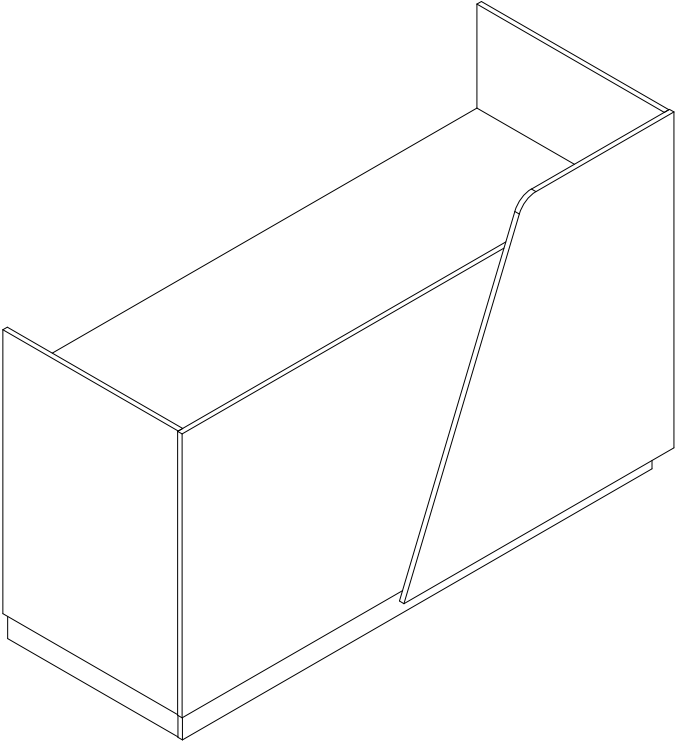


Minifix Screw	Buckle	D
		
X25	A	X4
Minifix	Buckle	X
		
X25	B	X3
Screw 3. 5*35		
		
X8	C	
Screw 3. 5*45		
		
X4	D	
	YL	
		
X4	E	

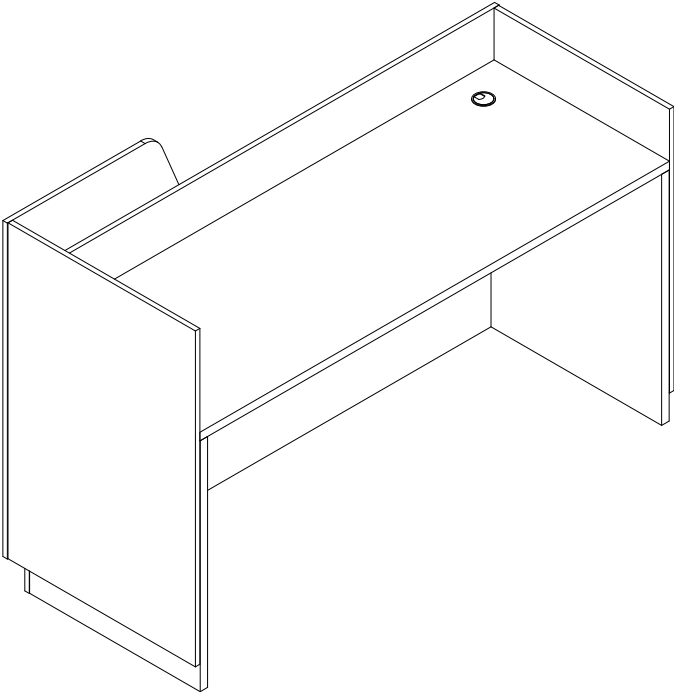


Minifix Screw

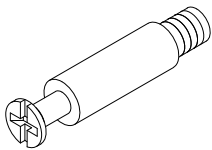

X17

A

Minifix

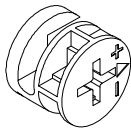


X17


B

STEP : 1


To fix the panel 1 and 2

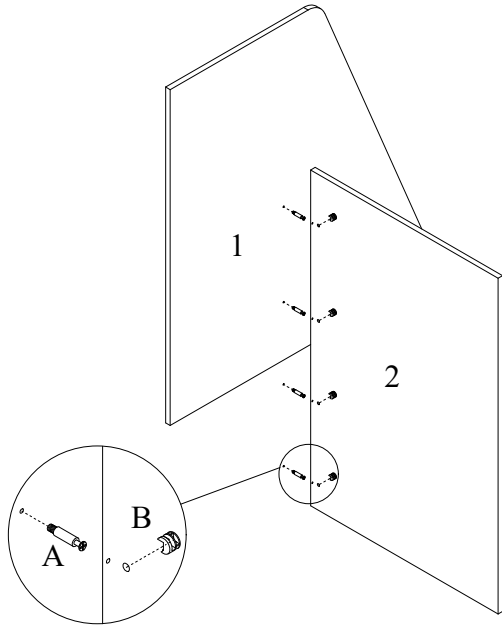


To fix the panel 3 and 4

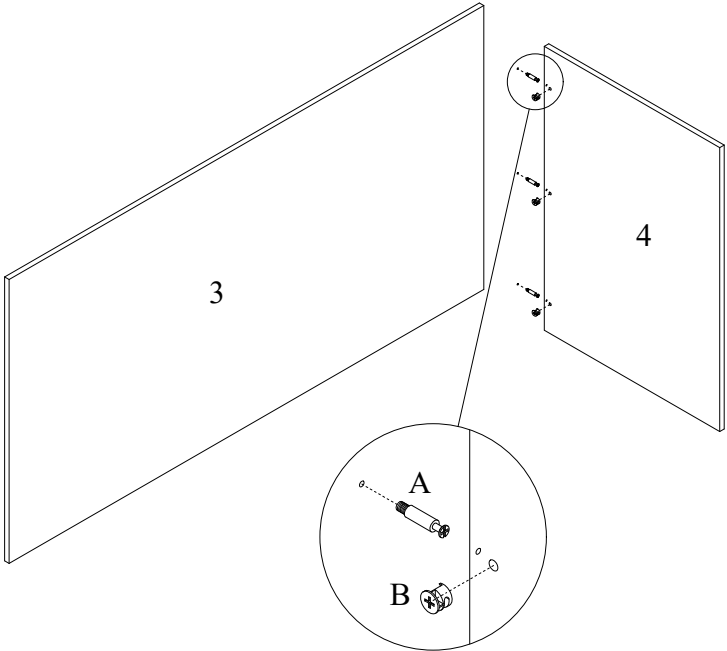


To fix the panel 5、6、7

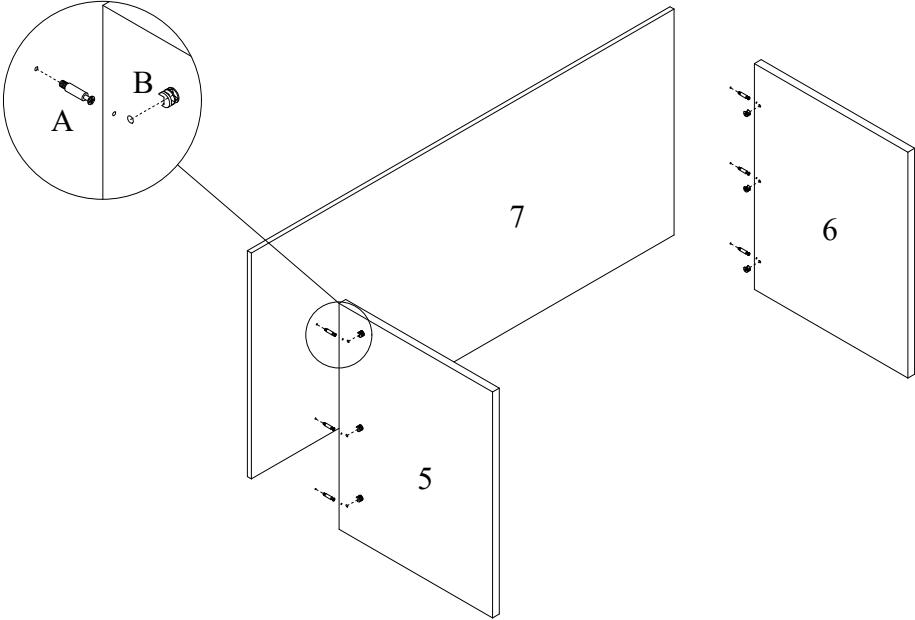

To fix the top panel 8

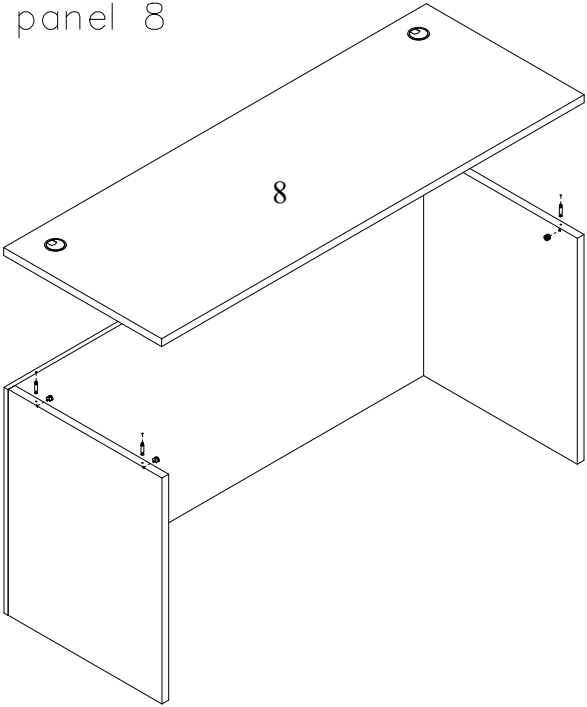


Minifix Screw

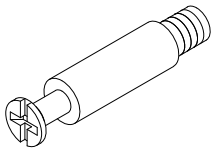


X28 A

Minifix

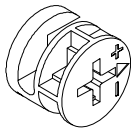


X28 B

Screw 3.5*35




X8 C

Screw 3.5*45




X4 D

Junction box YL




X2 E


STEP:2 To fix the panel 3 and 4

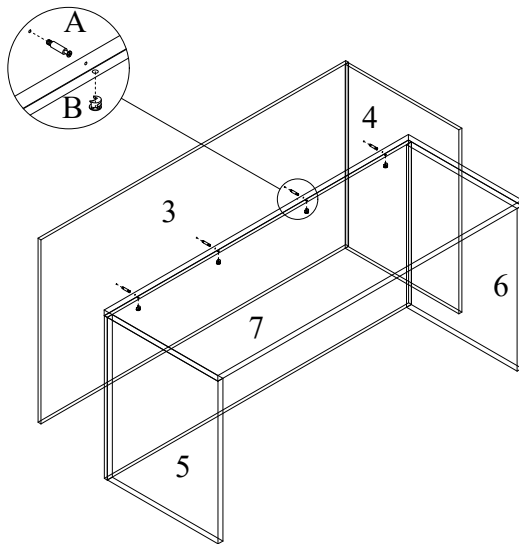


Fixed self tapping










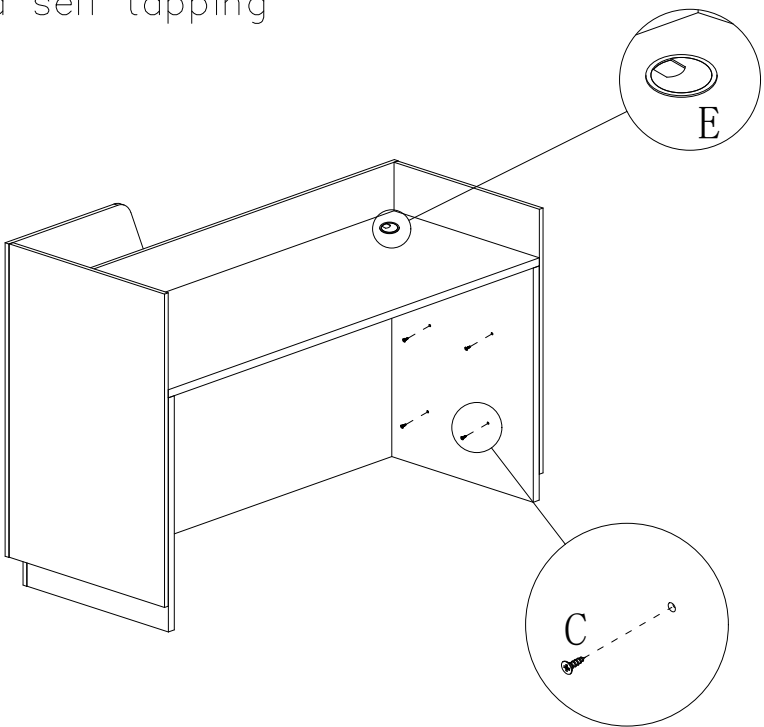



To fix the panel 1 and 2

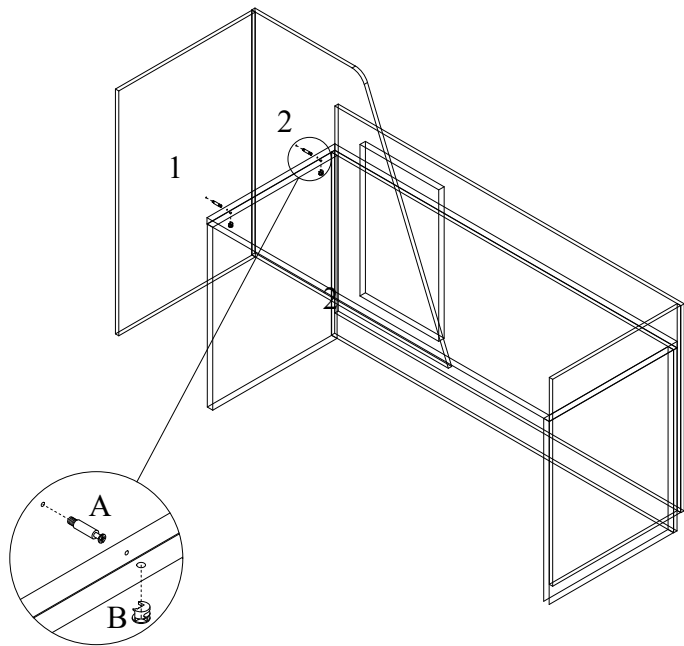







Fixed self tapping

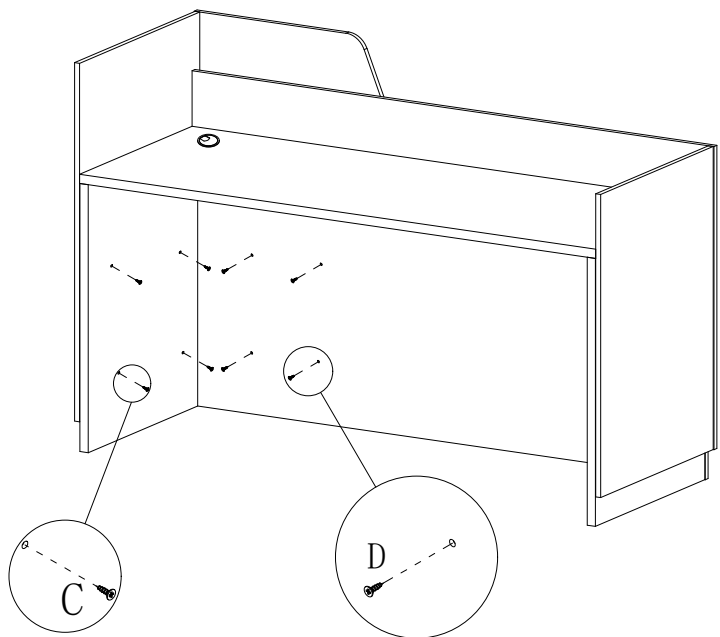

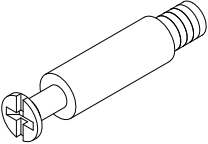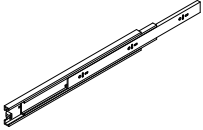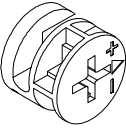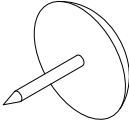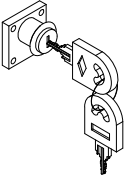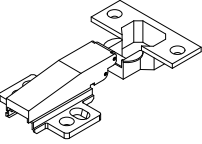Minifix Screw  X28 A	Door handle 128V  X2 F	Drawer rail 35/14  X1 K
Minifix  X28 B	Buckle  X1 G	Cleat  X8 L
Screw 3. 5*14  X35 C	Lock  X1 H	Screw 3. 5*40  X4 M
Screw 3. 5*20  X4 D	Screw 3. 5*30  X8 I	
Screw 4*18  X4 E	Full cover hinge  X2 J	

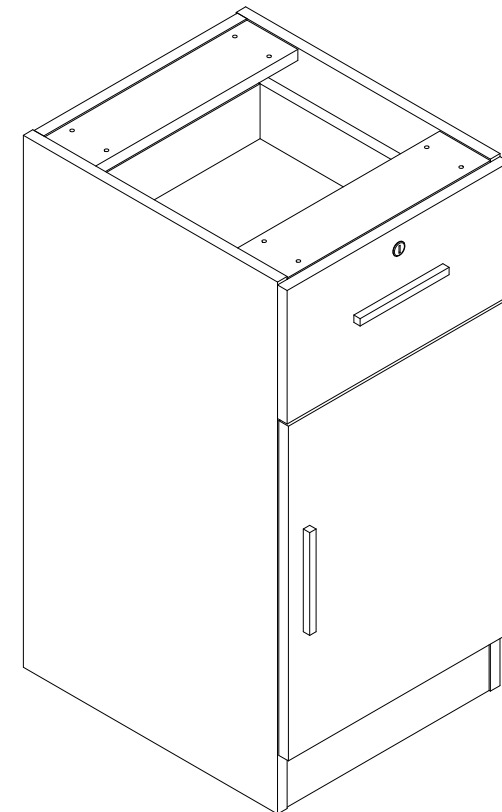


(350*400*725H)

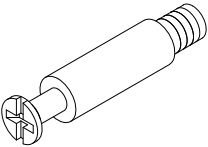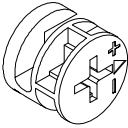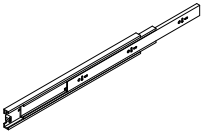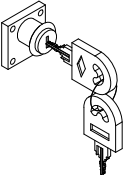
Minifix Screw  X17 A	Screw 3.5*14  X35 C
Minifix  X17 B	Screw 3.5*20  X4 D
Drawer rail 35/14  X1 K	Screw 3.5*40  X4 M
Buckle  X1 G	
Lock  X1 H	

STEP:3


Connect these panels

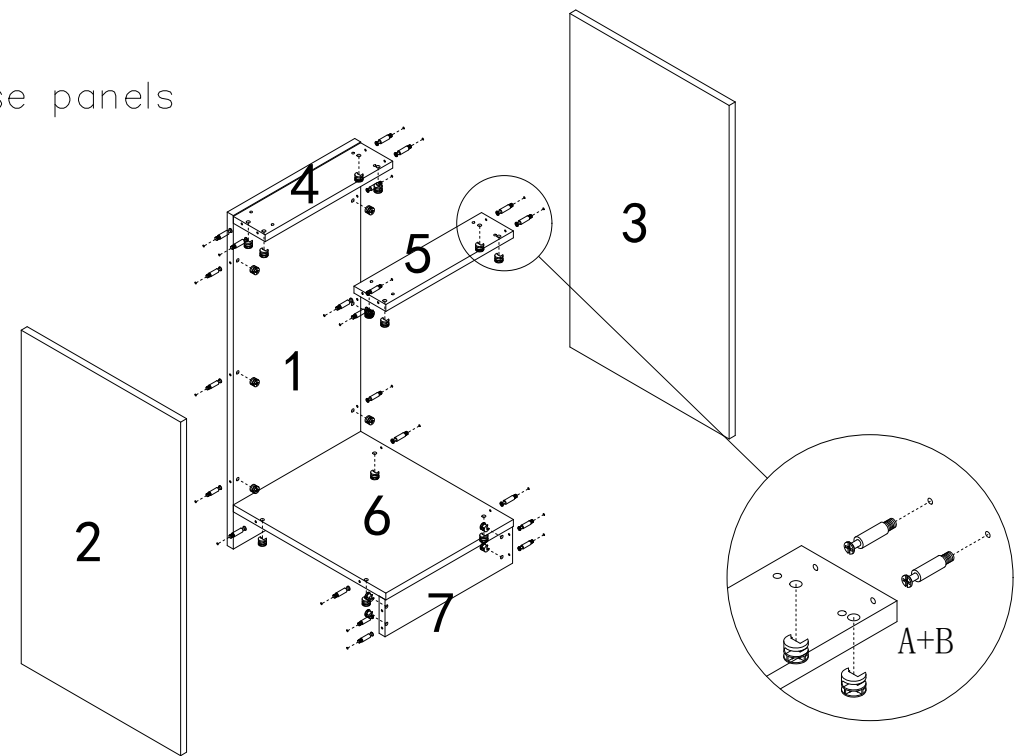

Assemble the drawer

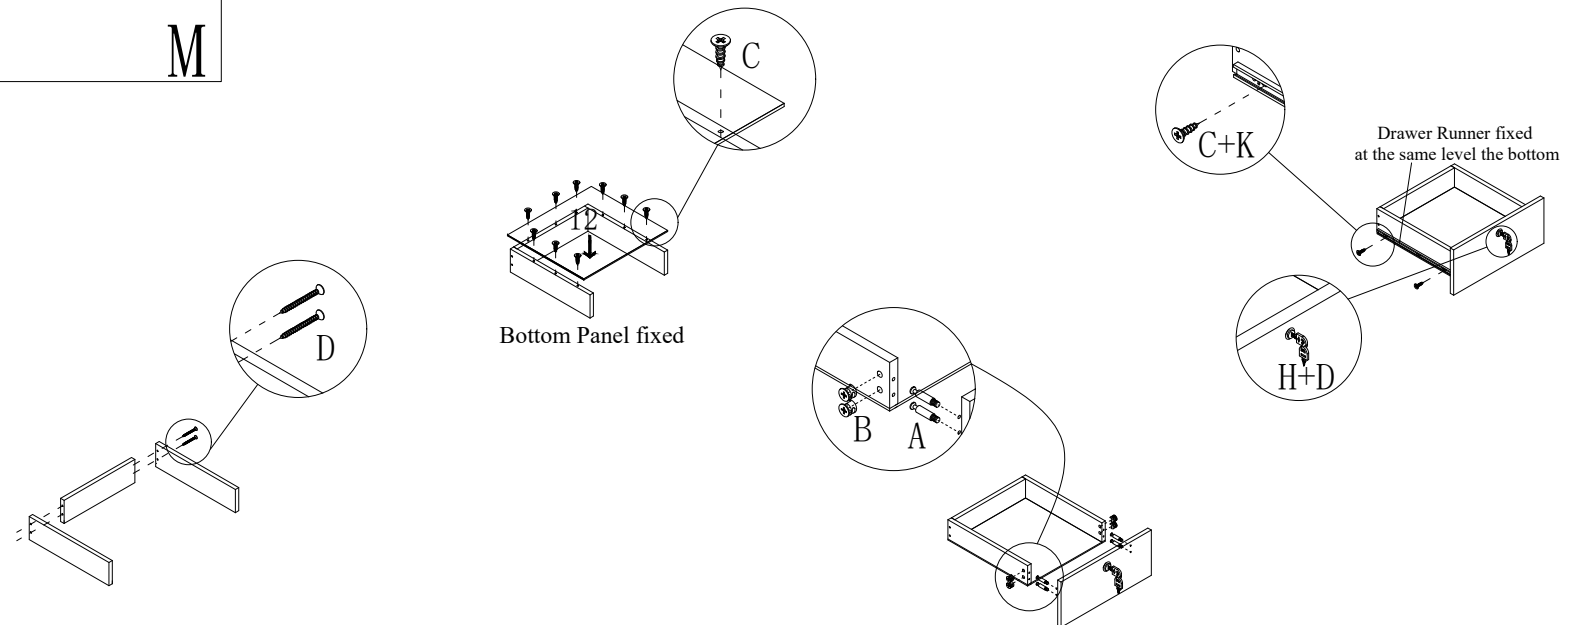

Full cover hinge

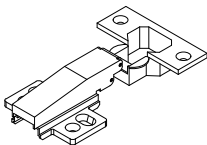

X2 J

Screw 3.5*14




X35 C

Door handle 128V



X2 F

Screw 4*18



X4 E


Cleat X




X8 L

STEP:4

Install door panels and drawers

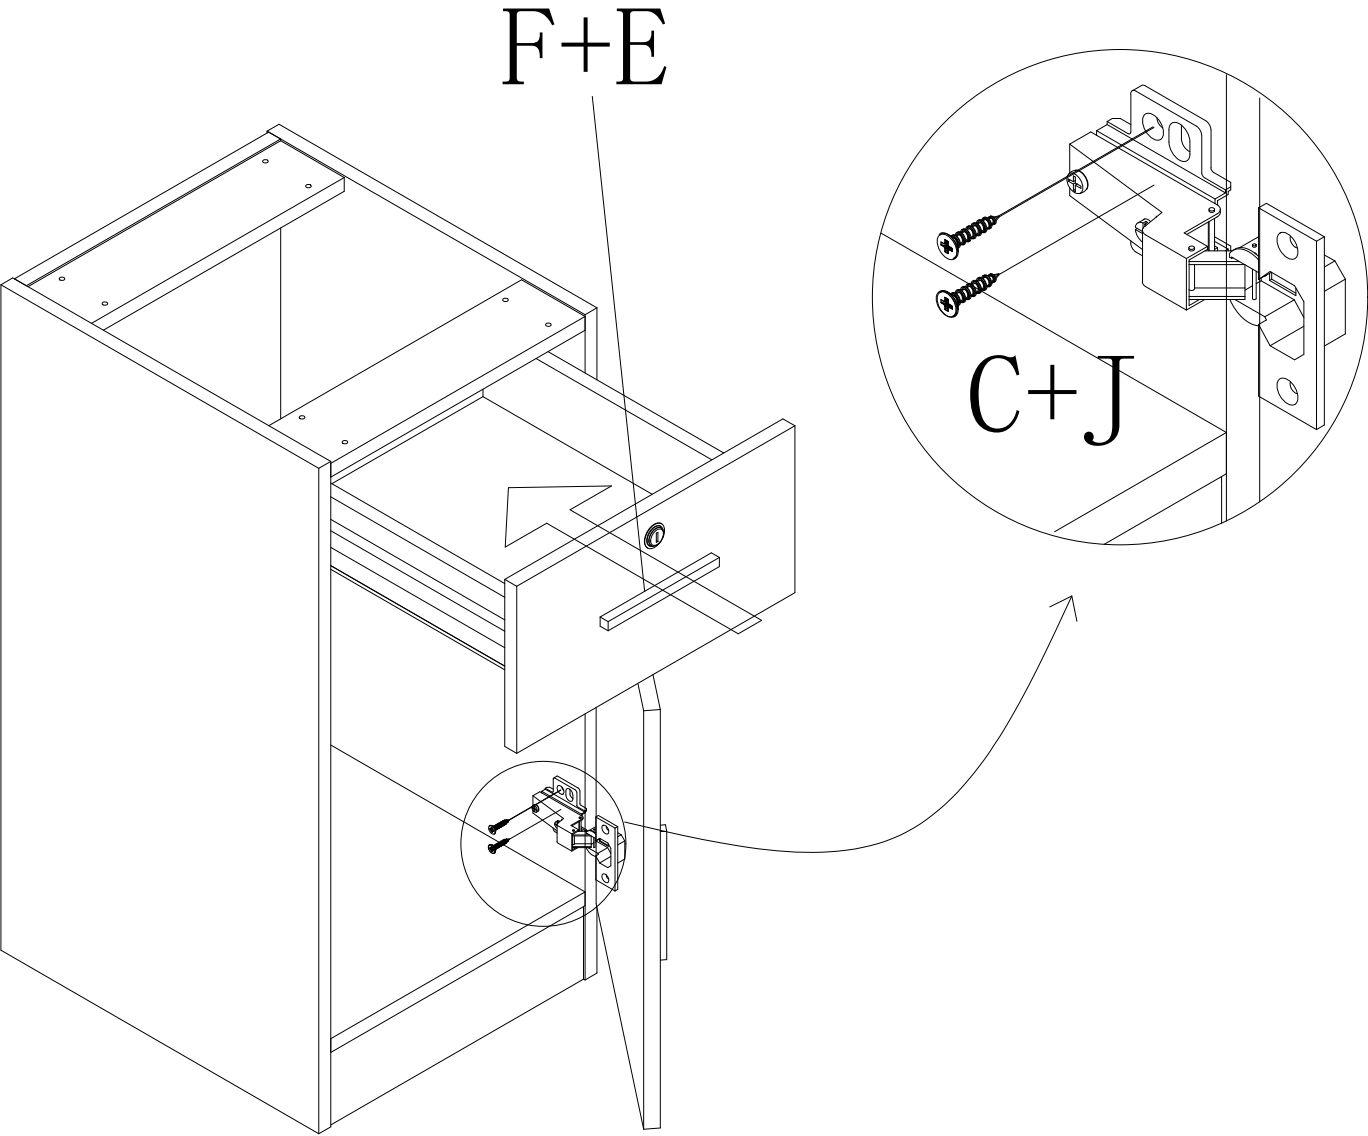



Screw 3.5*30



X8 I

STEP:4

Install floor cabinets

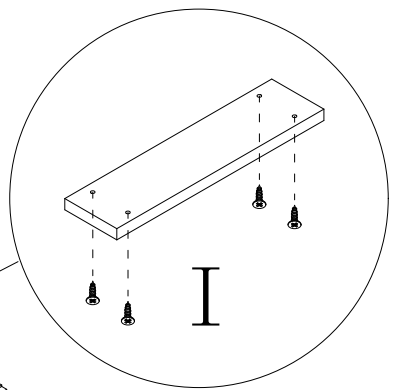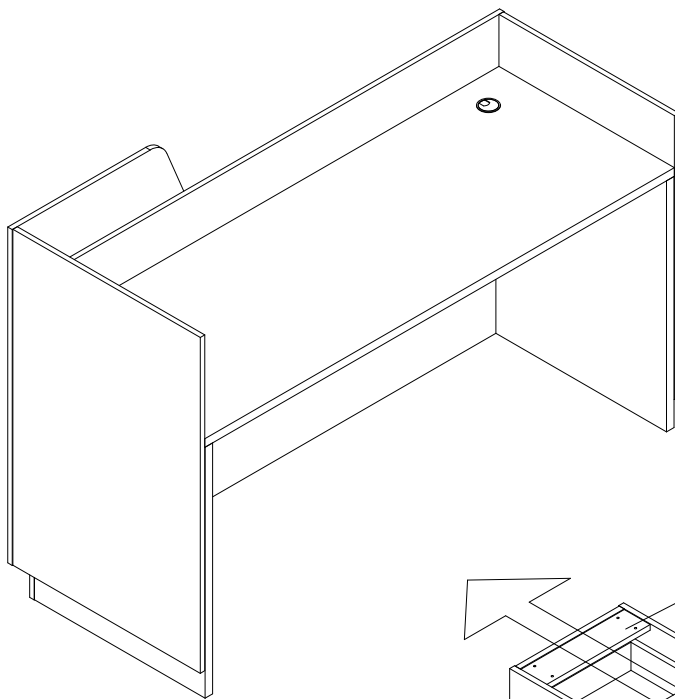

STEP:5

FINISH

