


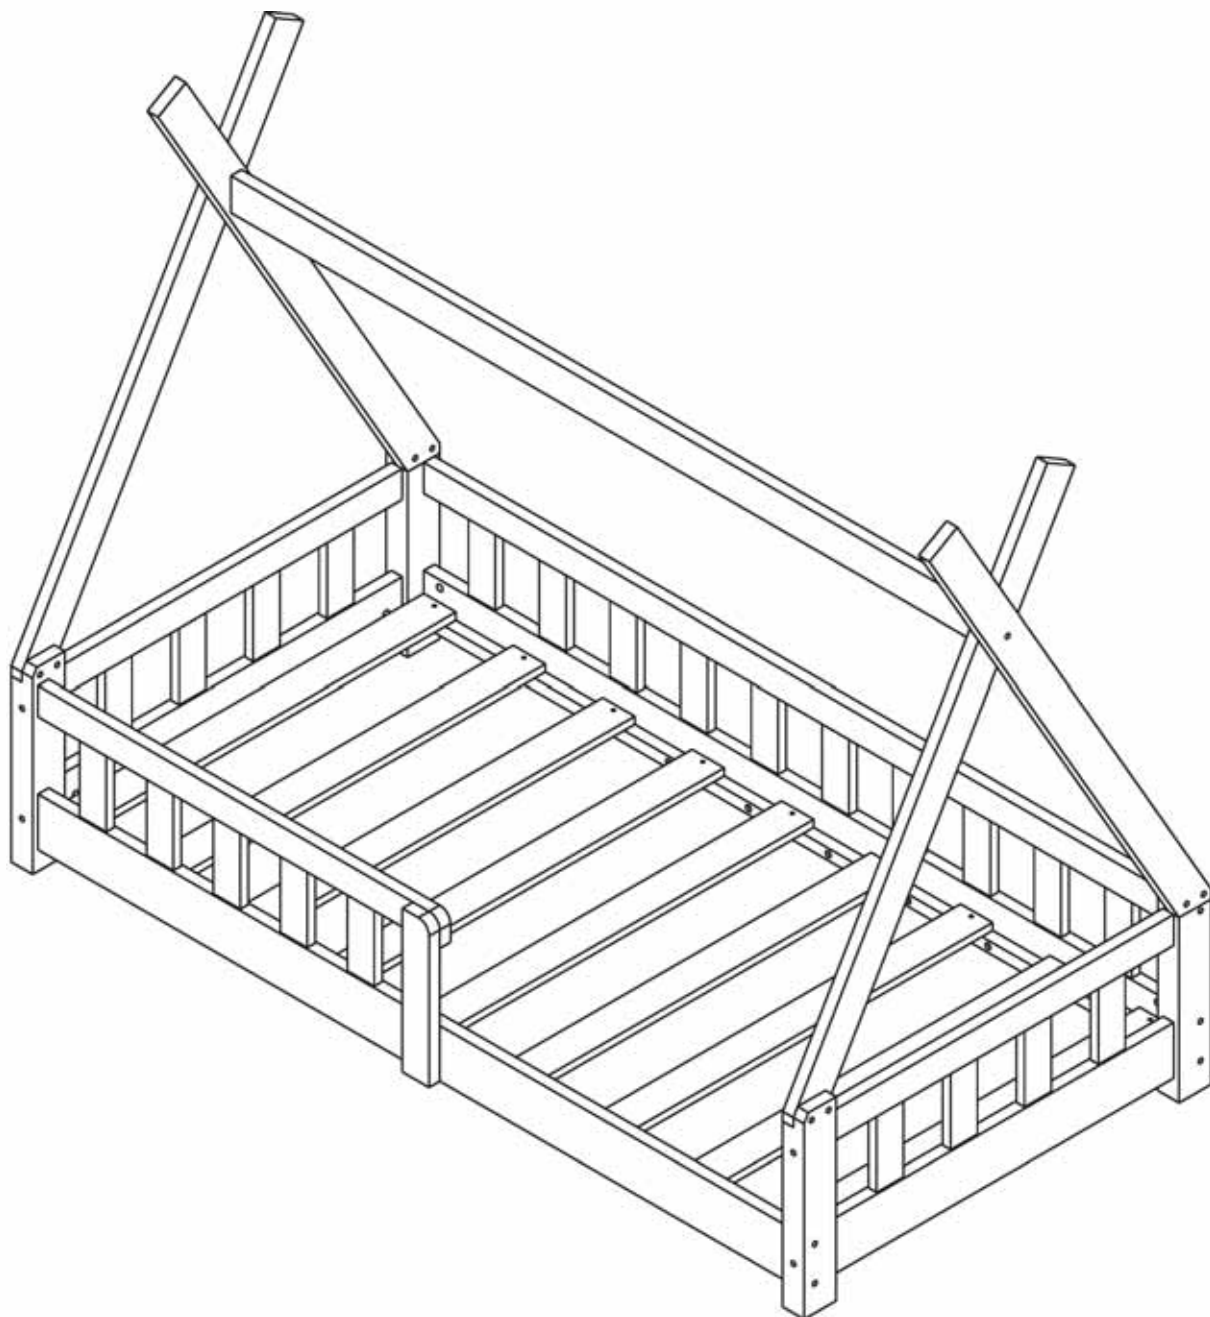



370-000021







READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE GROUP AND CHECK THE HARDWARE FITTINGS.GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE

NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME.KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE.IN THE EVENT OF QUERY.

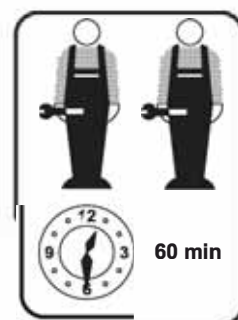


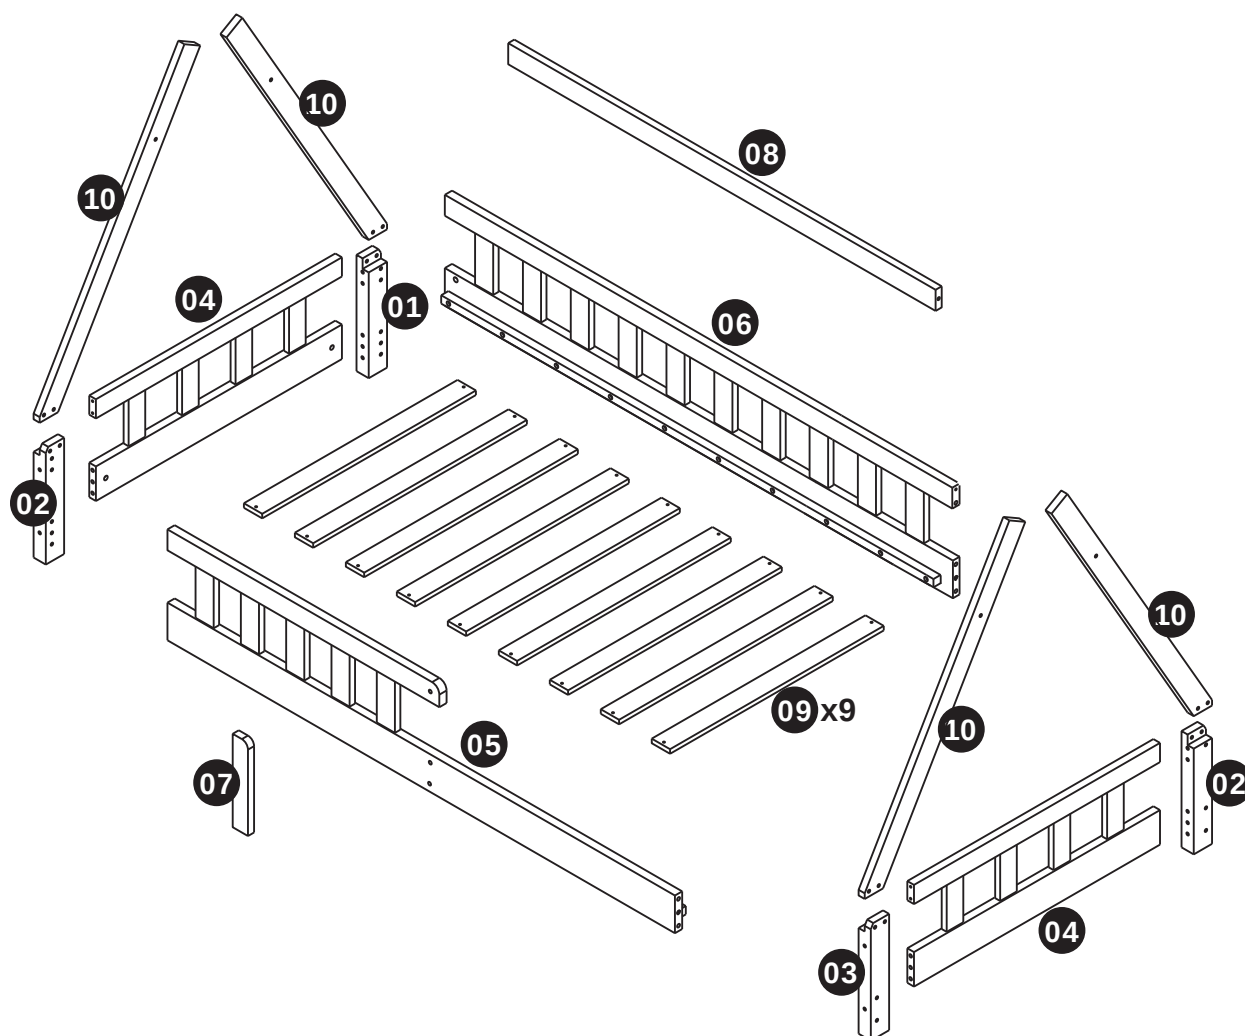

A x4  M6 x100mm	B x10  M6 x80mm	C x21 	D x14 	E x18  Ø4 x30mm
F x1 	G x3  Ø6 x80mm	H x4  Ø6 x100mm	I x11  M6 x30mm	J x8 

01

C x21

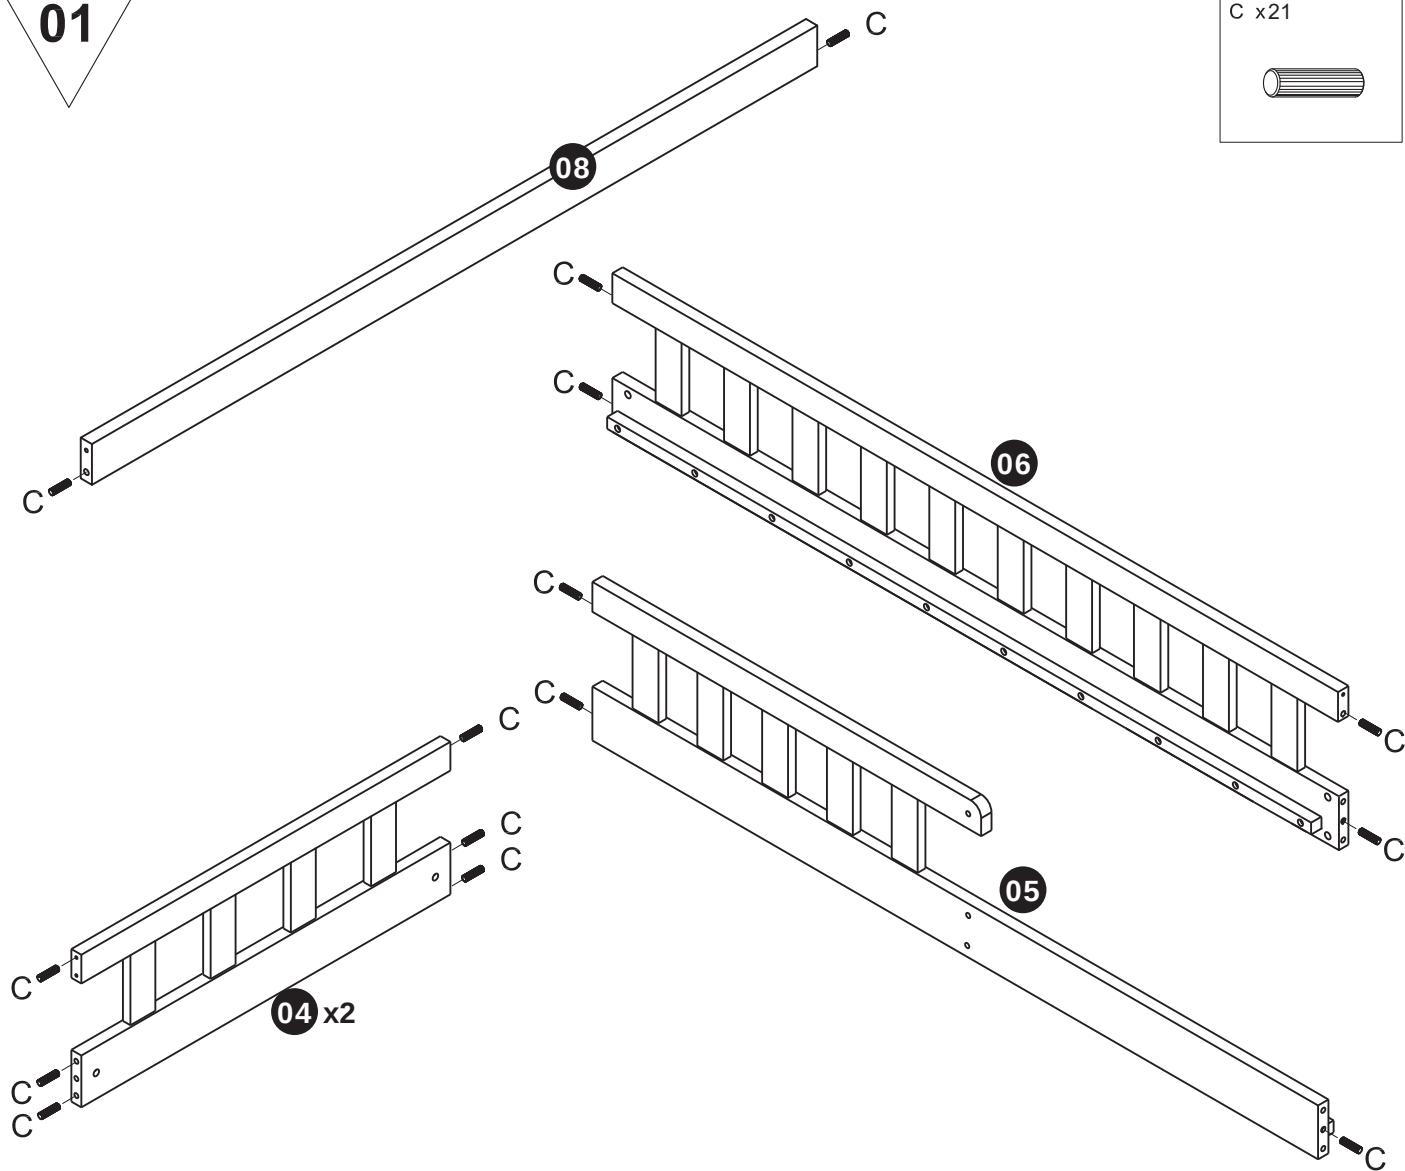


02

F x1




I x8






M6 x30mm

J x8

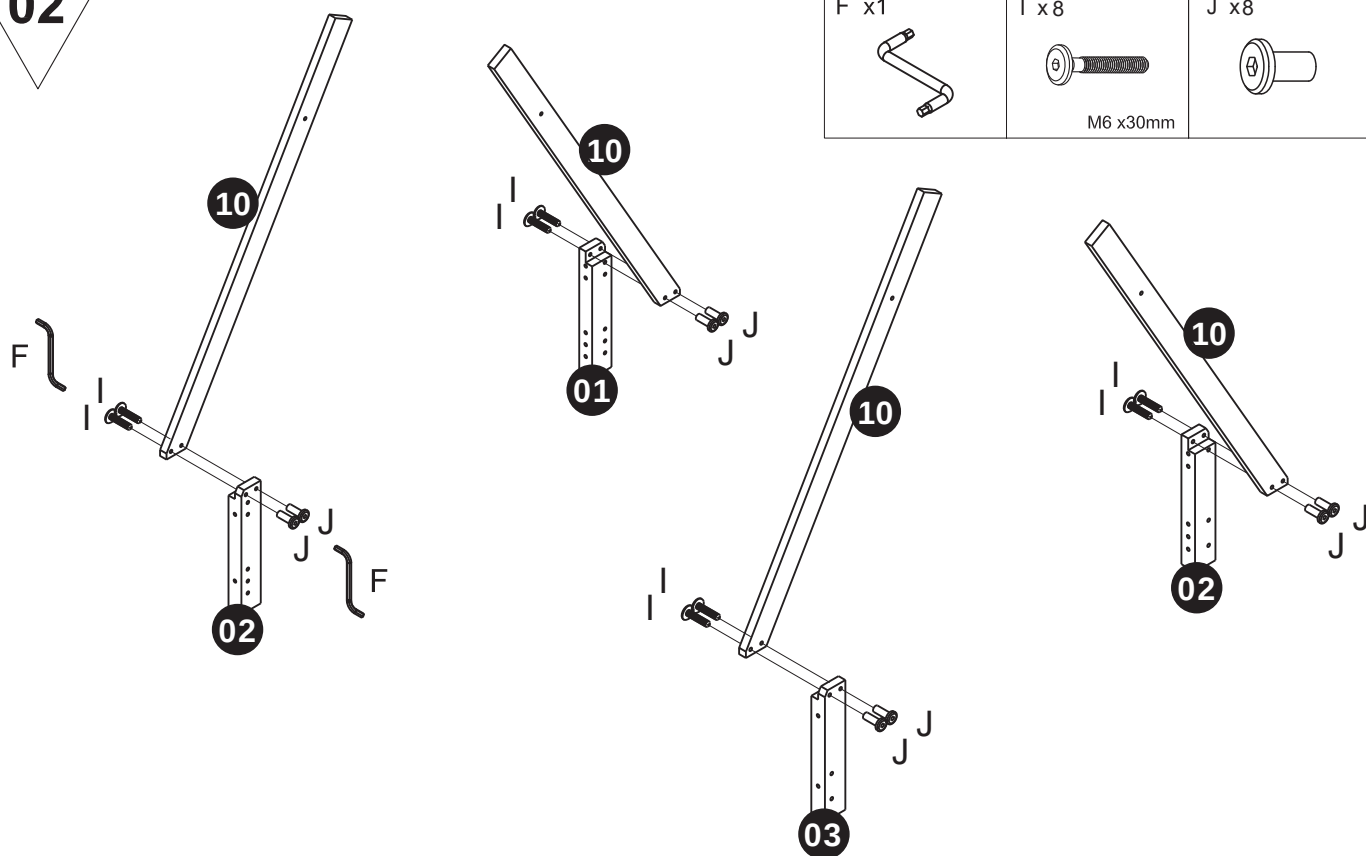



03

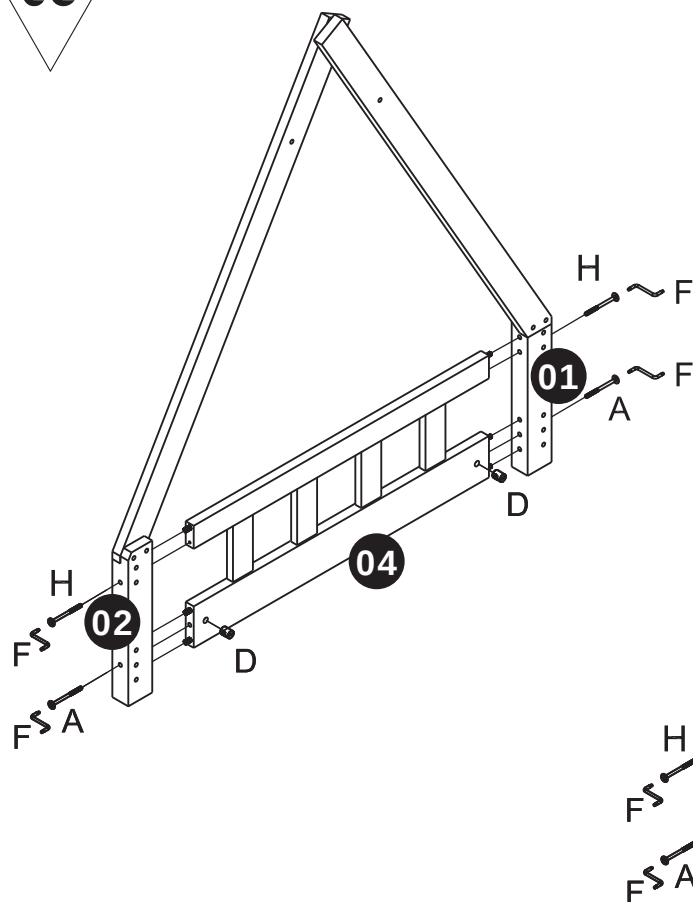



A x4  M6 x100mm	F x1 	H x4  Ø6 x100mm
		D x4 

04

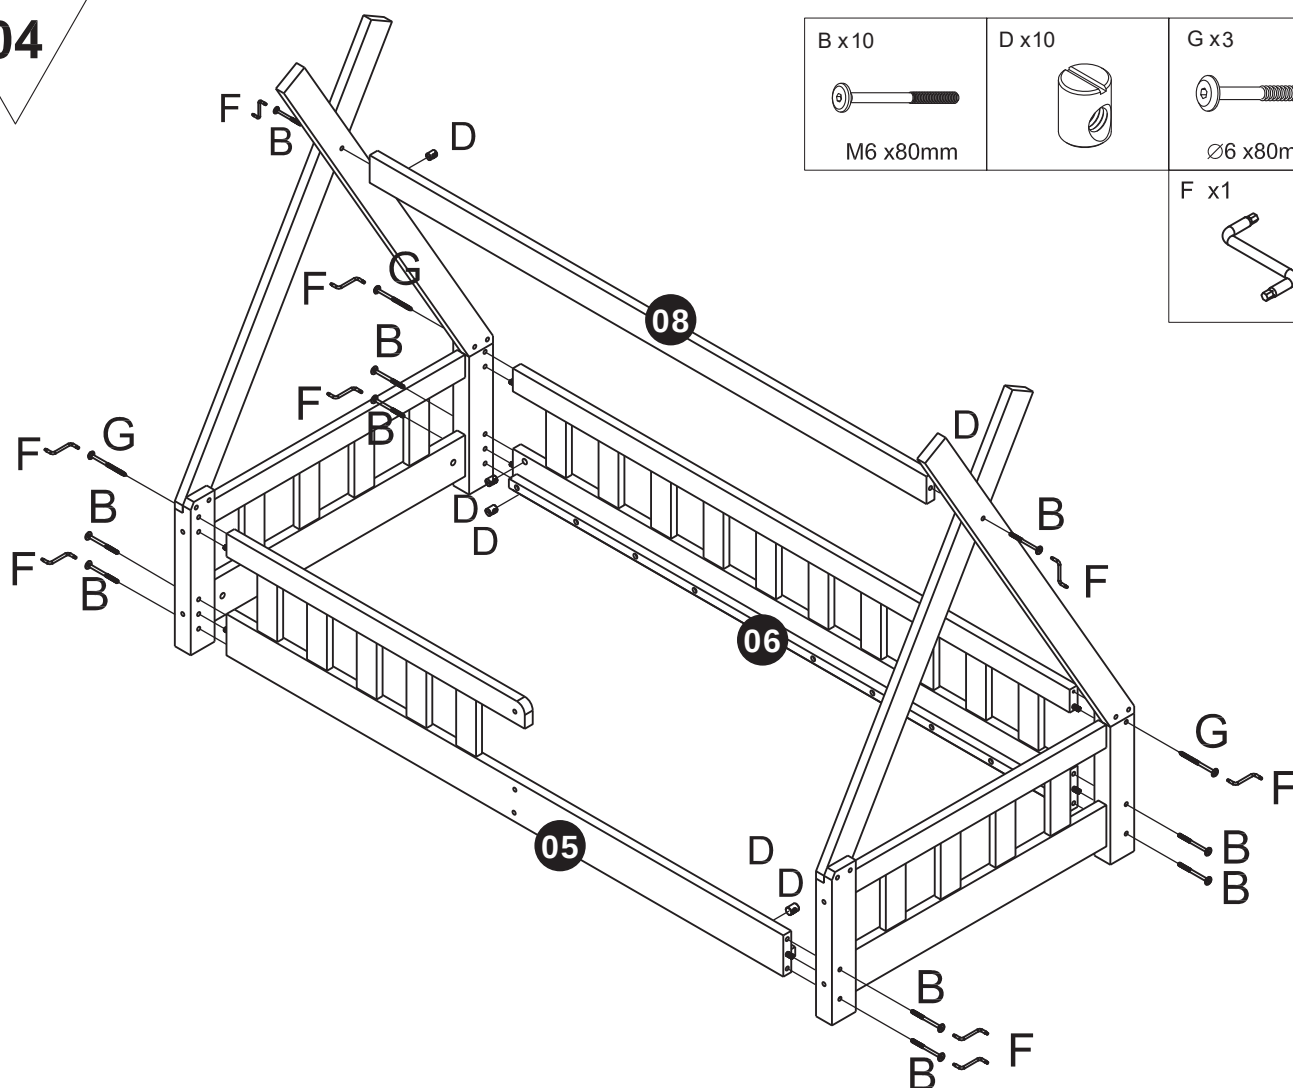

B x10  M6 x80mm	D x10 	G x3  Ø6 x80mm
		F x1 

05

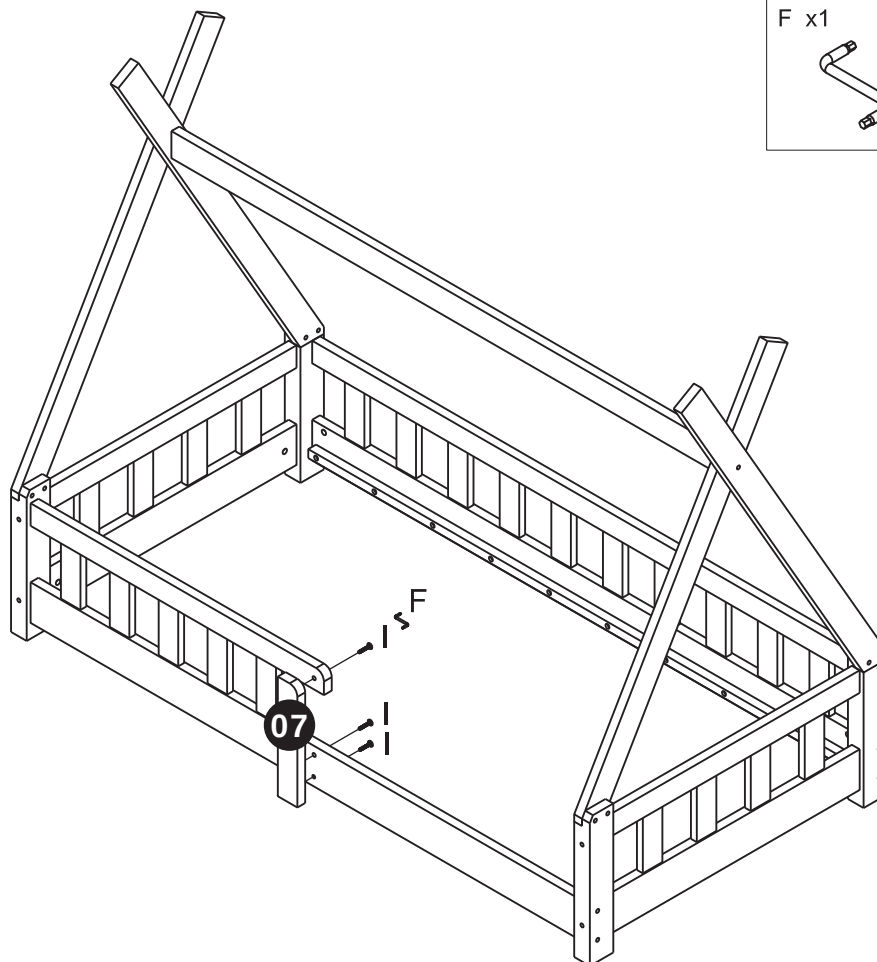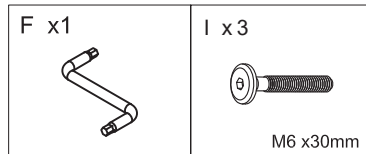

06

