

ASSEMBLY INSTRUCTIONS











383-000036




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.

HARDWARE LIST			QTY (pcs)
DH3		Door Holder	4
DW4		Wood Dowel 6 x 25mm	20
HD3		Handle 96mm	2
LG7		PVC Square Leg 40mm	4
MF2		Nail	25 (+/-3)
MG1		Magnet Catch KD	2 Sets
MN2		Mini Fix 15mm	8 Sets
SC3		Screw M3.5 x 14mm	26
SC11		Screw M4 x 25mm	4
SC25		FH Screw M5 x 40mm	8

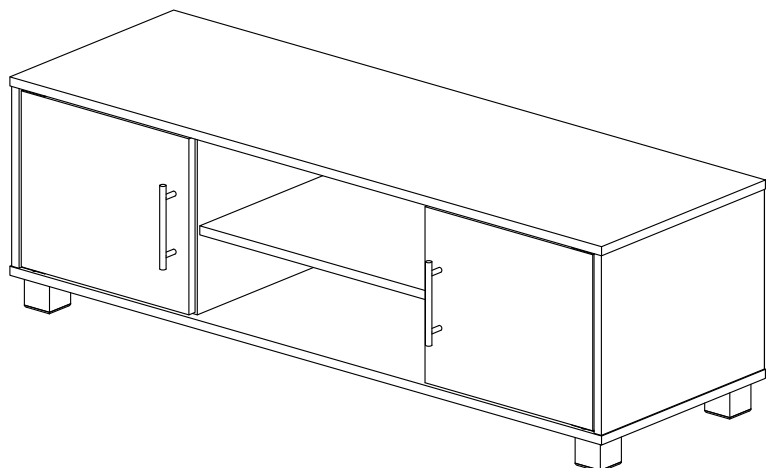


Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Center Panel (L)	1 pc
D	Center Panel (R)	1 pc
E	Door Panel	2 pcs
F	Top Panel	1 pc
G	Bottom Panel	1 pc
H	Shelf Panel	1 pc
I	Backboard	1 pc

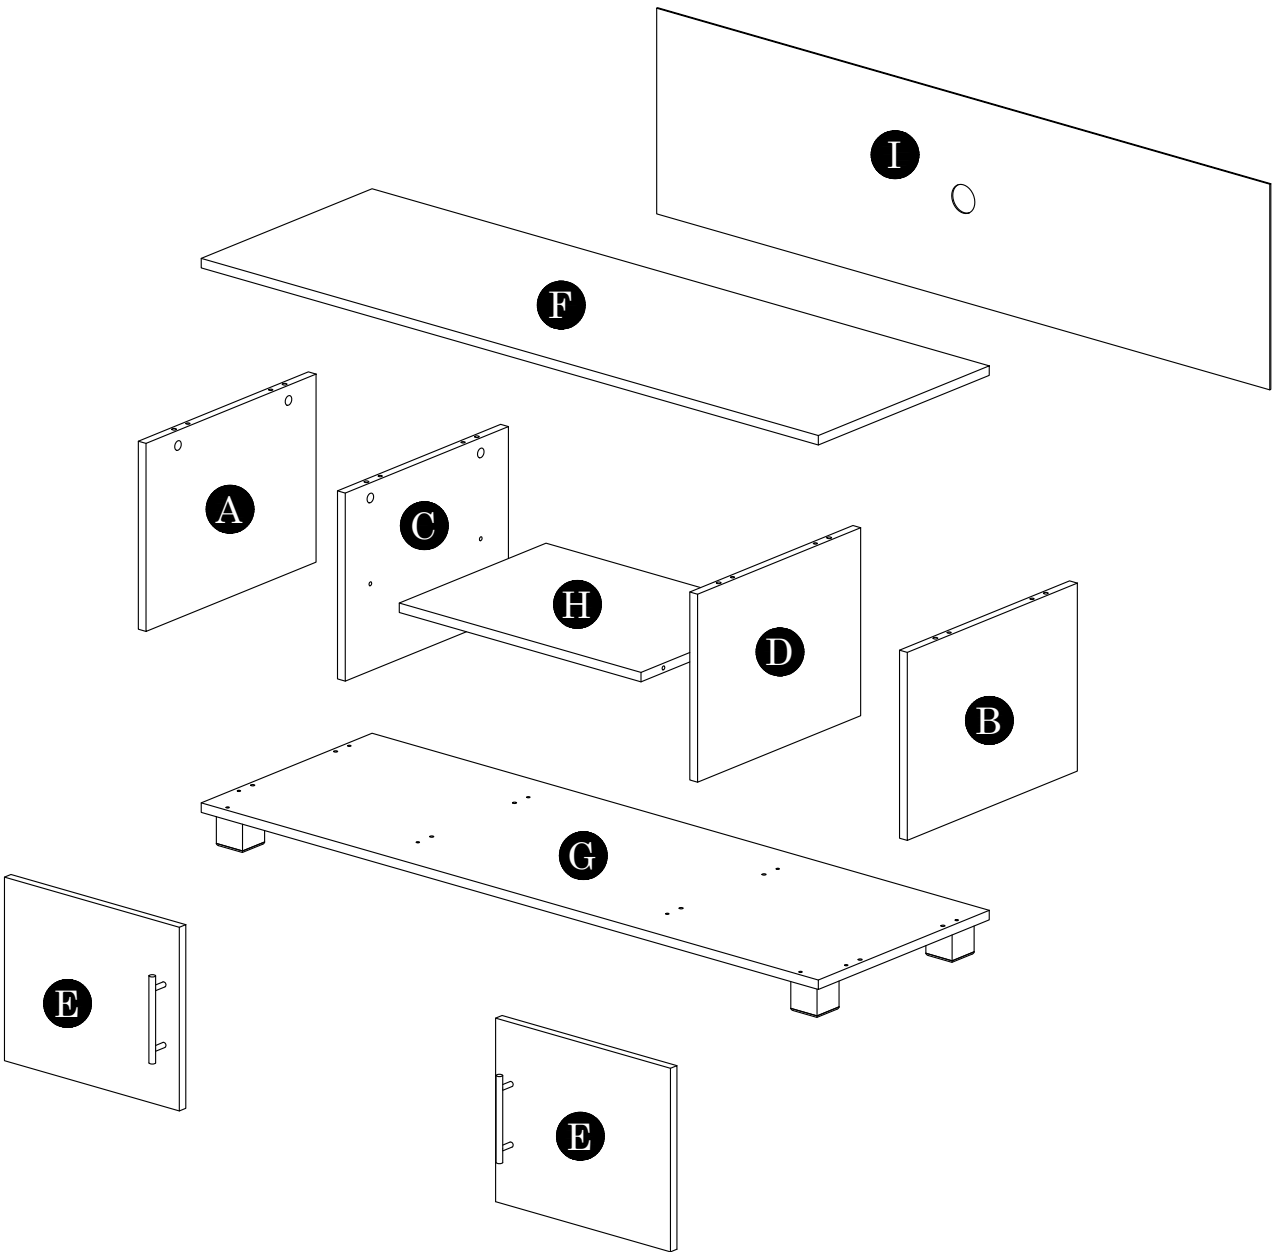




STEP 1

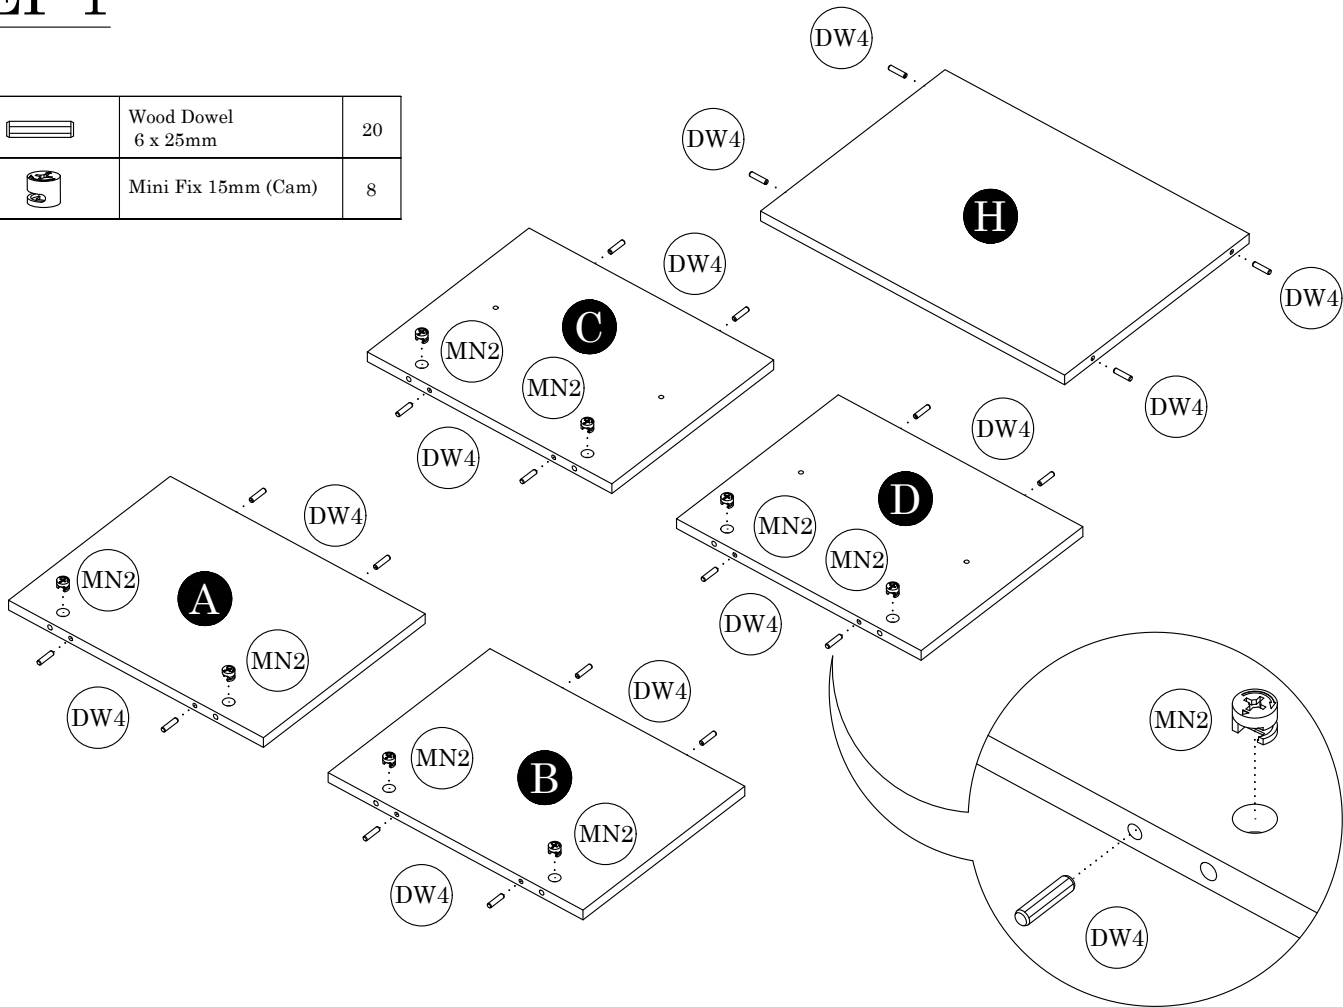DW4		Wood Dowel 6 x 25mm	20
MN2		Mini Fix 15mm (Cam)	8






STEP 2

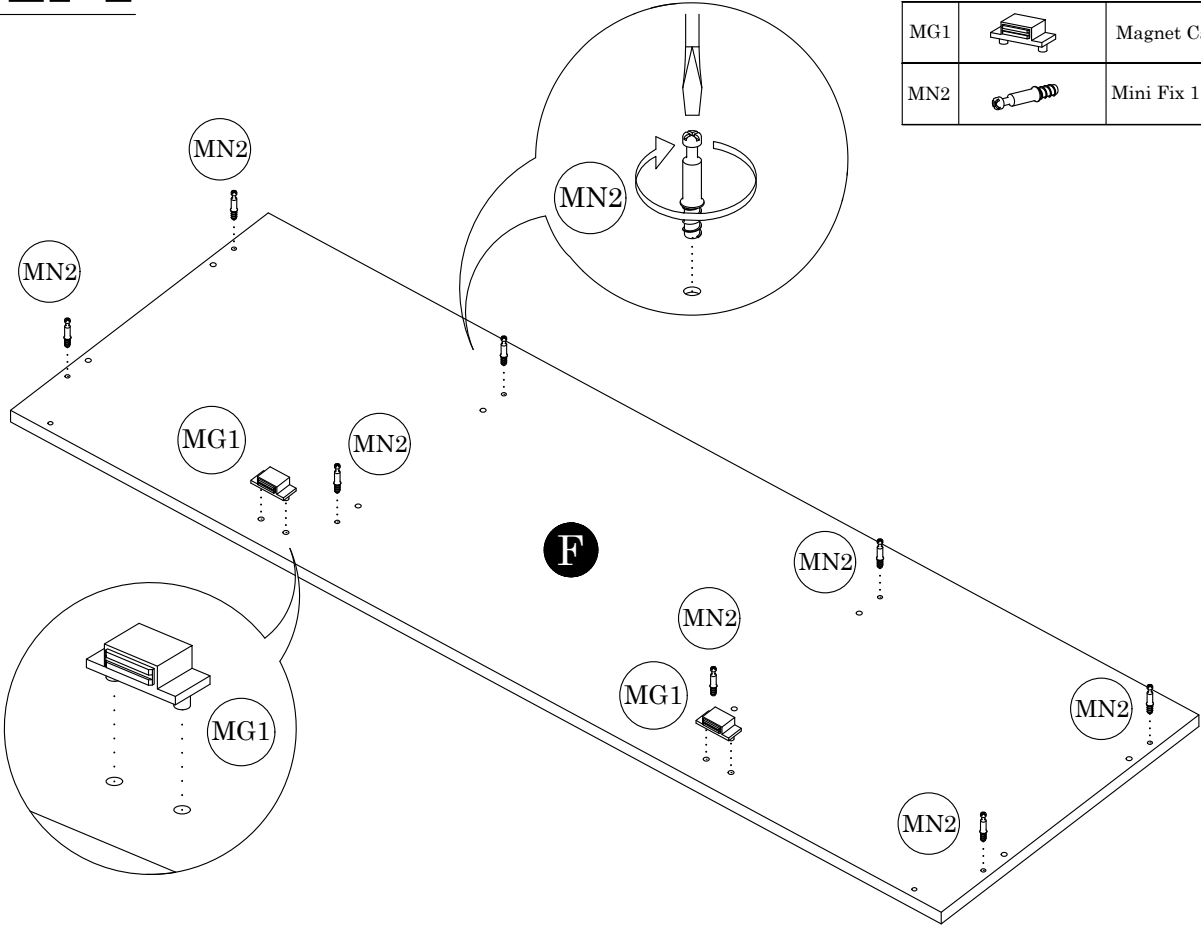MG1		Magnet Catch KD	2
MN2		Mini Fix 15mm (Bolt)	8




STEP 3

SC3		Screw M3.5mm x 14mm	16
LG7		PVC Square Leg 40mm	4

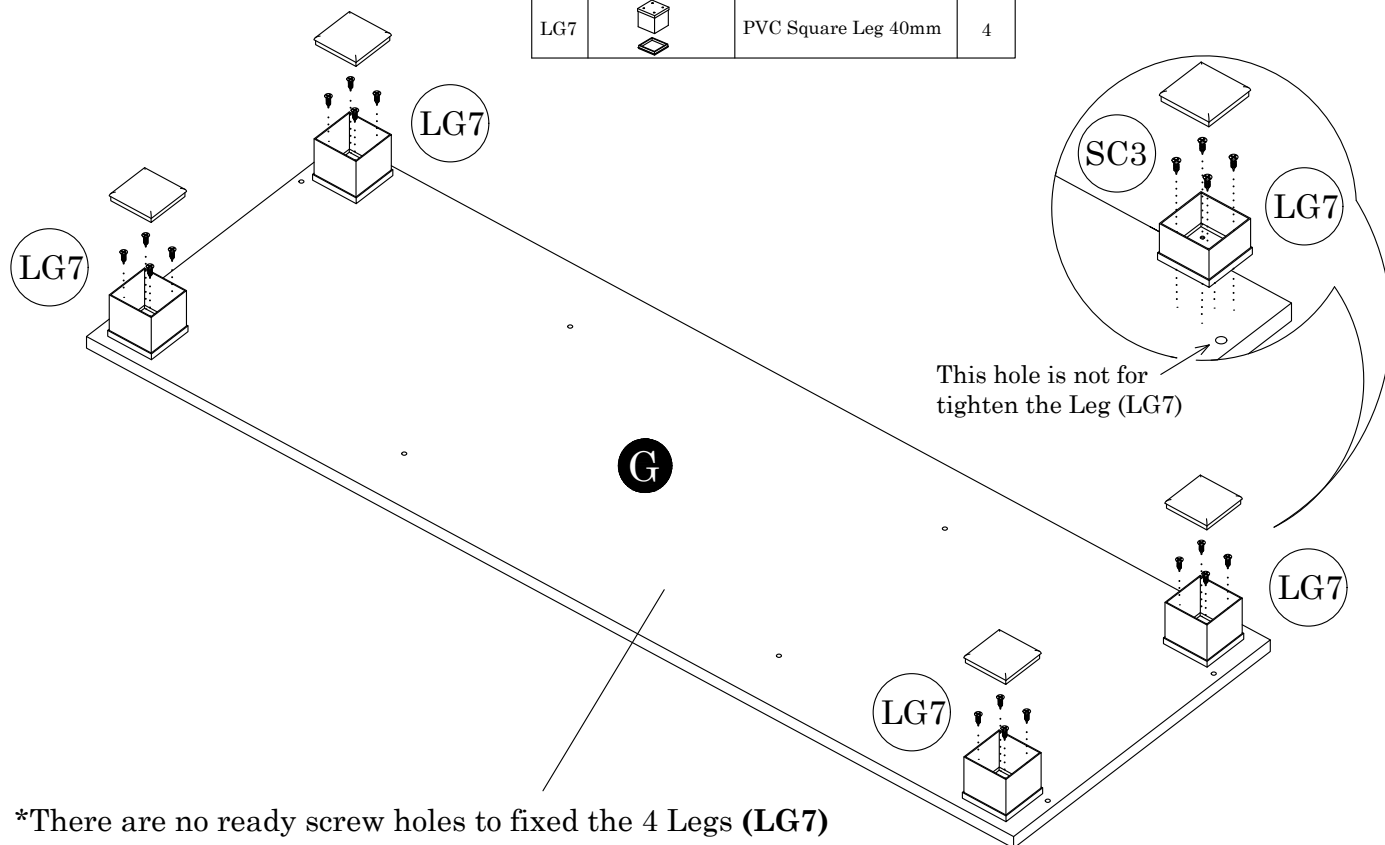


- *There are no ready screw holes to fixed the 4 Legs (**LG7**)
- *You can tighten the Leg (**LG7**) freely with given screw m3.5 x 14mm (**SC3**) x4 at any convenient location on the **Panel G**


STEP 4

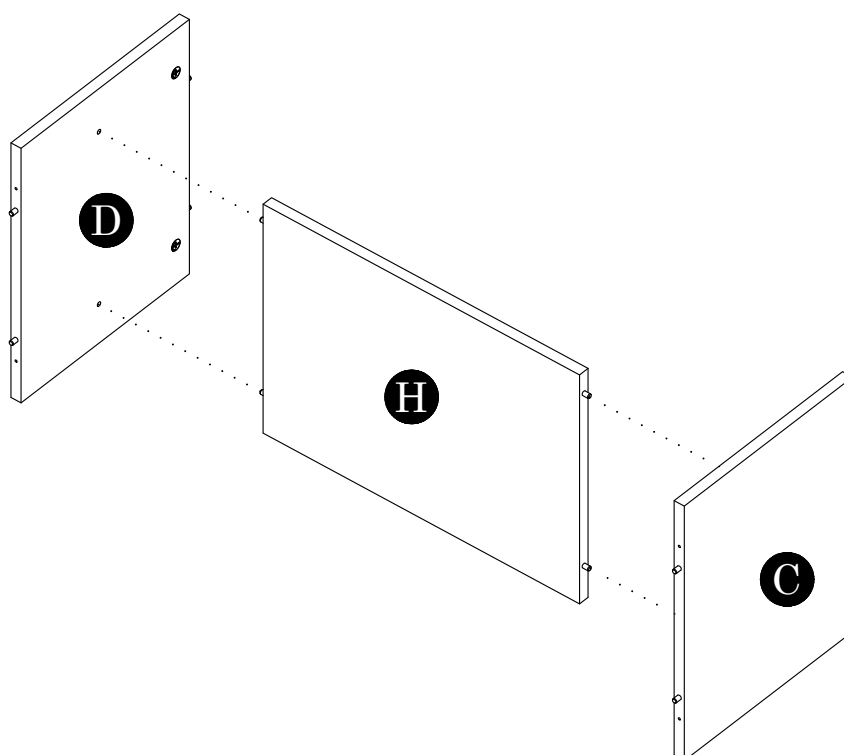


STEP 5

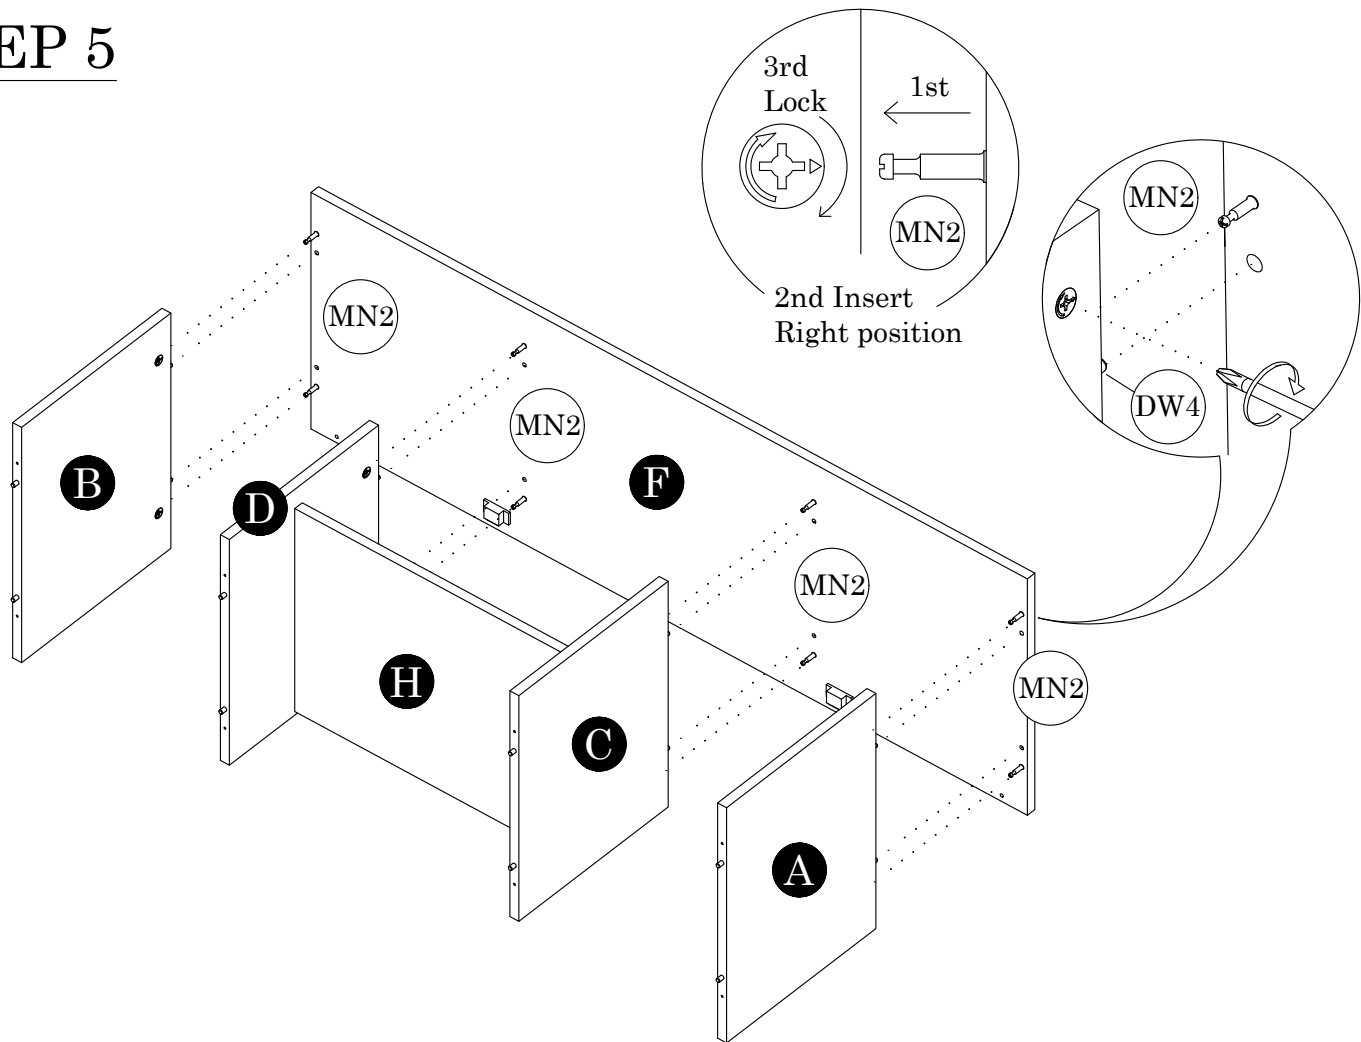


STEP 6

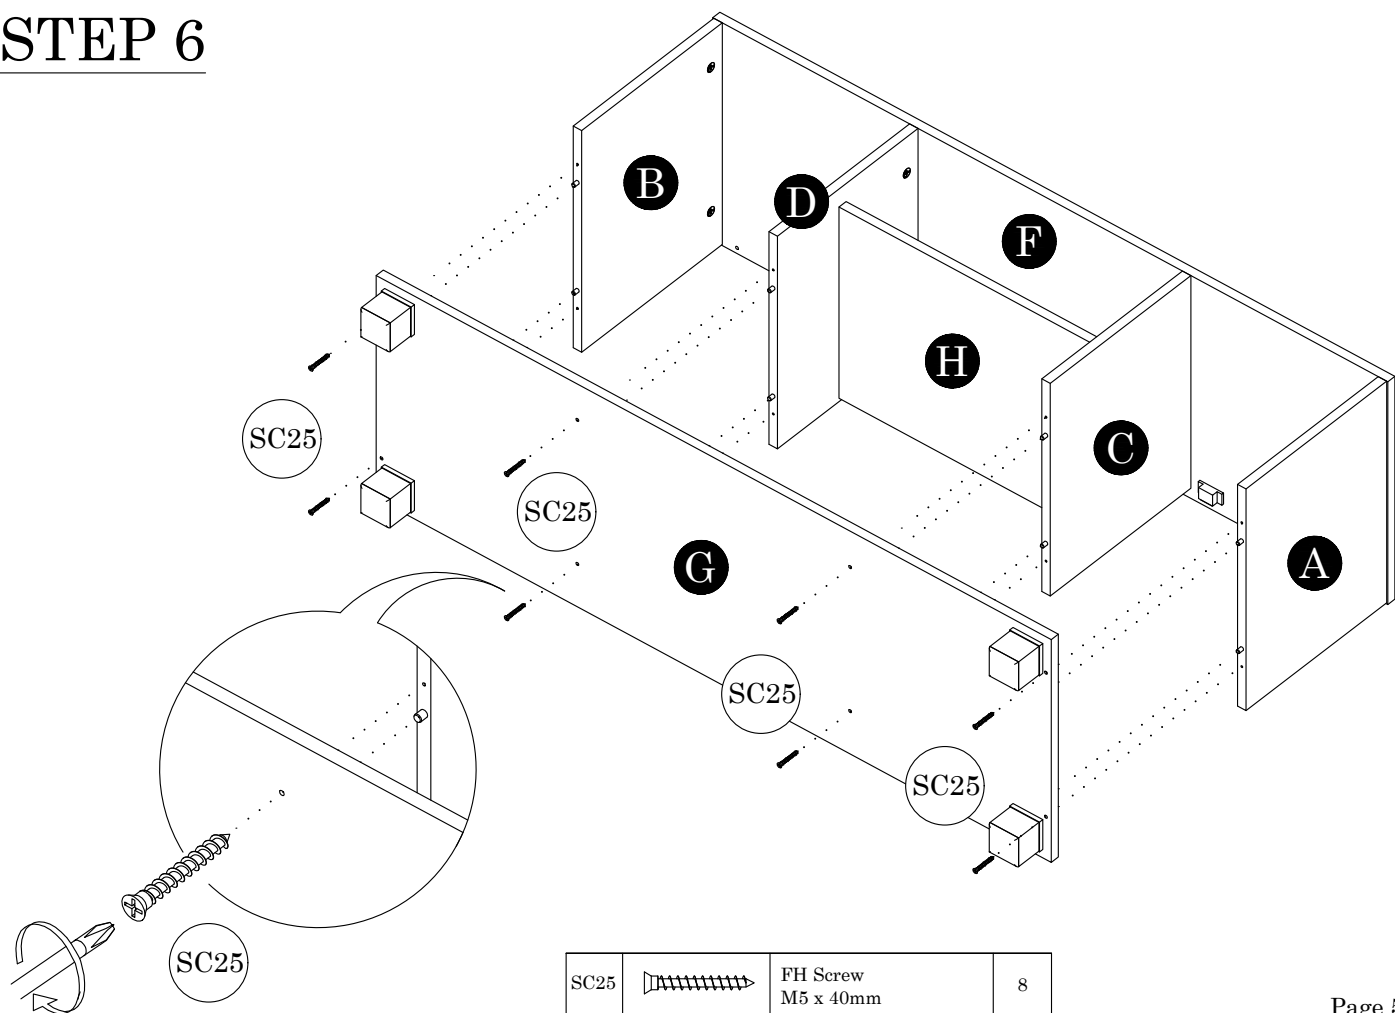

SC25		FH Screw M5 x 40mm	8
------	---	-----------------------	---

STEP 7

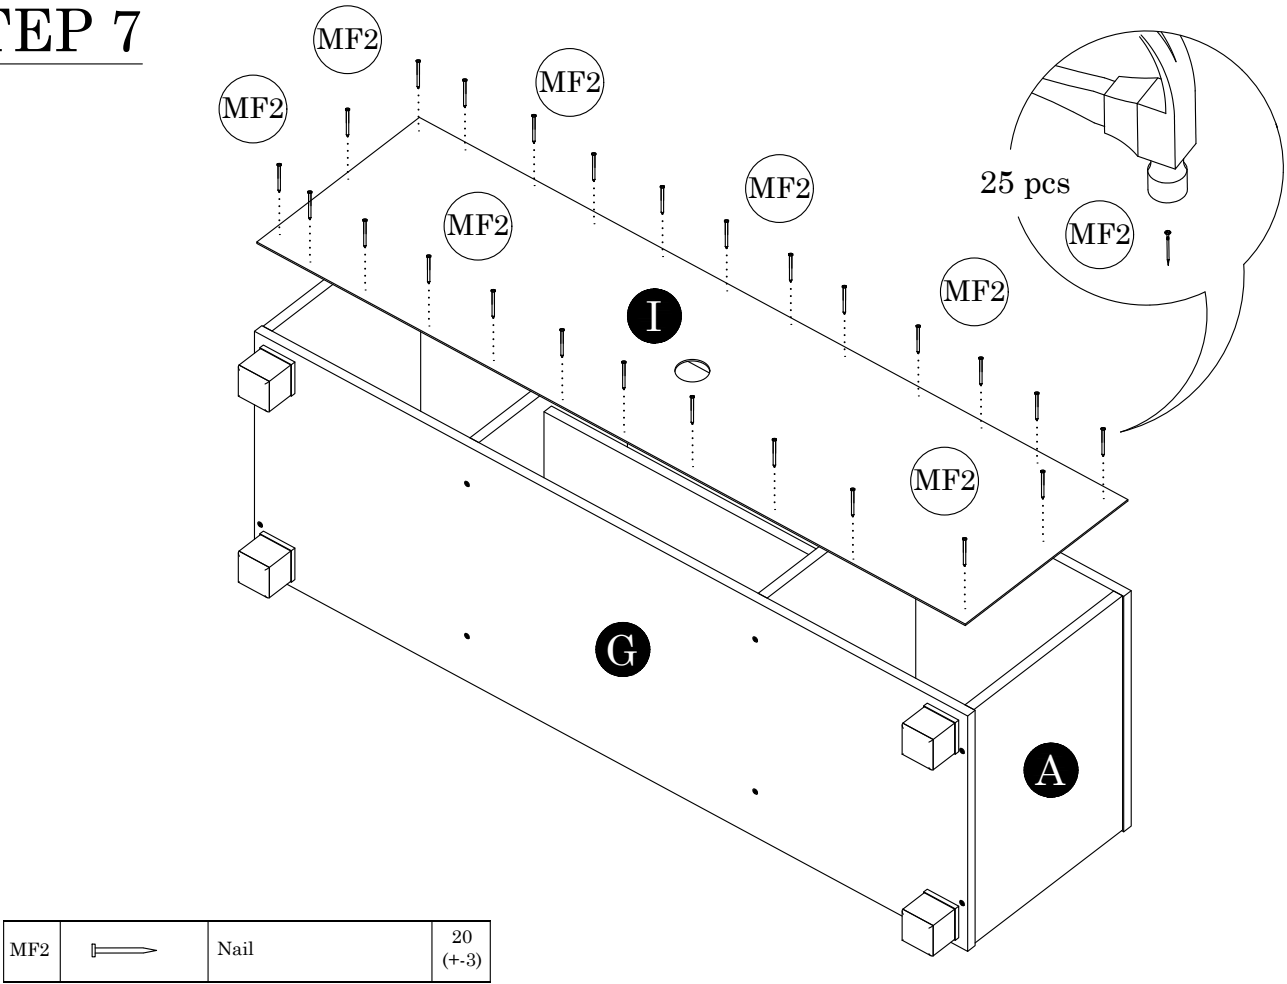

STEP 8

