

ASSEMBLY INSTRUCTIONS


383-000102




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.

HARDWARE LIST			QTY (pcs)
DW4		Wood Dowel 6 x 25mm	51
LG1		Leg Pin	10
MF1		Alley Key	1
MN2		Mini Fix 15mm	12 Sets
PF11		Small L Bracket	8
SC3		Screw M3.5 x 14mm	16
SC13		Screw M4 x 30mm	10
SC24		JCBCW M6 x 50mm	4
SC25		FH Screw M5 x 40mm	24

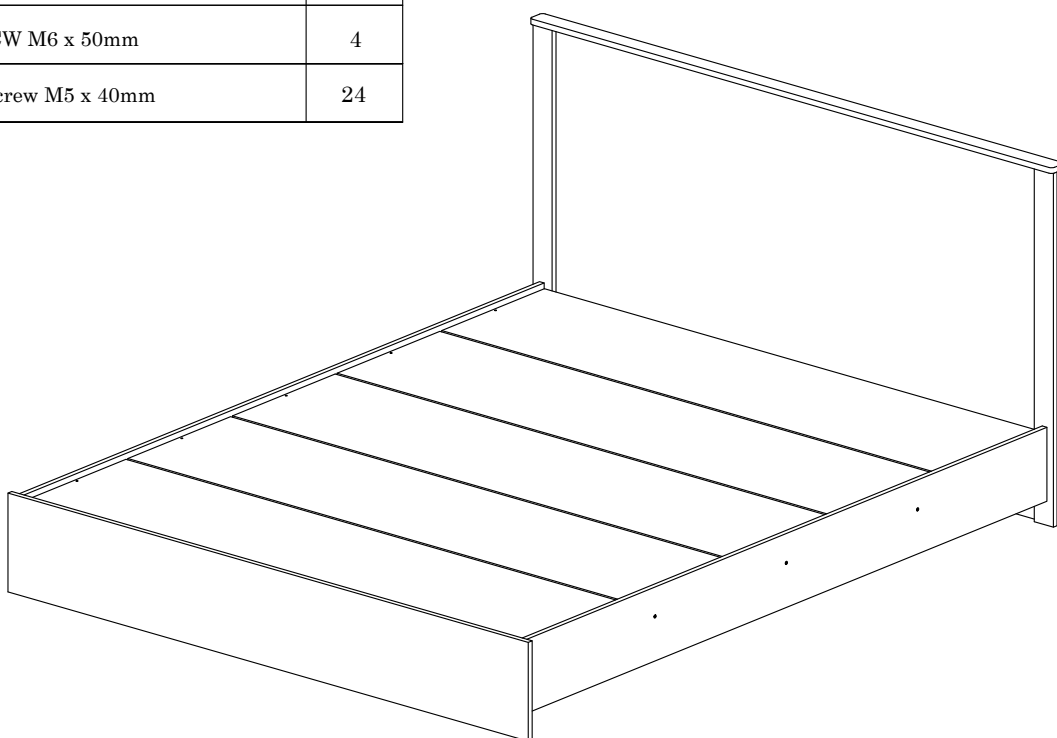


Parts List		QTY
A	Head Board	1 pc
B	Foot Board	1 pc
C	Head-Top Panel	1 pc
D	Head-Crossbar Panel	2 pcs
E	Bed Base Panel	5 pcs
F	Side Panel (L)	1 pc
G	Side Panel (R)	1 pc
H	Center Panel (L)	1 pc
I	Center Panel (R)	1 pc
J	Big Crossbar	2 pcs
K	Small Center Crossbar	6 pcs
L	Small Wood	8 pcs

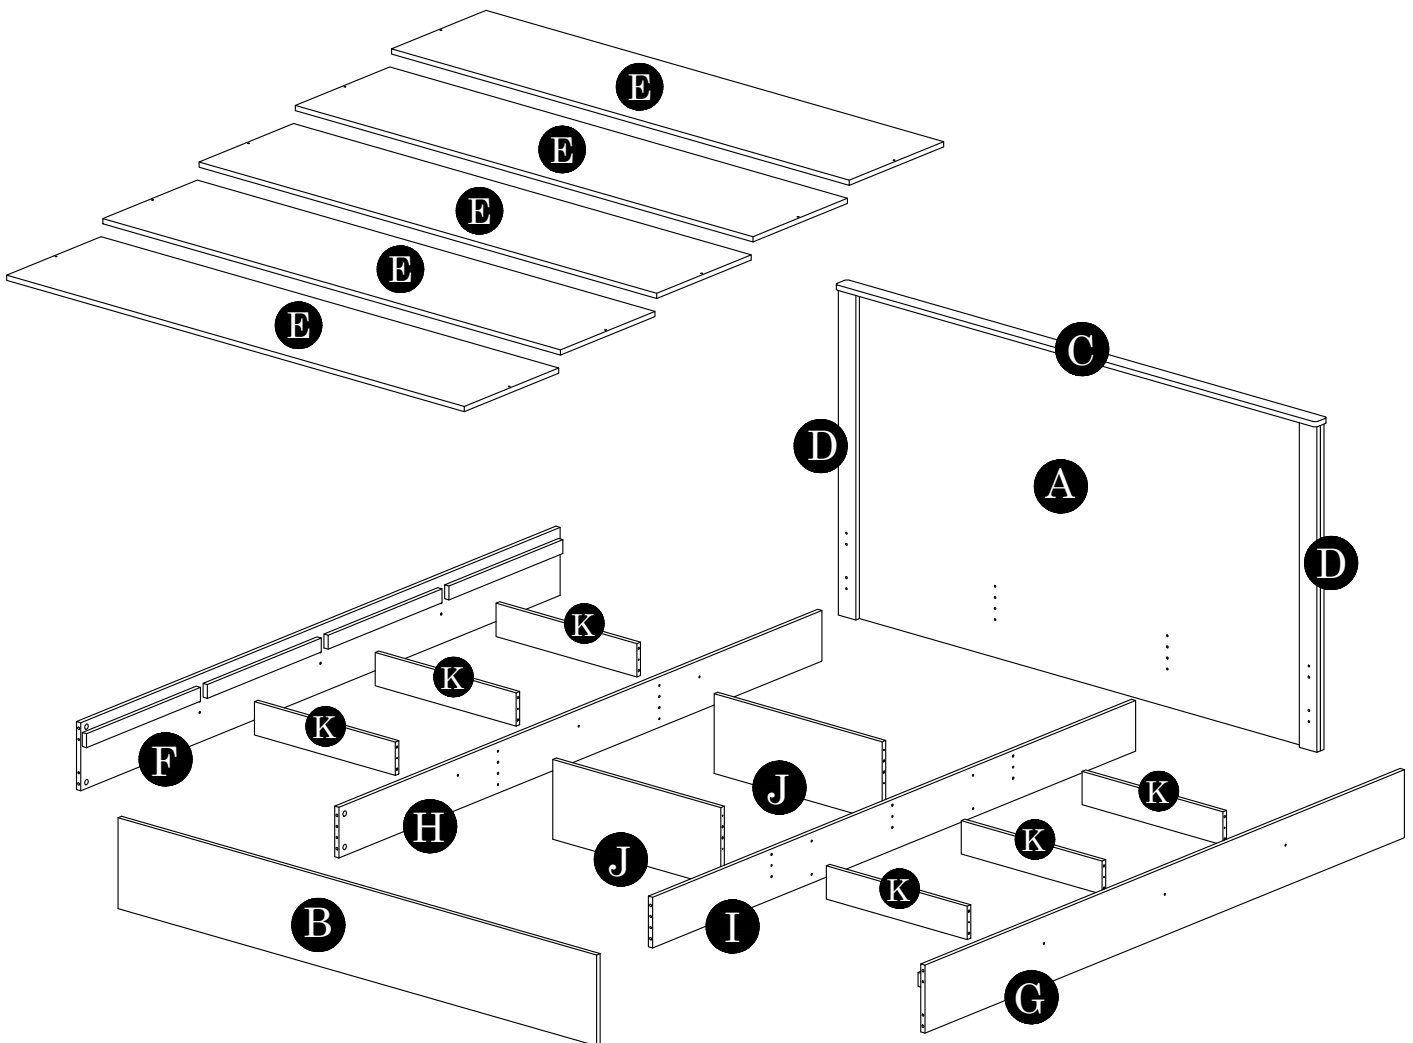


STEP 1

DW4		Wood Dowel 6 x 25mm	3
LG1		Leg Pin	3
MN2		Mini Fix 15mm	4 Sets

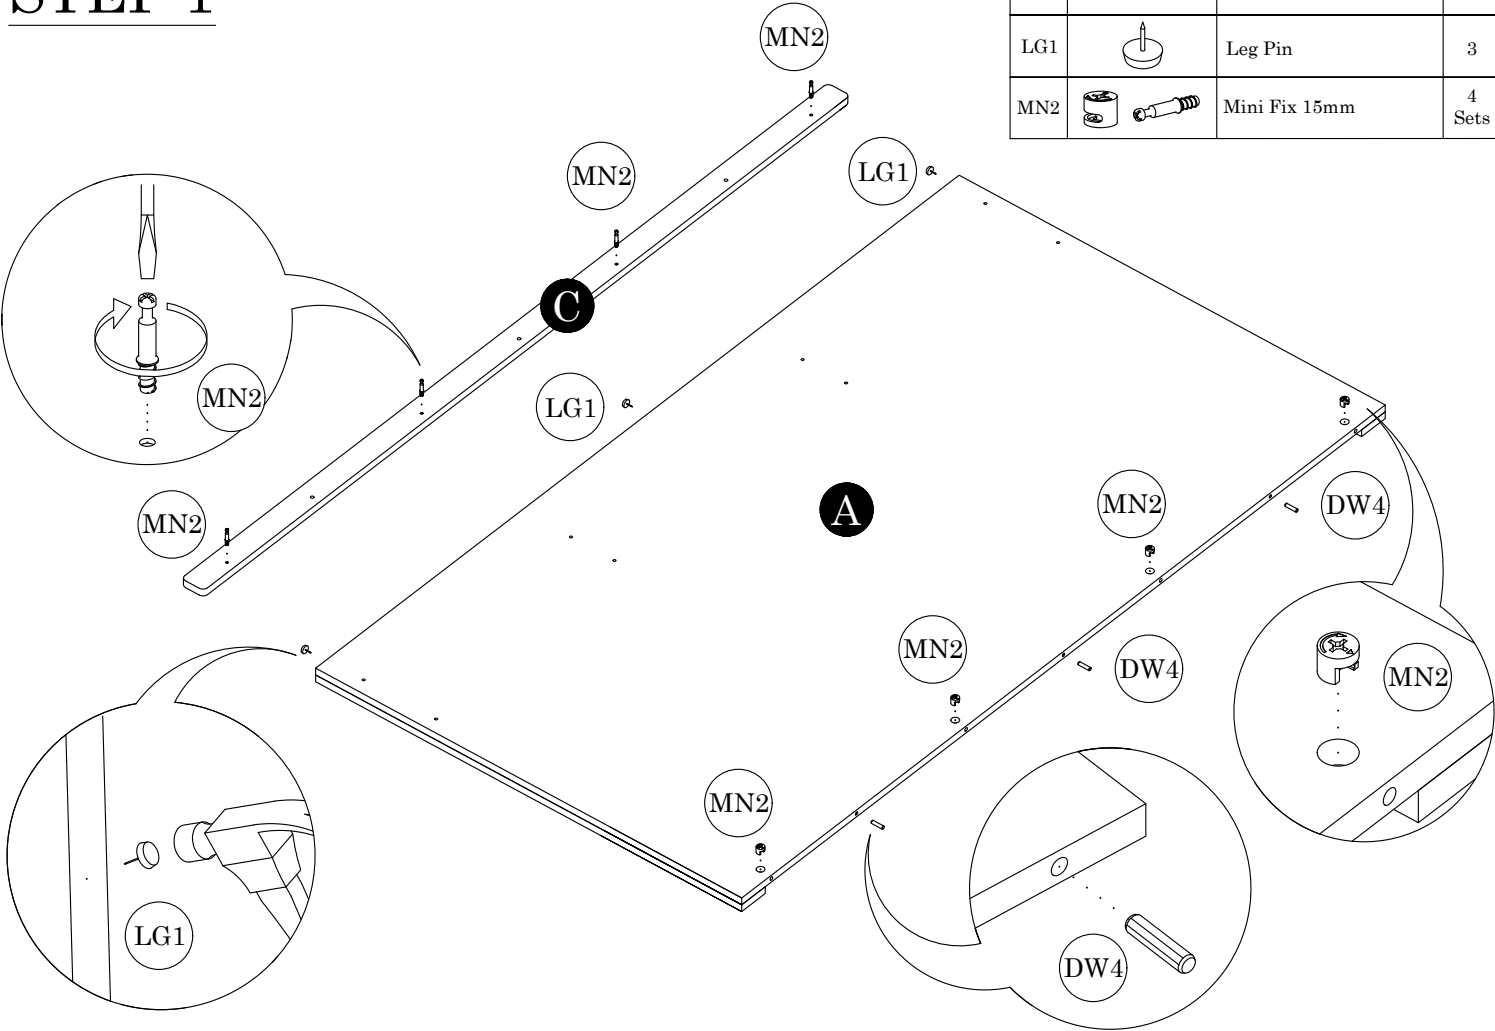


STEP 2

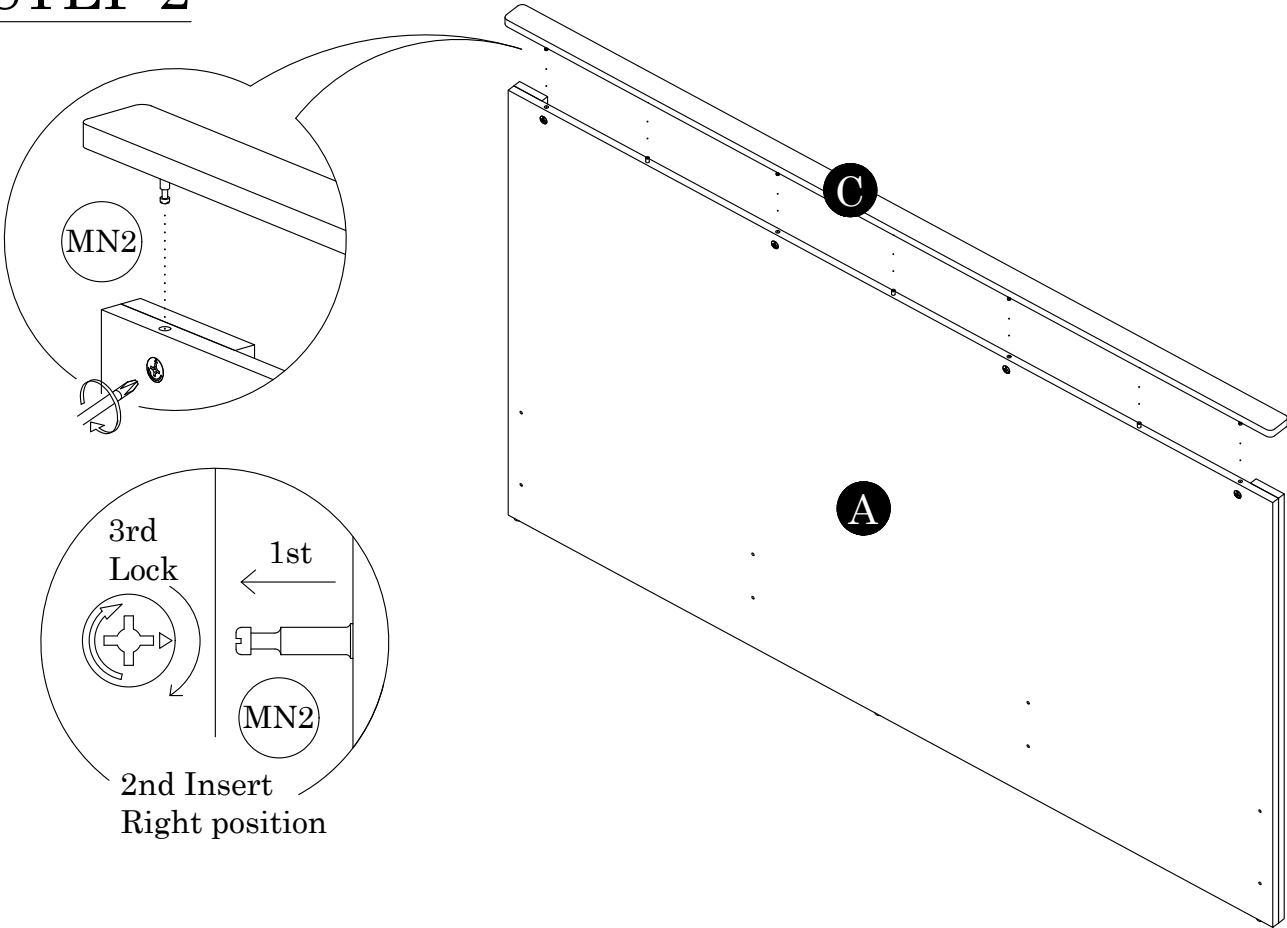


STEP 3

DW4		Wood Dowel 6 x 25mm	16
MN2		Mini Fix 15mm (Cam)	8

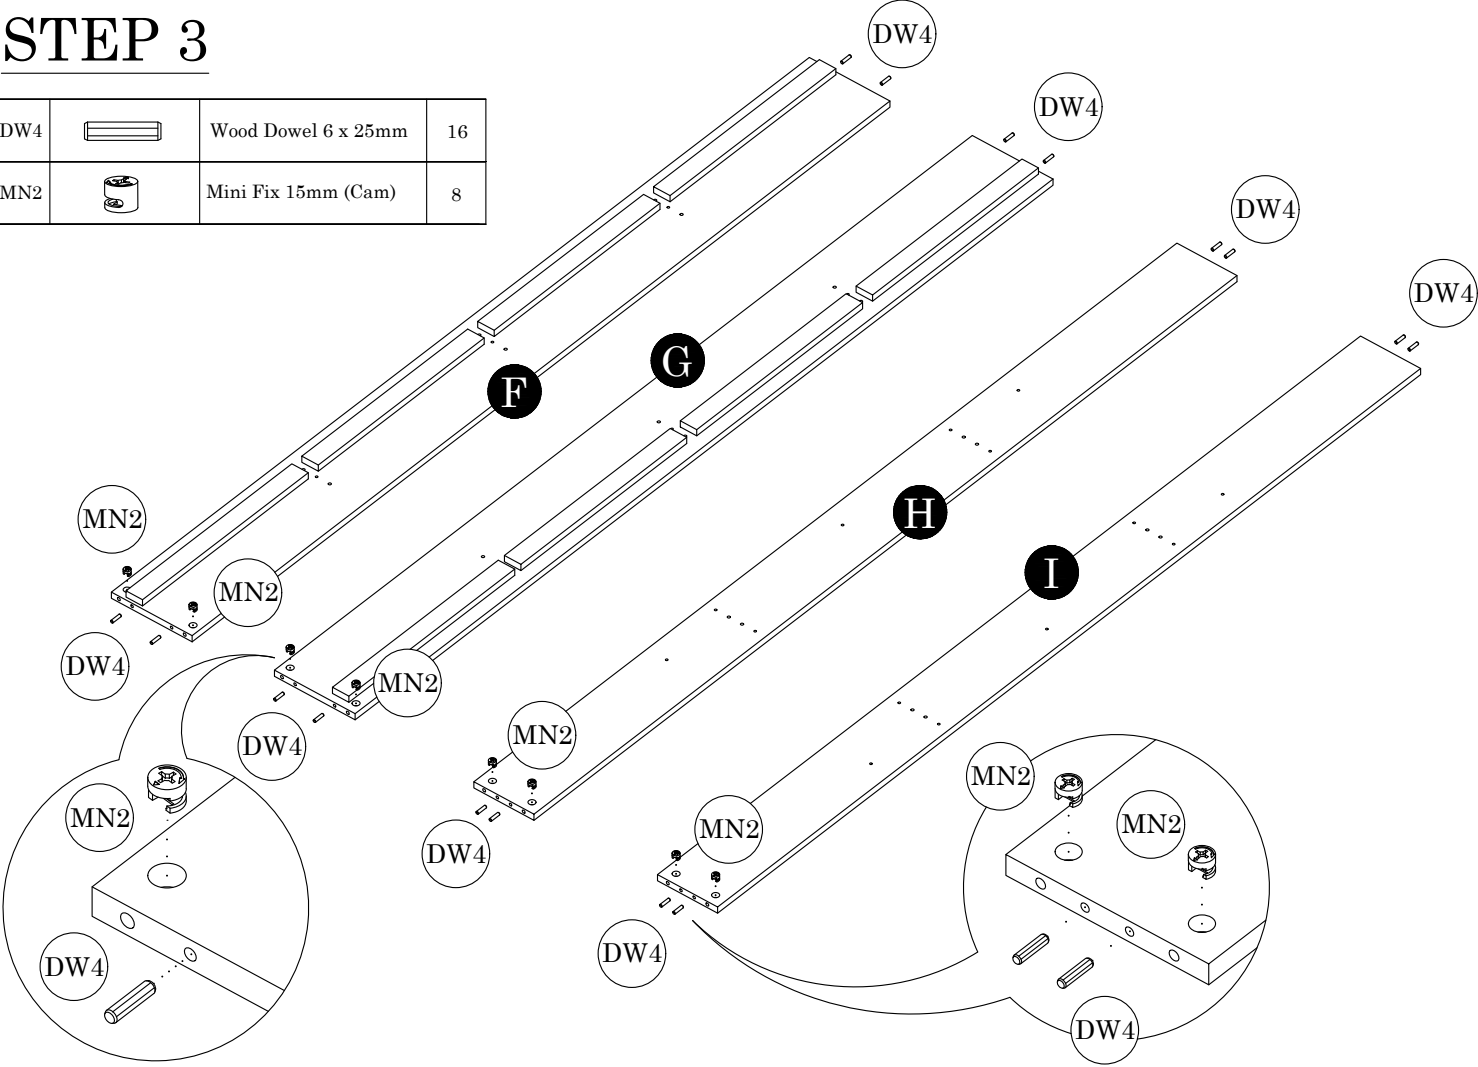


STEP 4


DW4		Wood Dowel 6 x 25mm	32
LG1		Leg Pin	7
MN2		Mini Fix 15mm (Bolt)	8

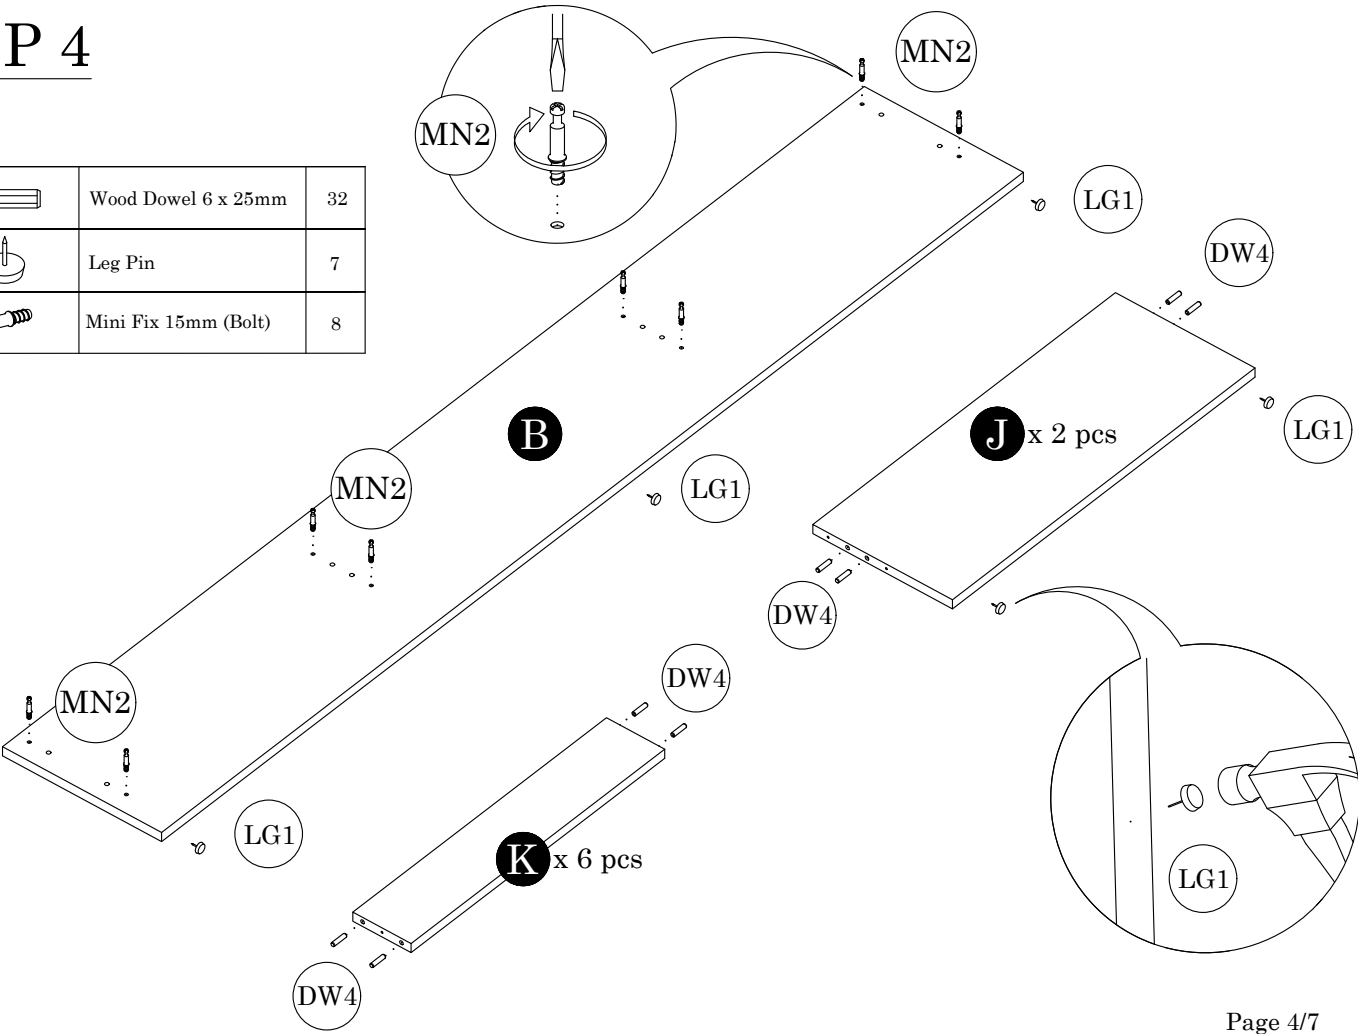


STEP 5

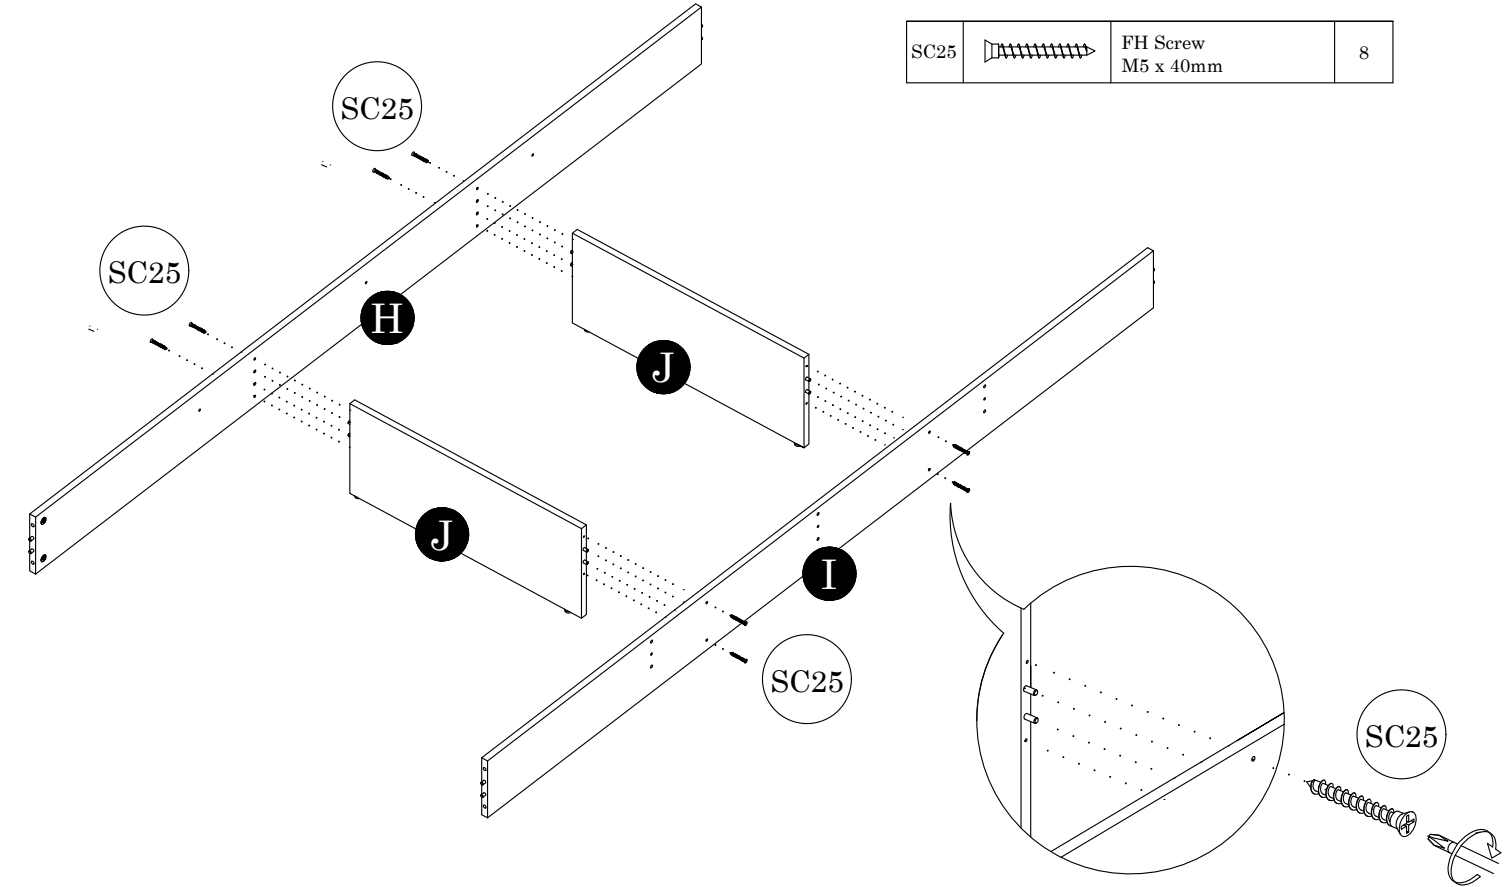


STEP 6

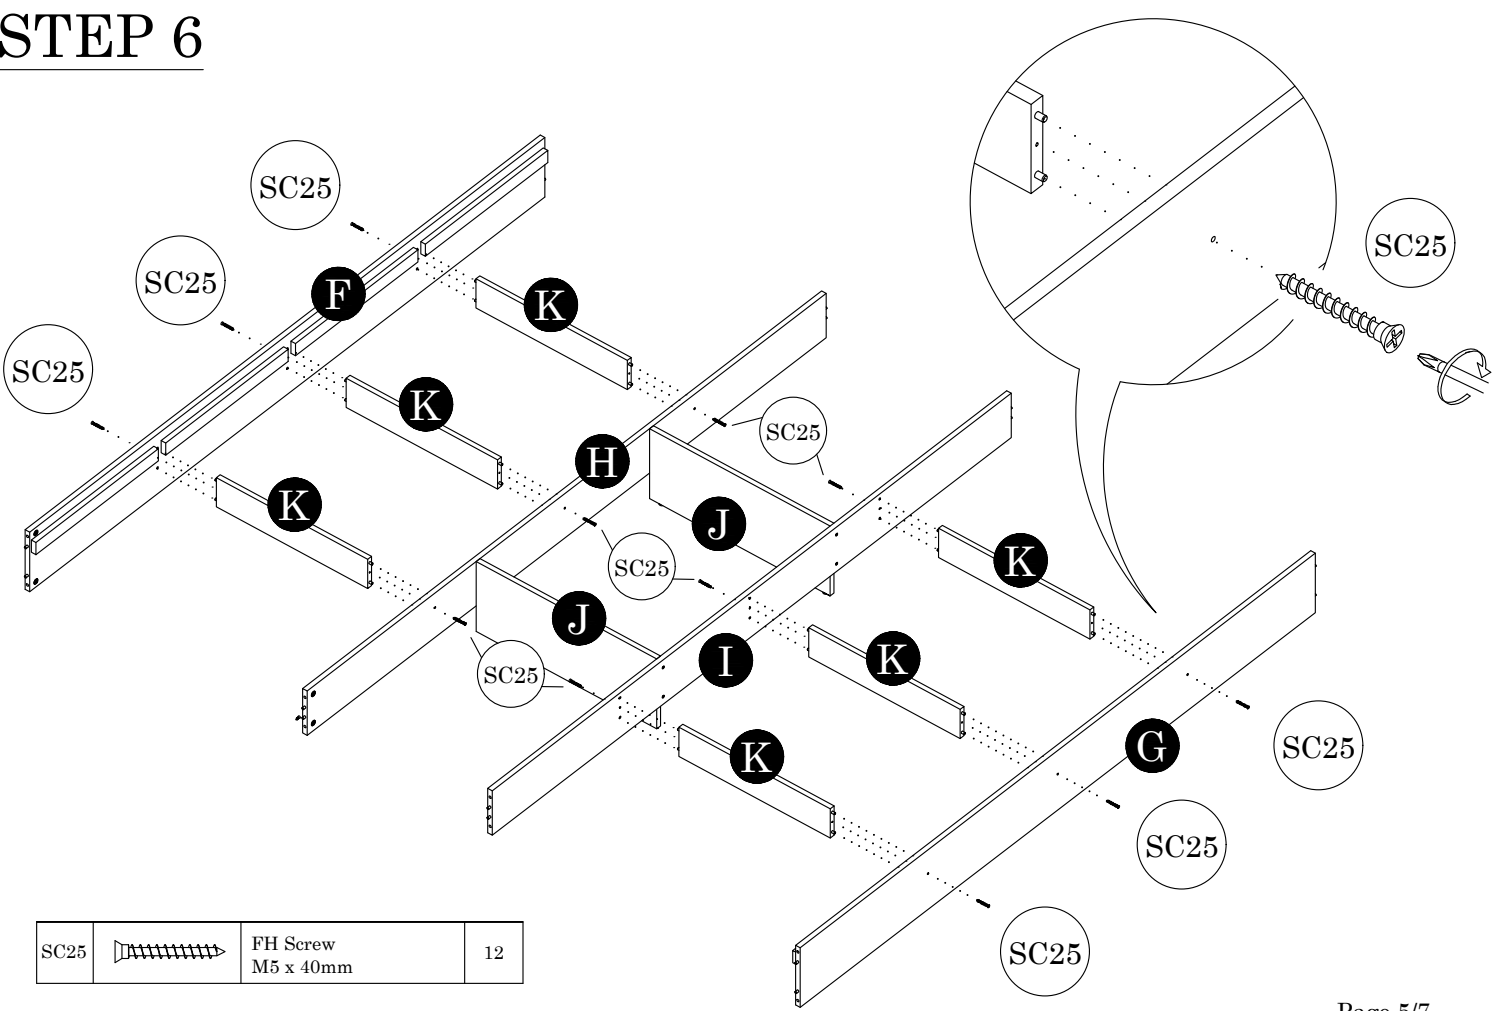

STEP 7

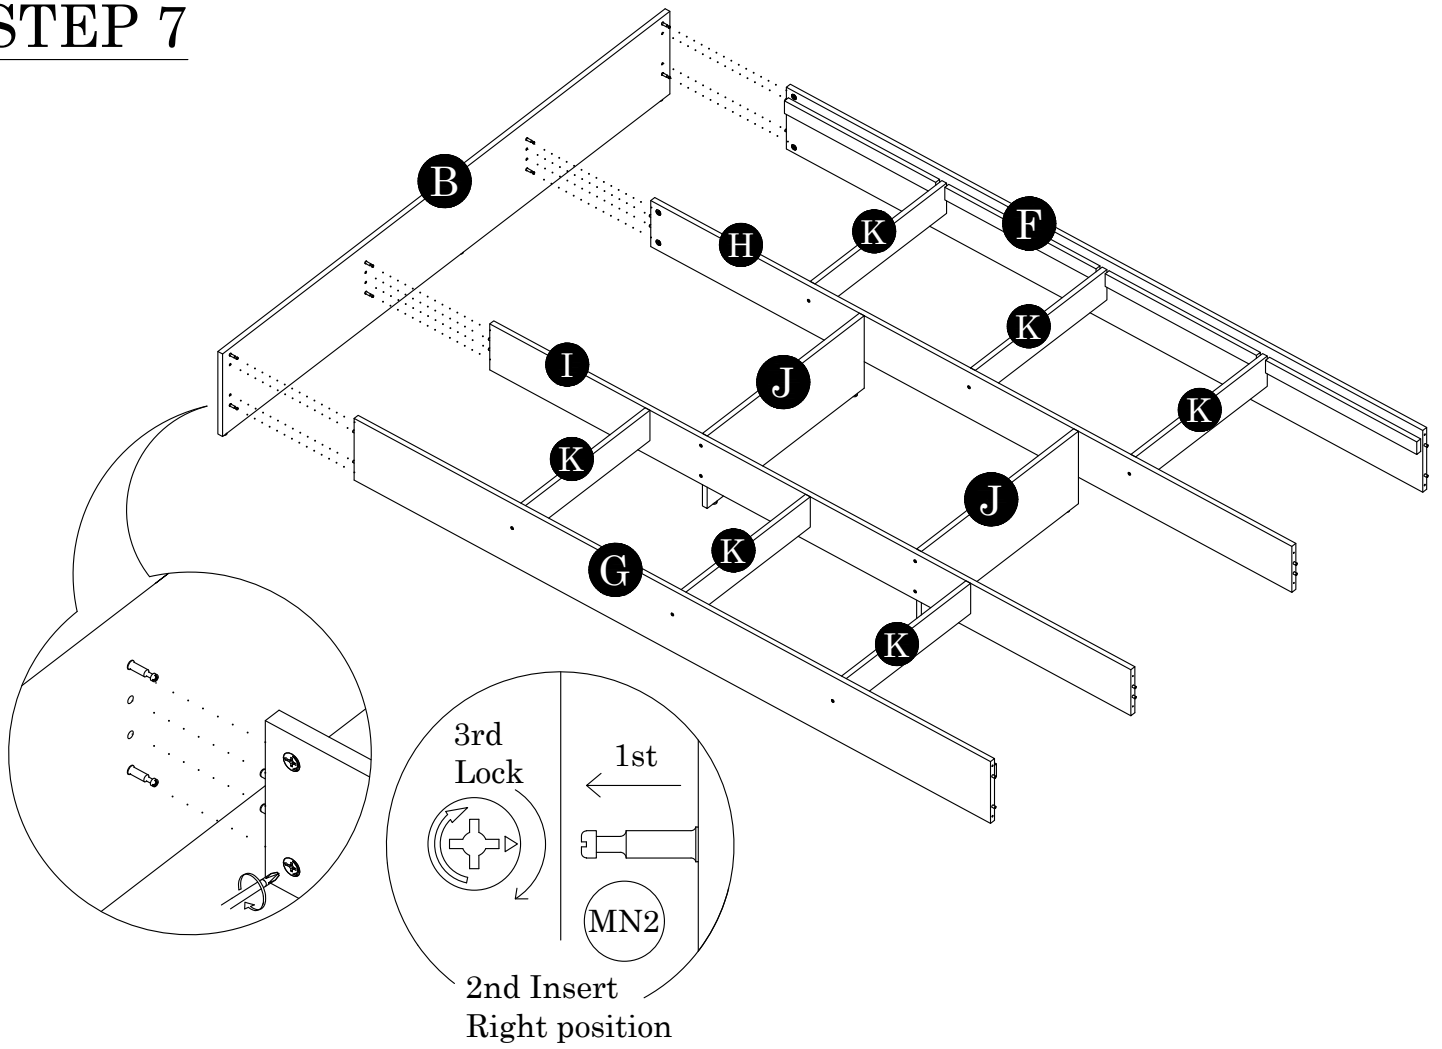


STEP 8

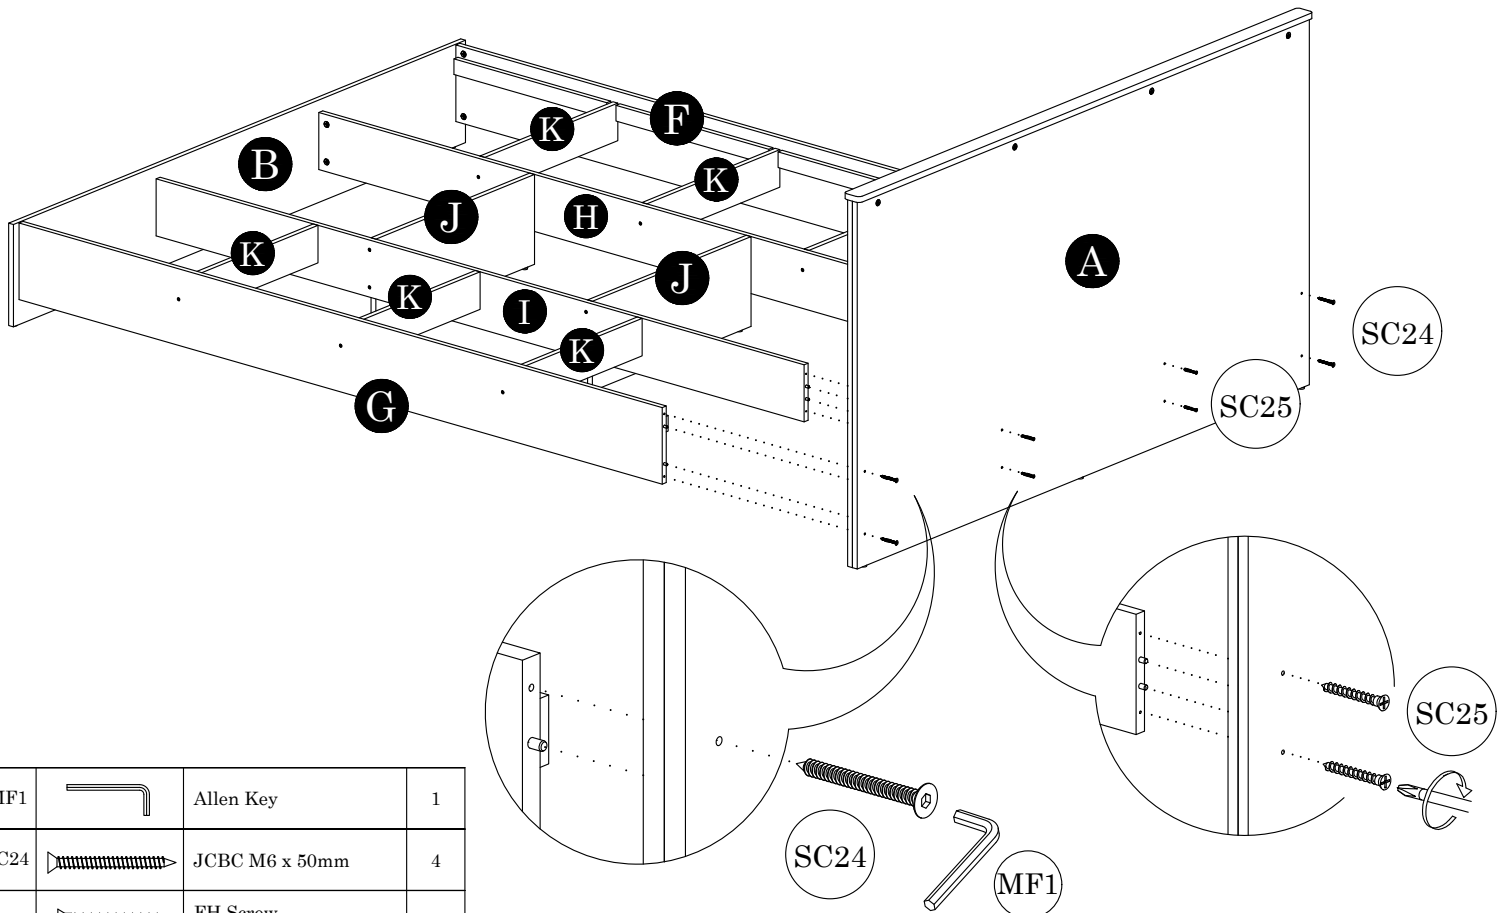


MF1		Allen Key	1
SC24		JCBC M6 x 50mm	4
SC25		FH Screw M5 x 40mm	4

STEP 9

PL11		Small L Bracket	8
SC3		Screw M3.5mm x 14mm	16

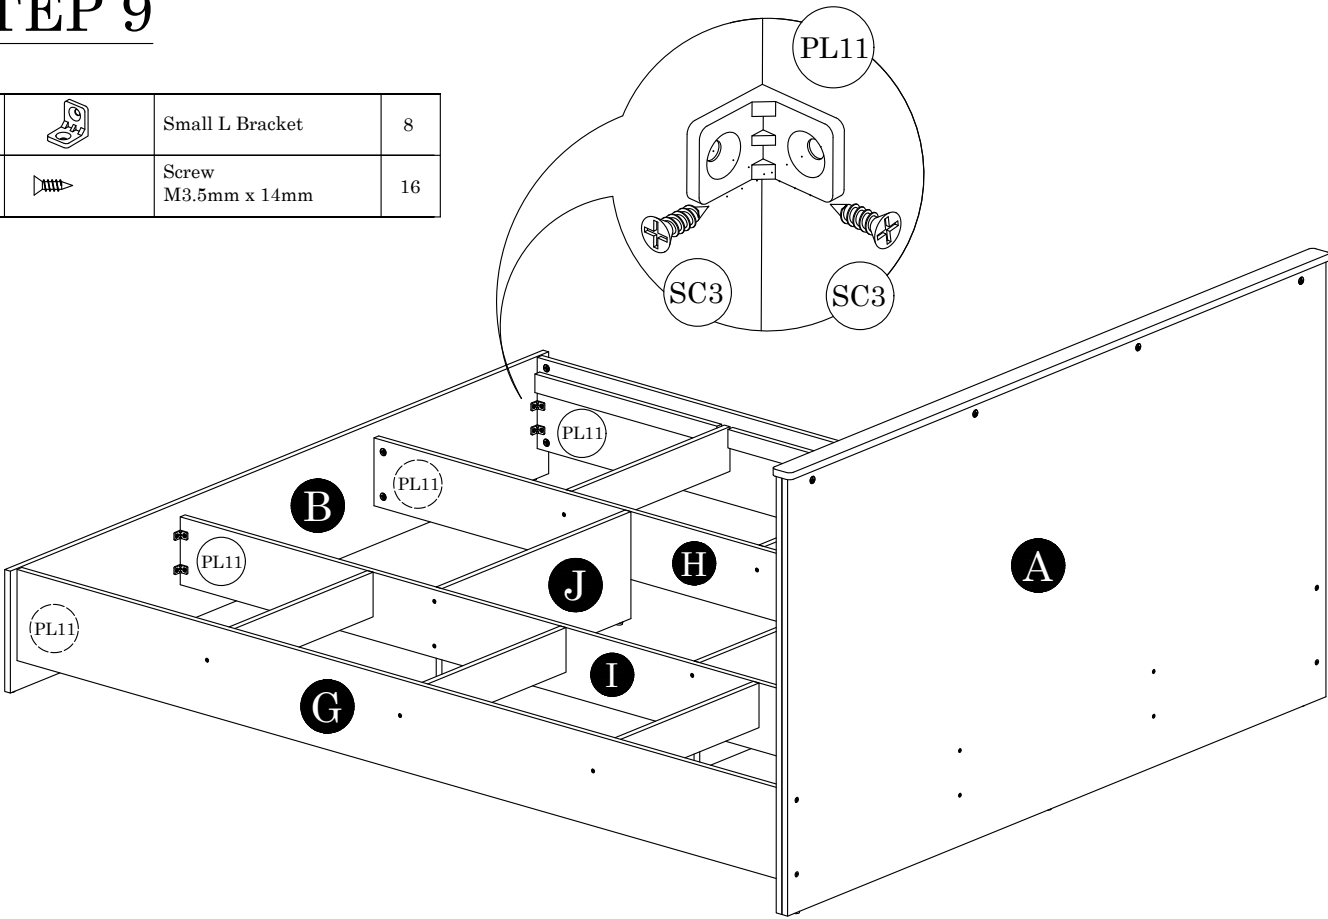

STEP 10

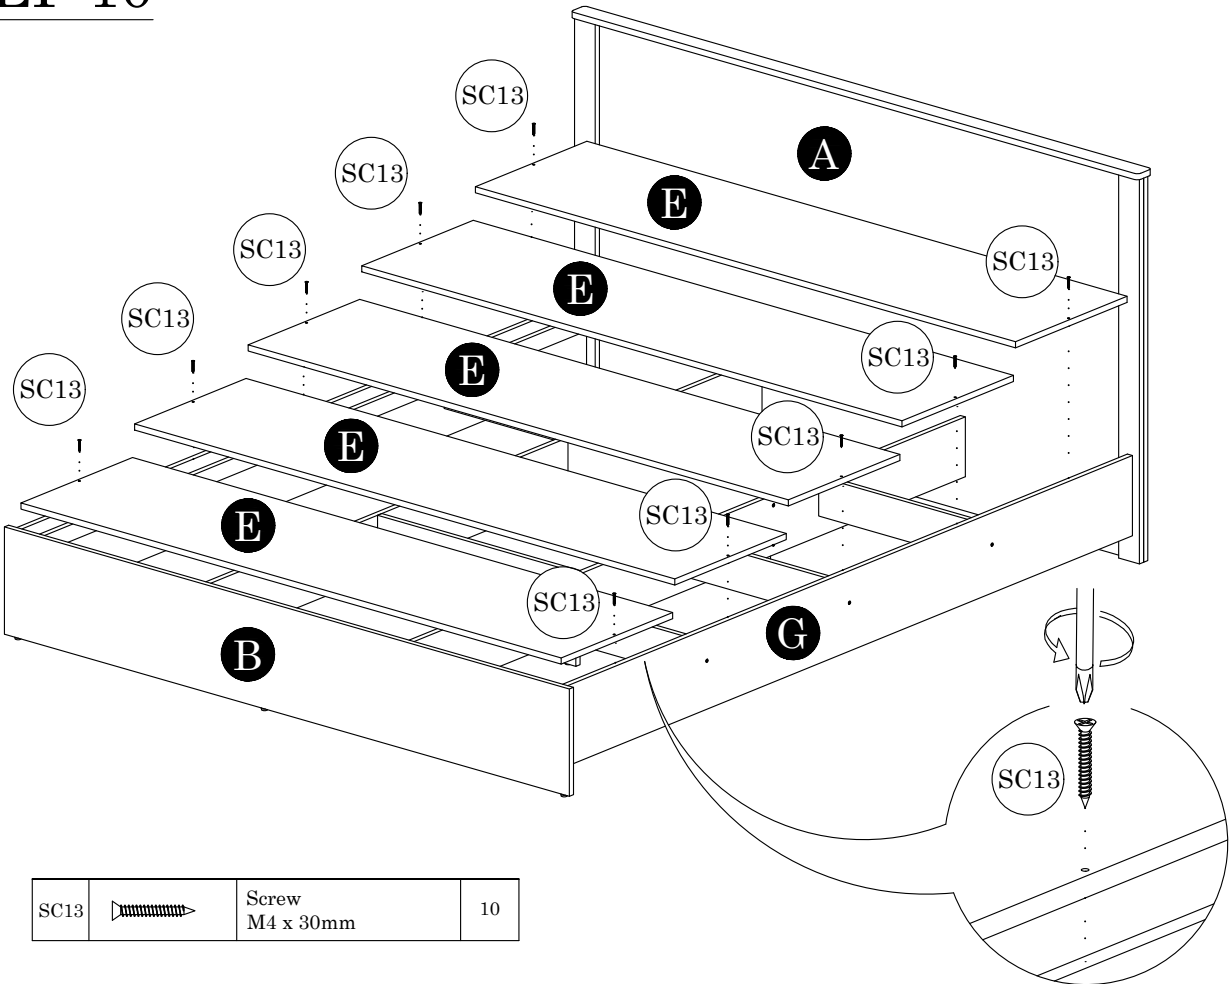

SC13		Screw M4 x 30mm	10
------	---	--------------------	----