

ASSEMBLY INSTRUCTIONS

ALVIA PAKOWORLD THREE-LEAF WARDROBE LOFT WENGE

383-000168




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.


HARDWARE LIST			QTY (pcs)
DH4		Soft Closing Hinges 2/8	2 Sets
DH5		Soft Closing Hinges 5/8	4 Sets
DW4		Wood Dowel 6 x 25mm	20
HD6		Plastic Handle 128mm	3
MF2		Nail	40 (+3)
SC3		Screw M3.5 x 14mm	39
SC11		Screw M4 x 25mm	8
SC13		Screw M4 x 30mm	6
SC25		FH Screw M5 x 40mm	14

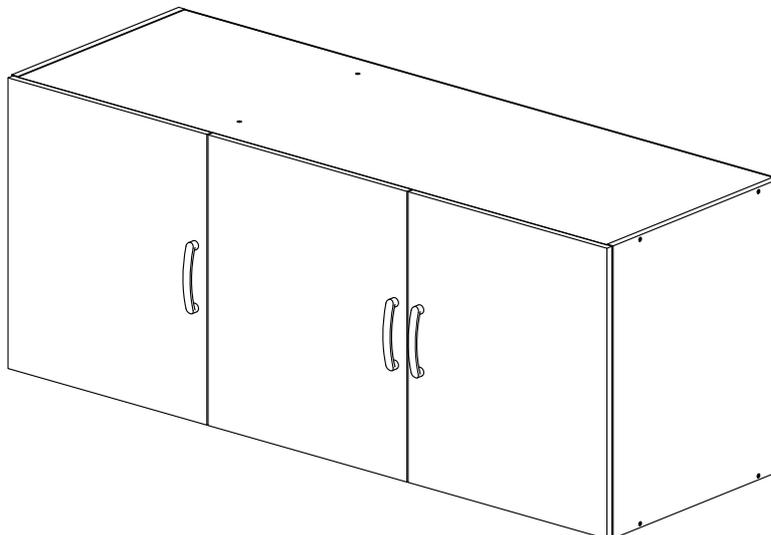

Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Center Panel	1 pc
D	Door Panel	3 pcs
E	Top Panel	1 pc
F	Bottom Panel	1 pc
G	Small Crossbar	1 pc
H	Backboard	2 pcs

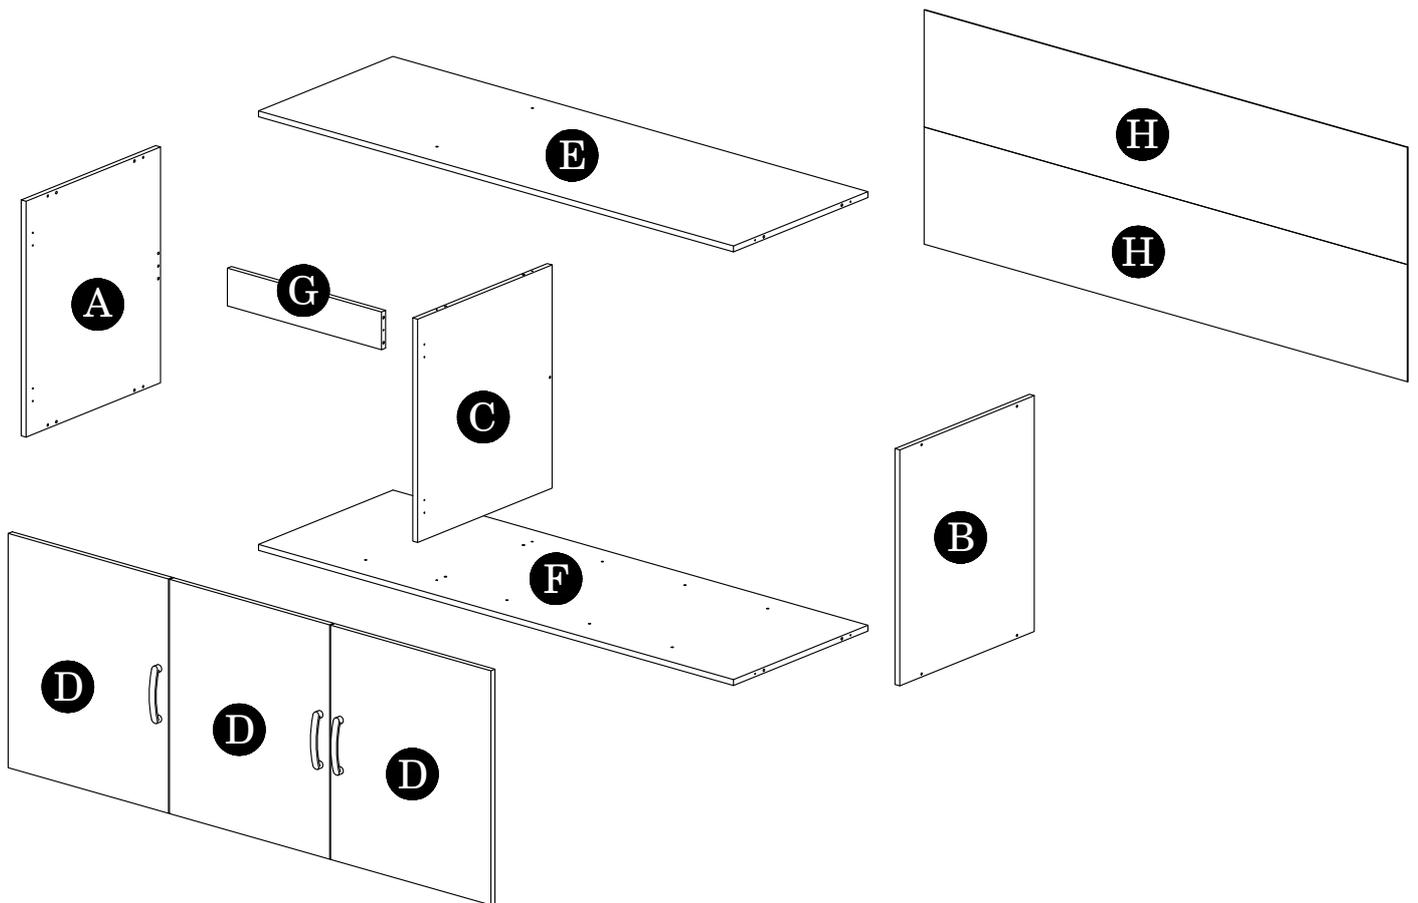


STEP 1

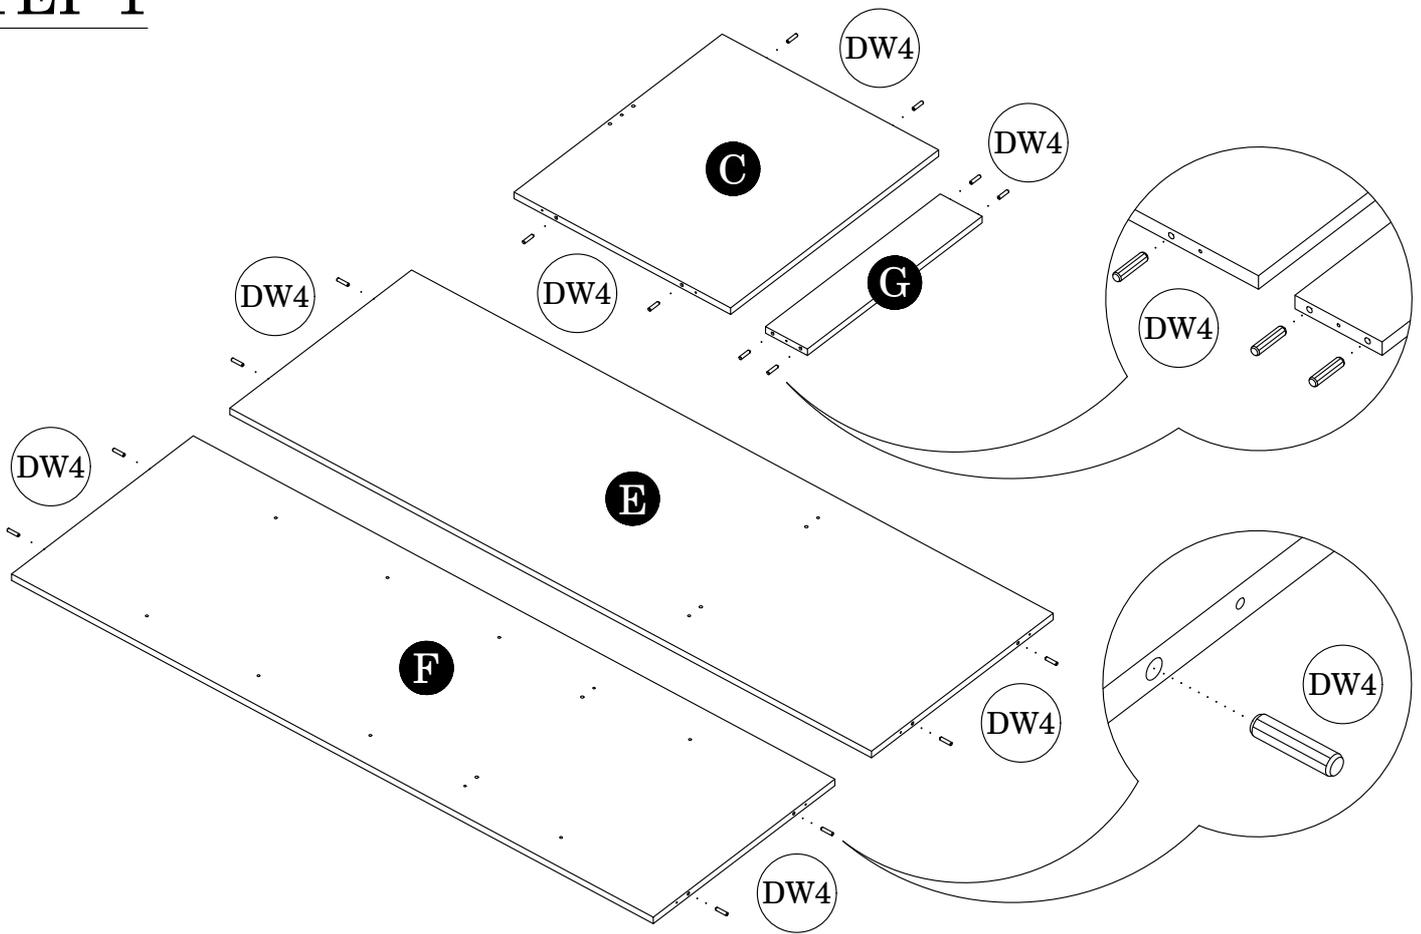


DW4		Wood Dowel 6 x 25mm	16
-----	---	---------------------	----


STEP 2

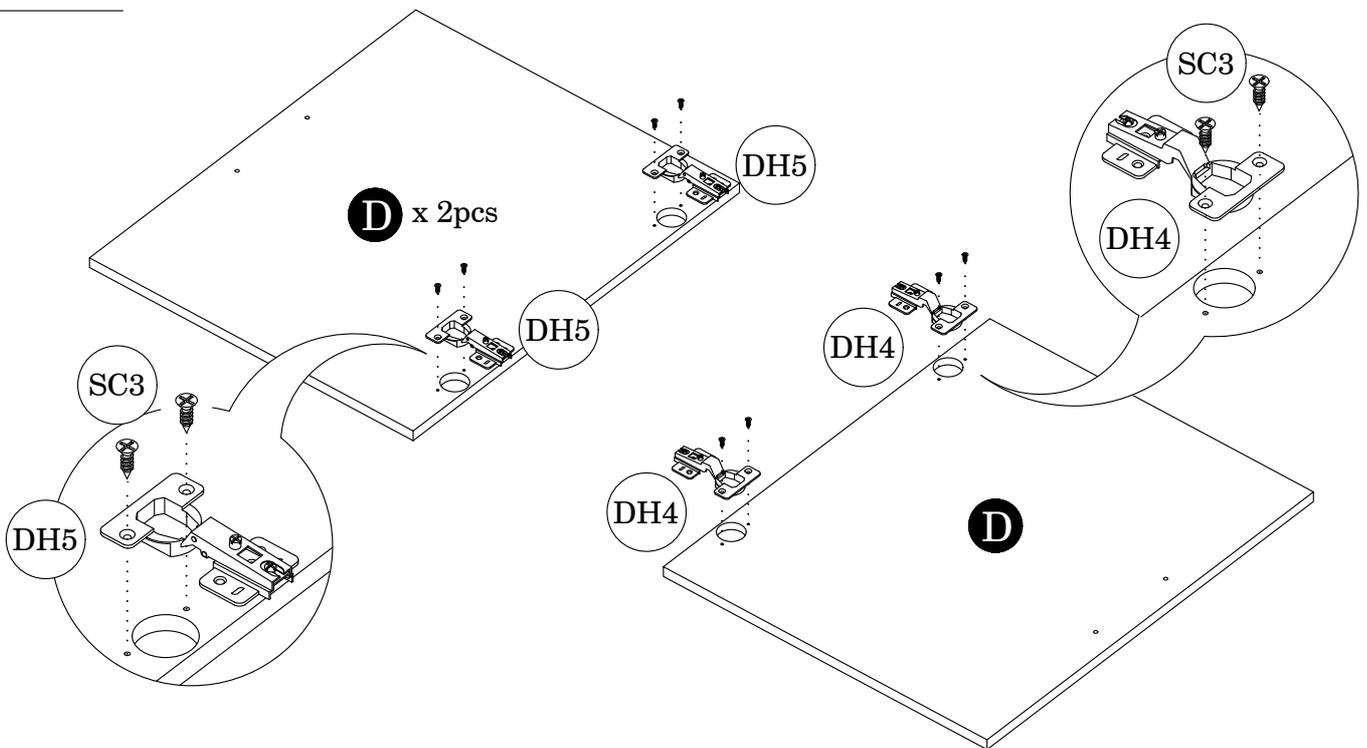


DH4		Soft Closing Hinges 2/8	2 Sets
DH5		Soft Closing Hinges 5/8	4 Sets
SC3		Screw M3.5mm x 14mm	12


STEP 3

SC25		FH Screw M5 x 40mm	4
------	---	-----------------------	---

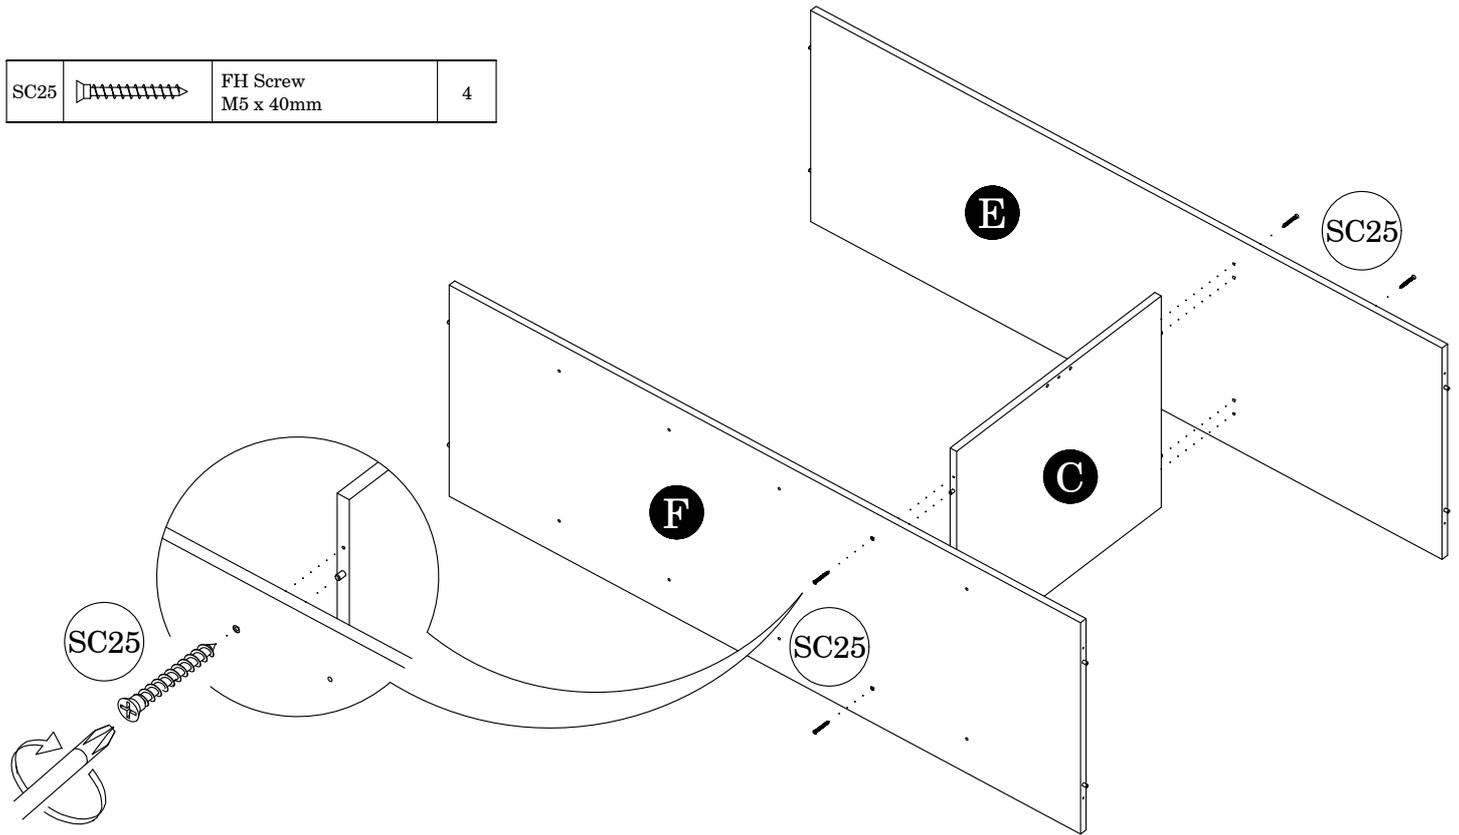


STEP 4

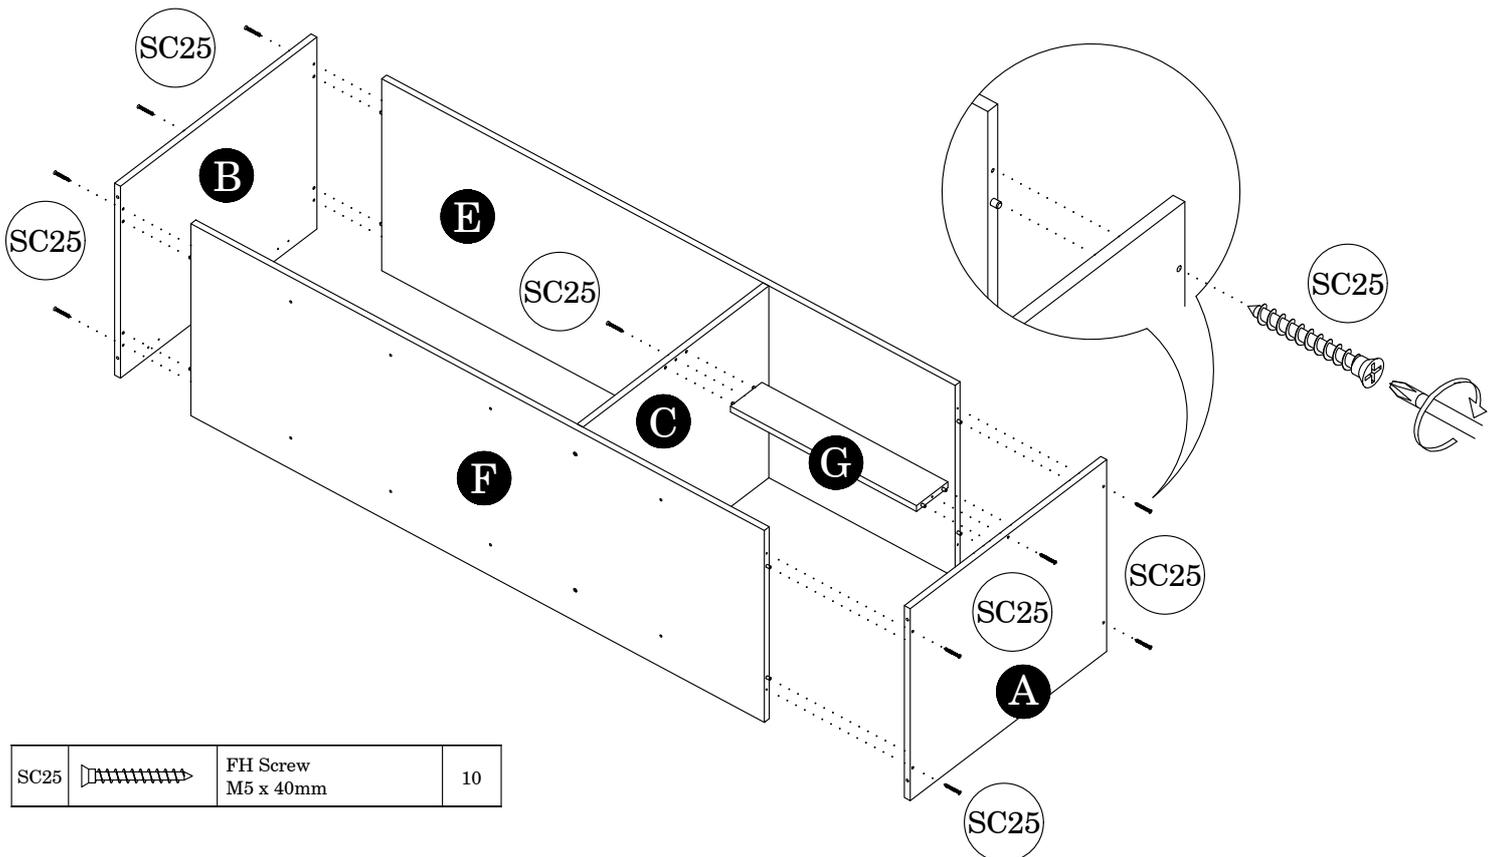

SC25		FH Screw M5 x 40mm	10
------	---	-----------------------	----


STEP 5

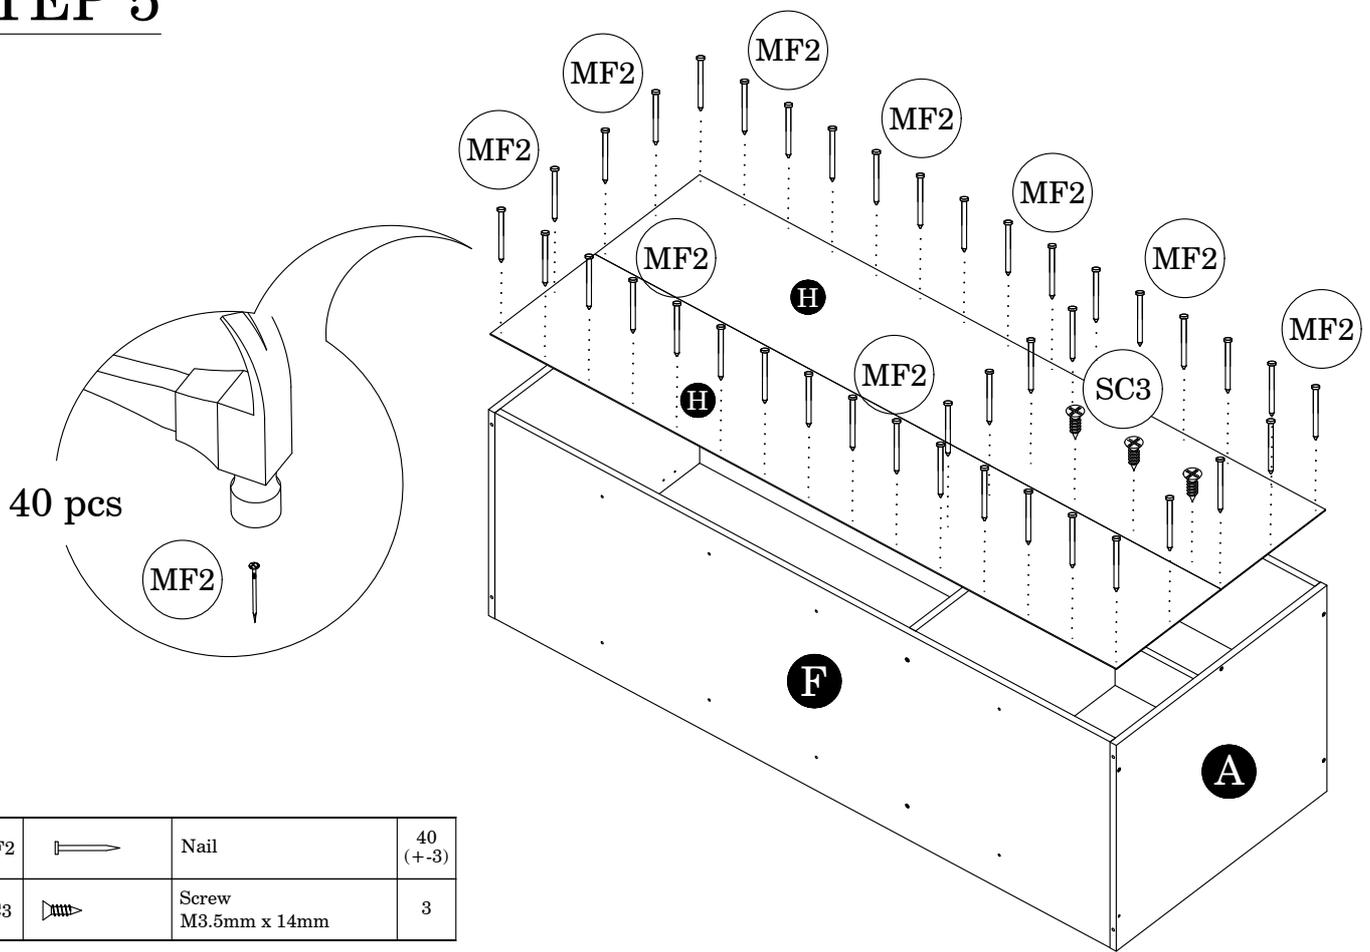


MF2		Nail	40 (+-3)
SC3		Screw M3.5mm x 14mm	3

STEP 6

DH4		Soft Closing Hinges 2/8	2 Sets
DH5		Soft Closing Hinges 5/8	4 Sets
HD6		Plastic Handle 128mm	3
SC3		Screw M3.5mm x 14mm	24
SC13		Screw M4mm x 30mm	6

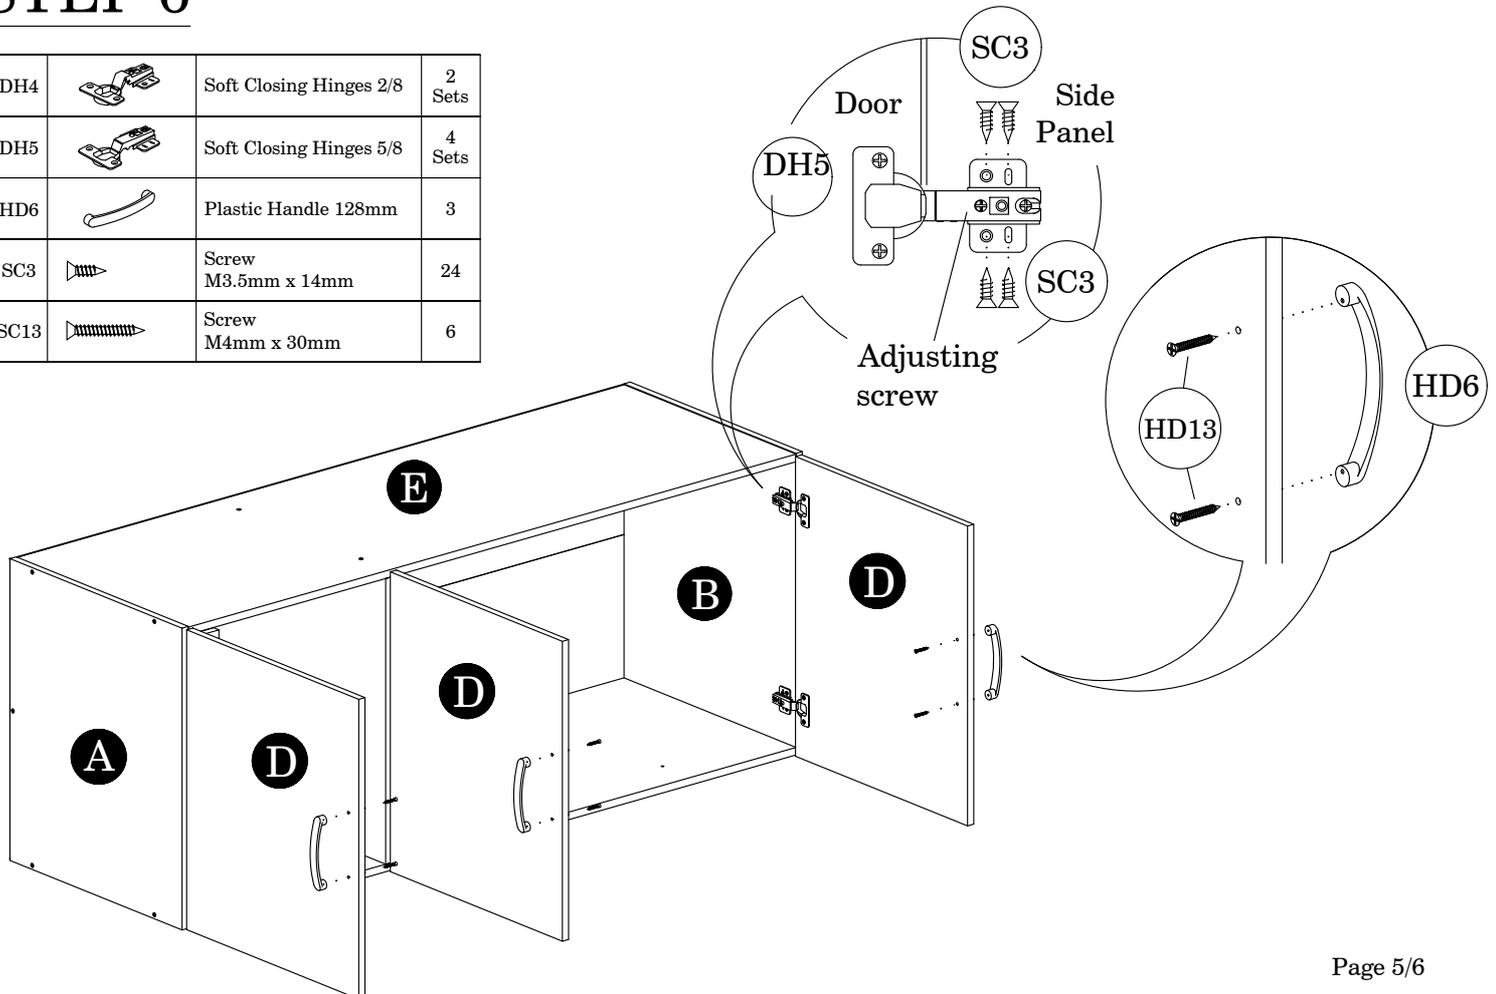


STEP 7

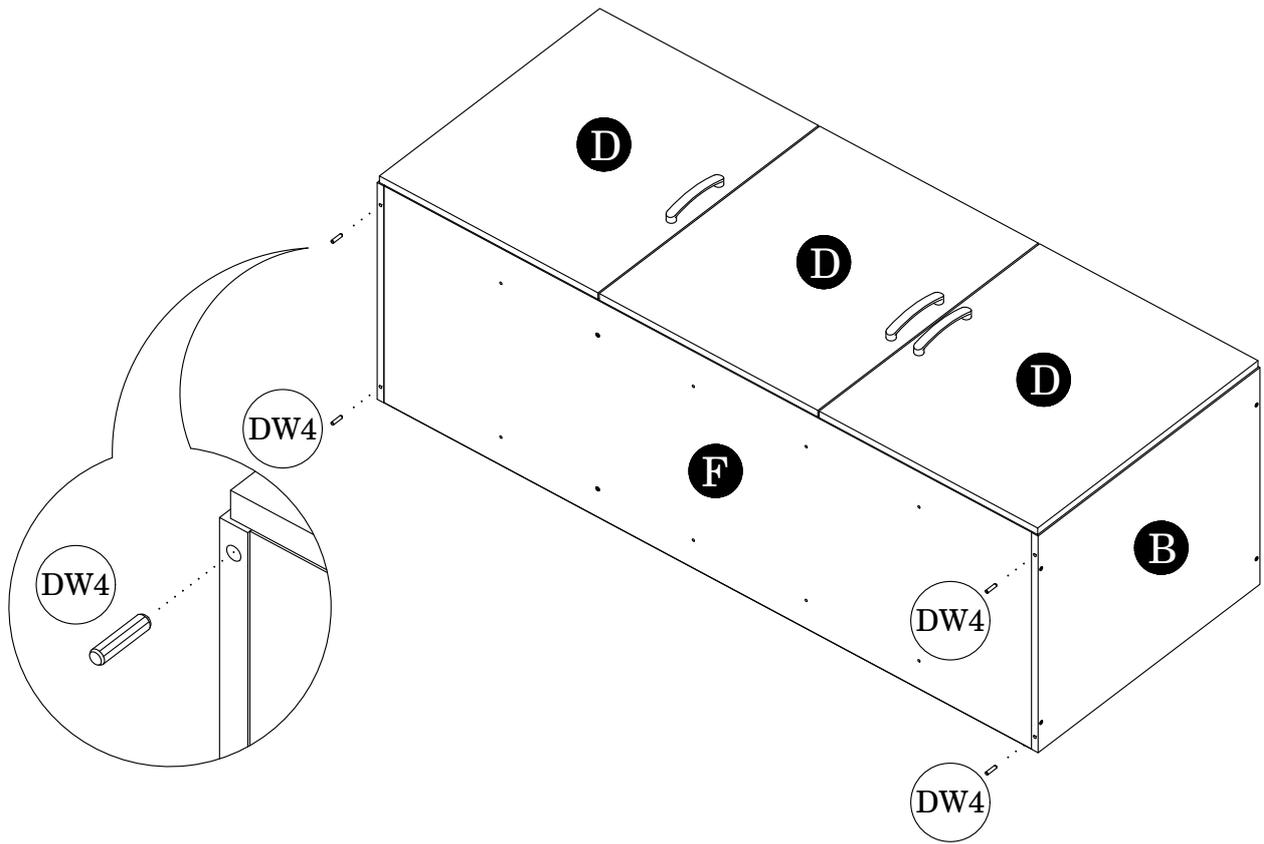

DW4		Wood Dowel 6 x 25mm	4
-----	--	---------------------	---

STEP 8

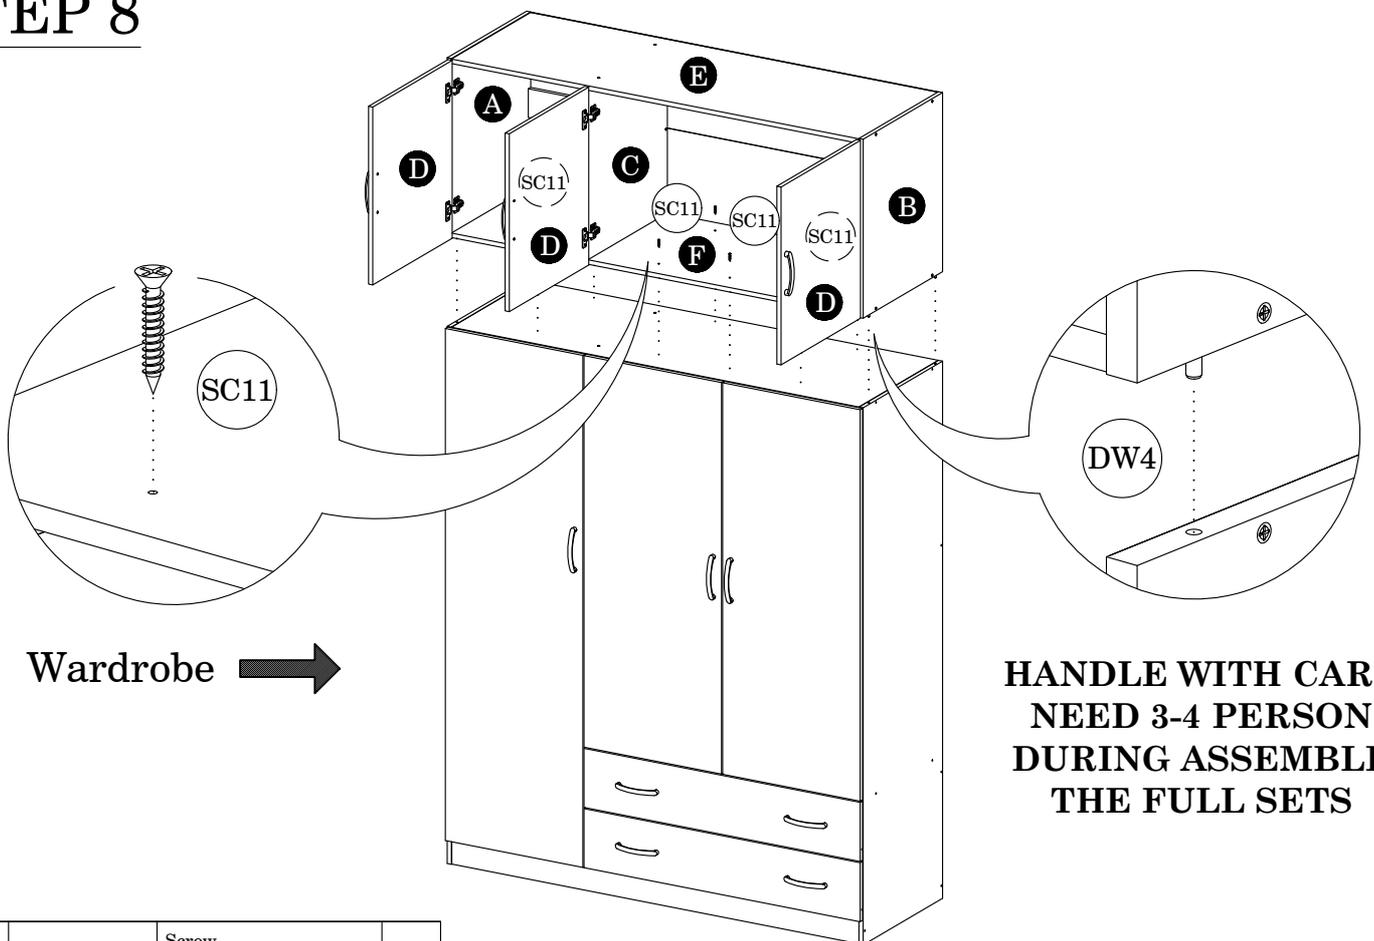

SC11		Screw M4 x 25mm	8
------	---	--------------------	---