

ASSEMBLY INSTRUCTIONS

ALVIA PAKOWORLD FOUR-LEAF WARDROBE LOFT SONOMA

383-000172




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.


HARDWARE LIST			QTY (pcs)
DH4		Soft Closing Hinges 2/8	4 Sets
DH5		Soft Closing Hinges 5/8	4 Sets
DW4		Wood Dowel 6 x 25mm	28
HD6		Plastic Handle 128mm	4
MF2		Nail	50 (+ -3)
SC3		Screw M3.5 x 14mm	54
SC11		Screw M4 x 25mm	10
SC13		Screw M4 x 30mm	8
SC25		FH Screw M5 x 40mm	20

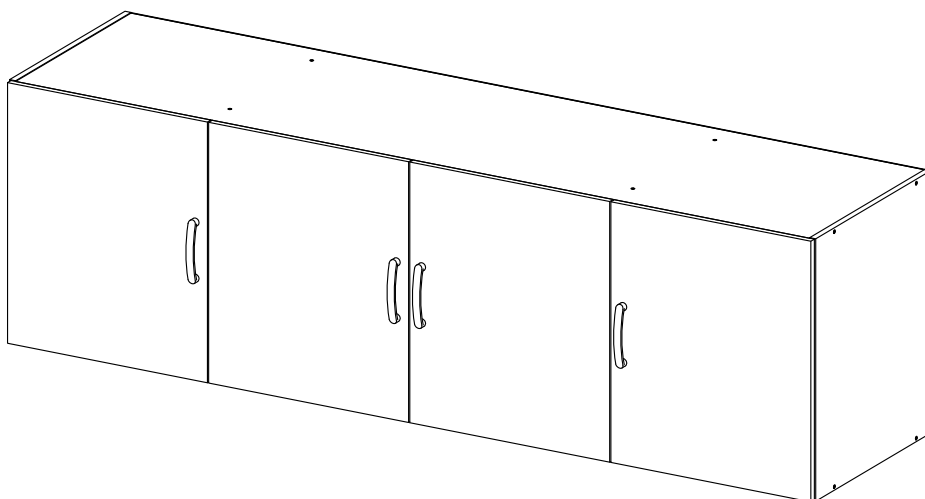


Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Center Panel (L)	1 pc
D	Center Panel (R)	1 pc
E	Door Panel	4 pcs
F	Top Panel	1 pc
G	Bottom Panel	1 pc
H	Small Crossbar	2 pcs
I	Backboard	2 pcs

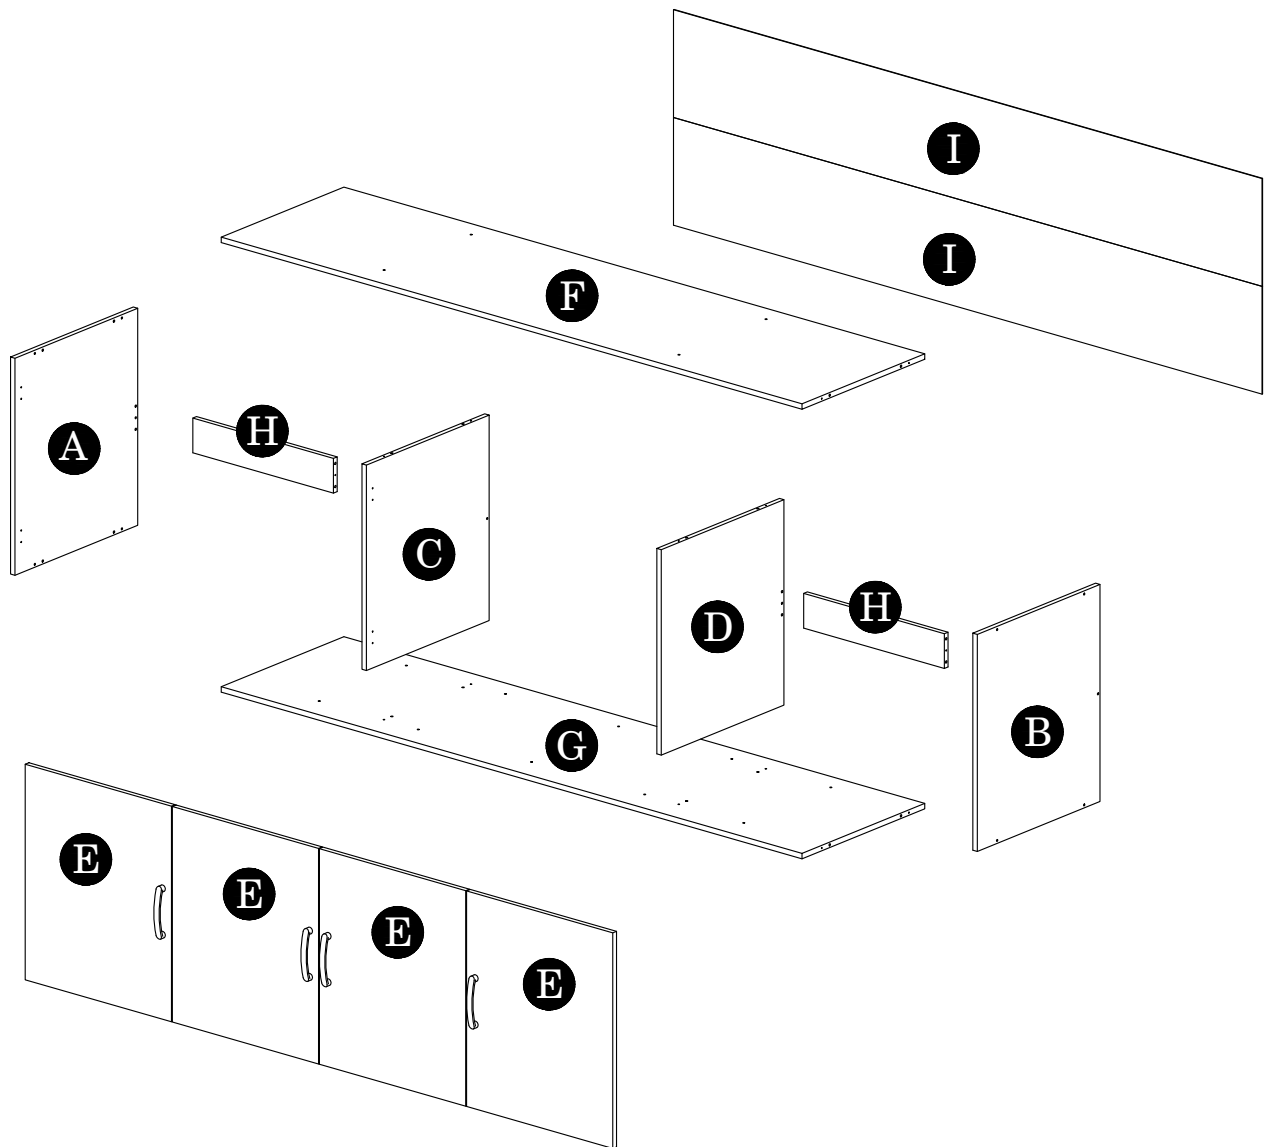


STEP 1

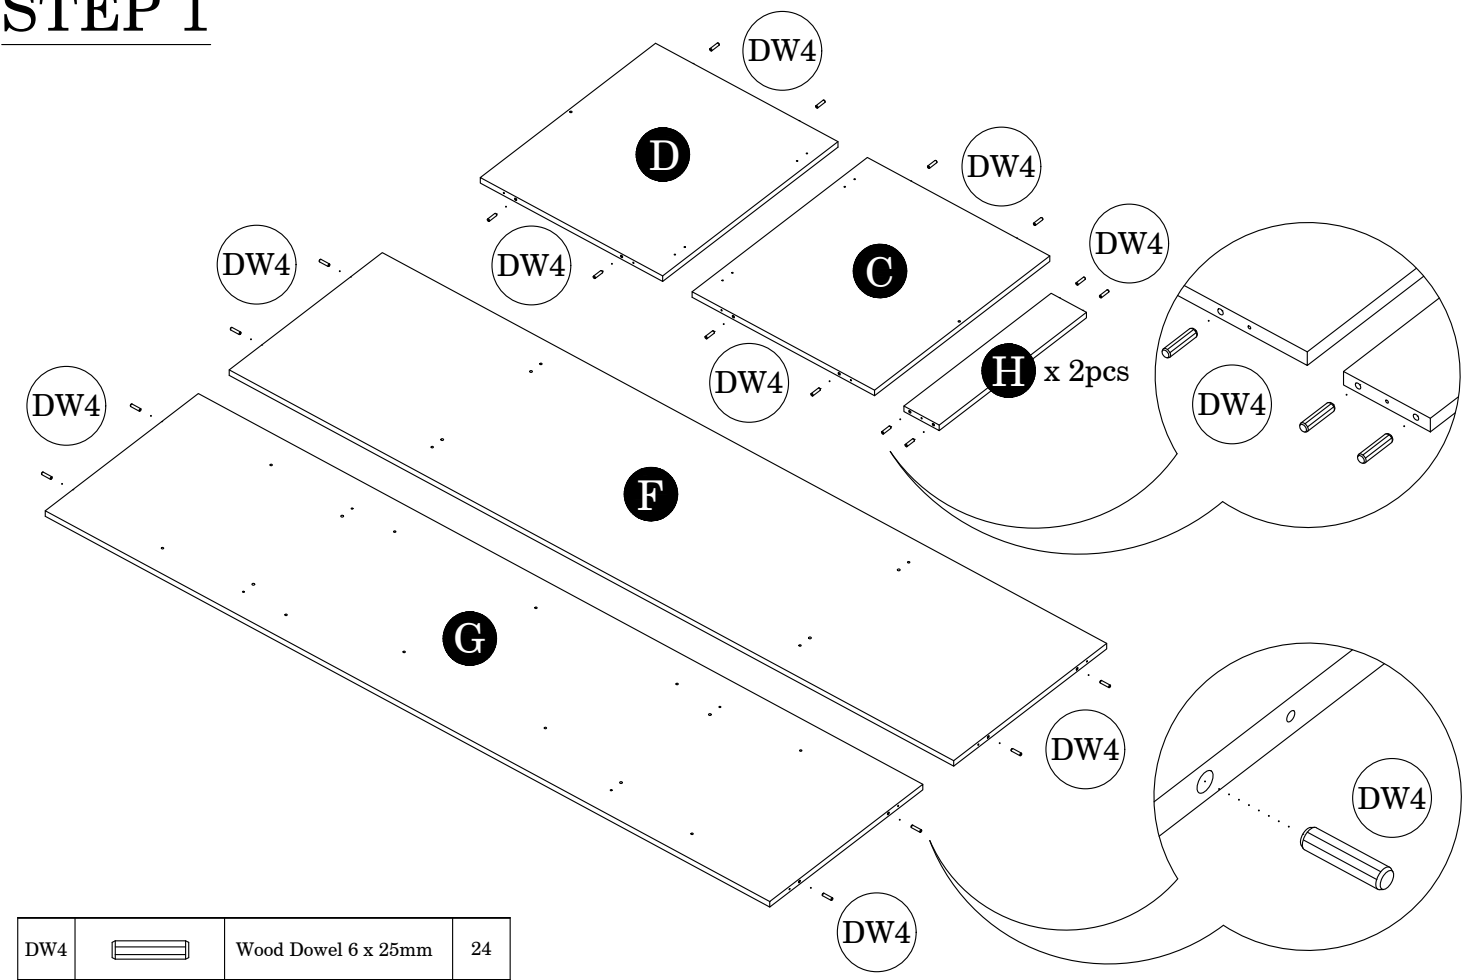


STEP 2

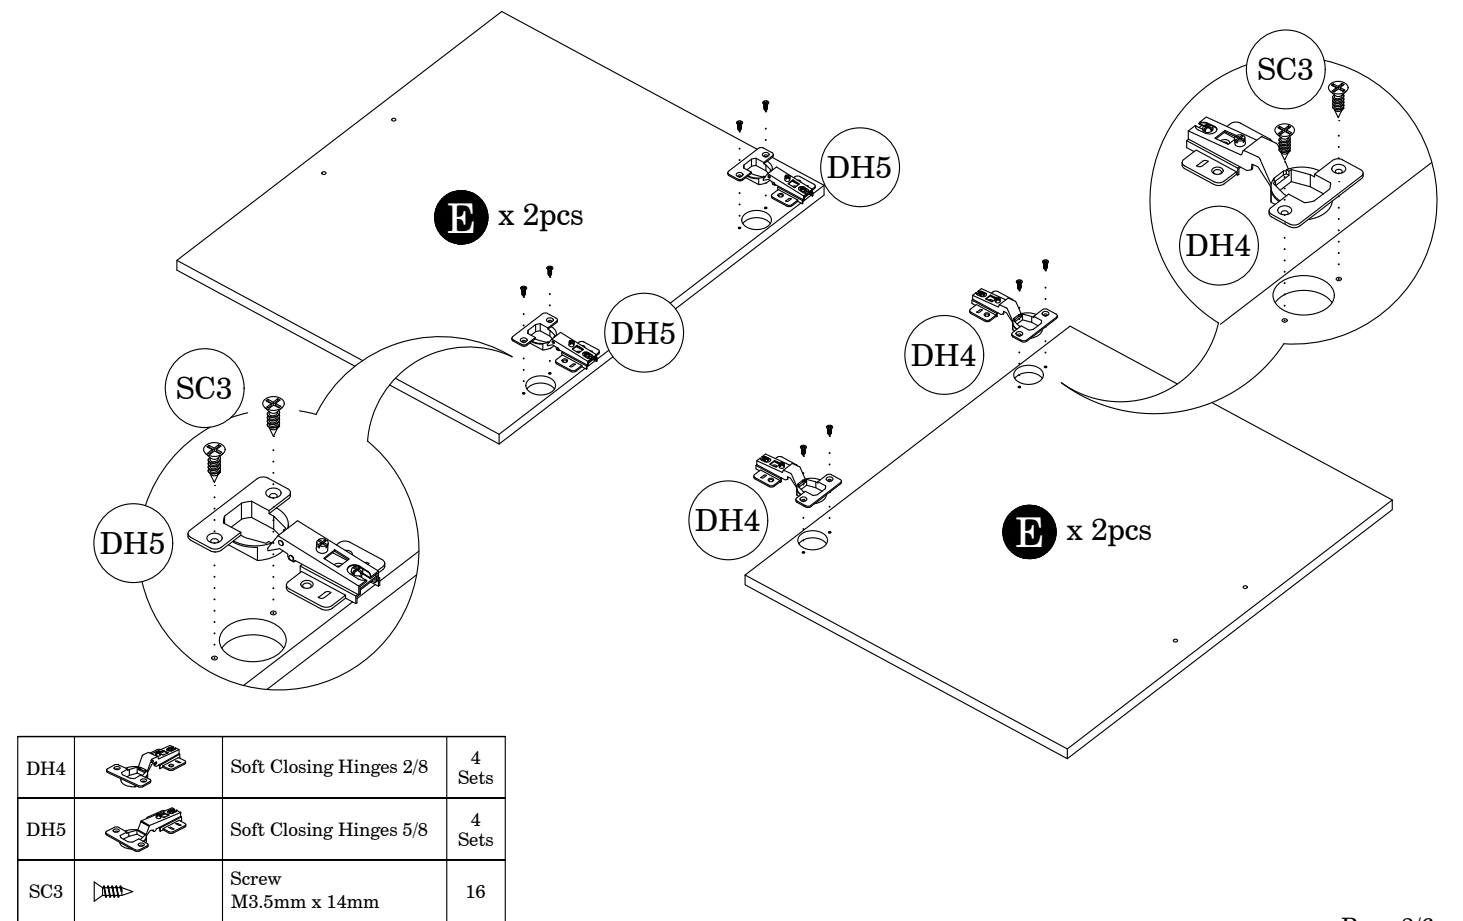


STEP 3

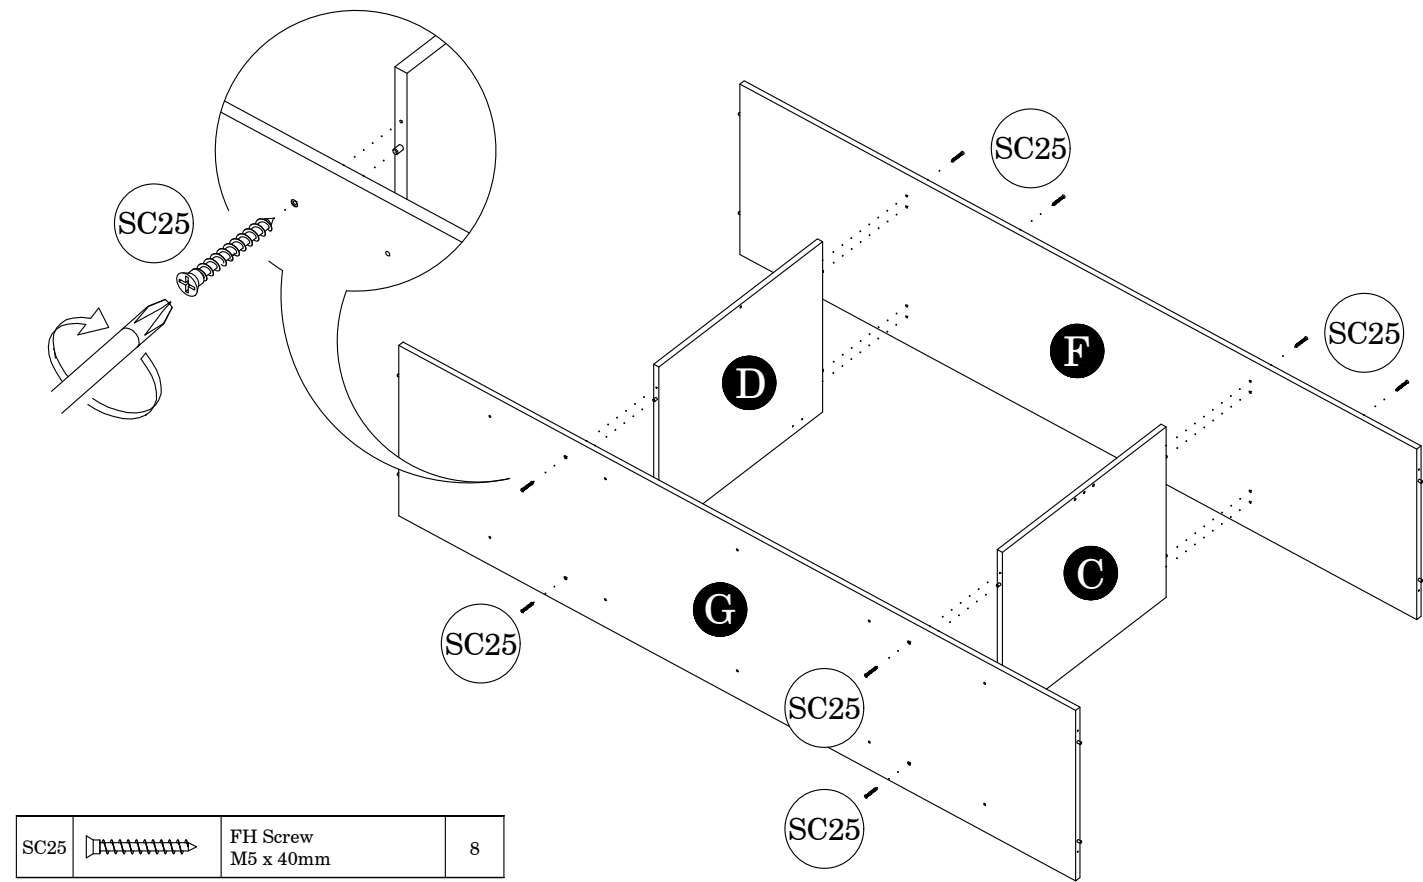

STEP 4

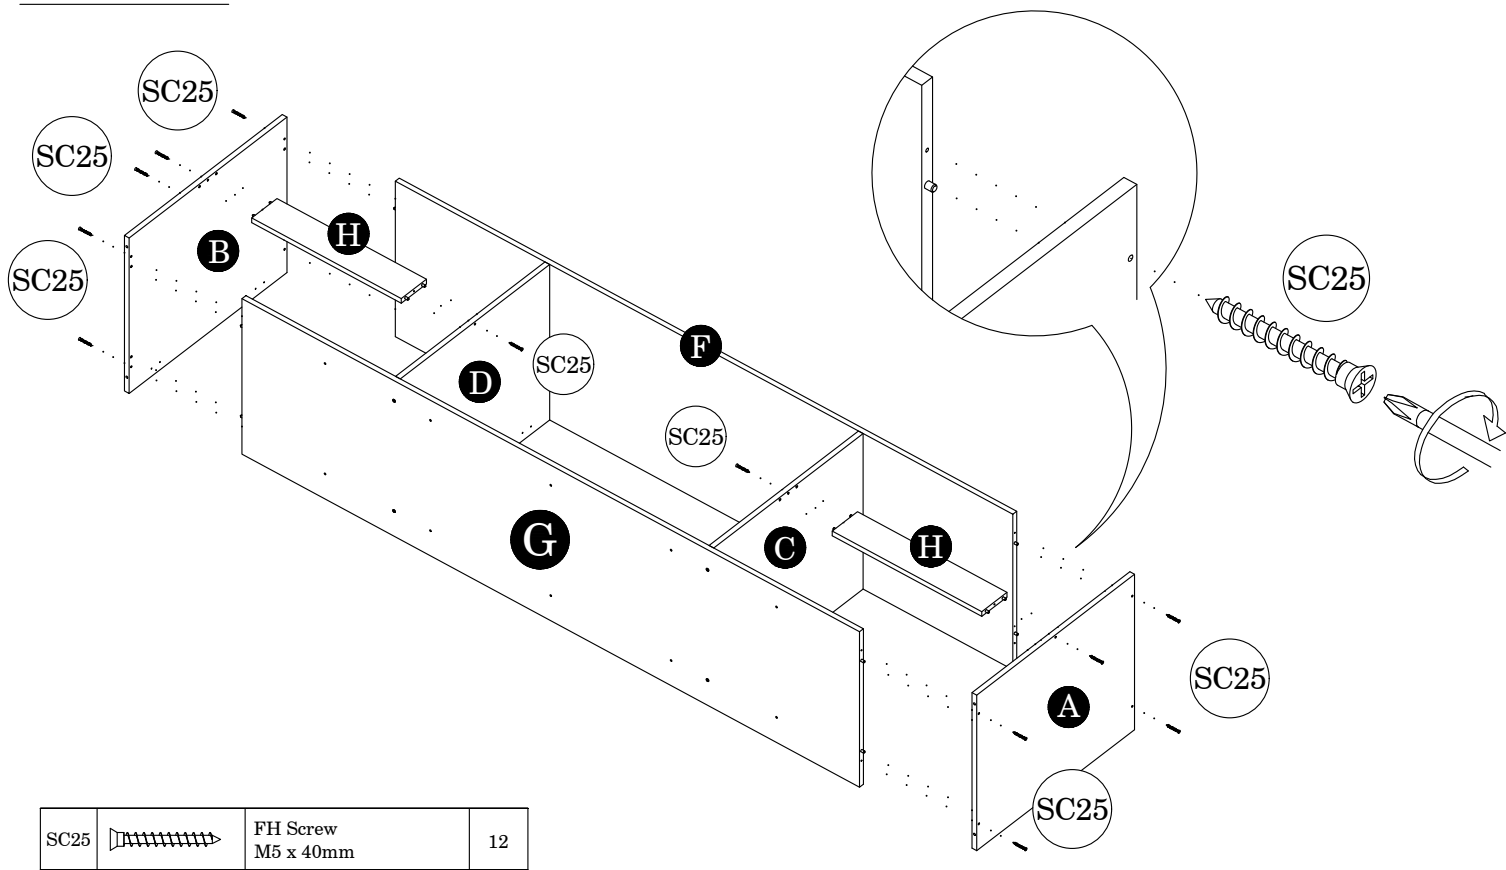


STEP 5

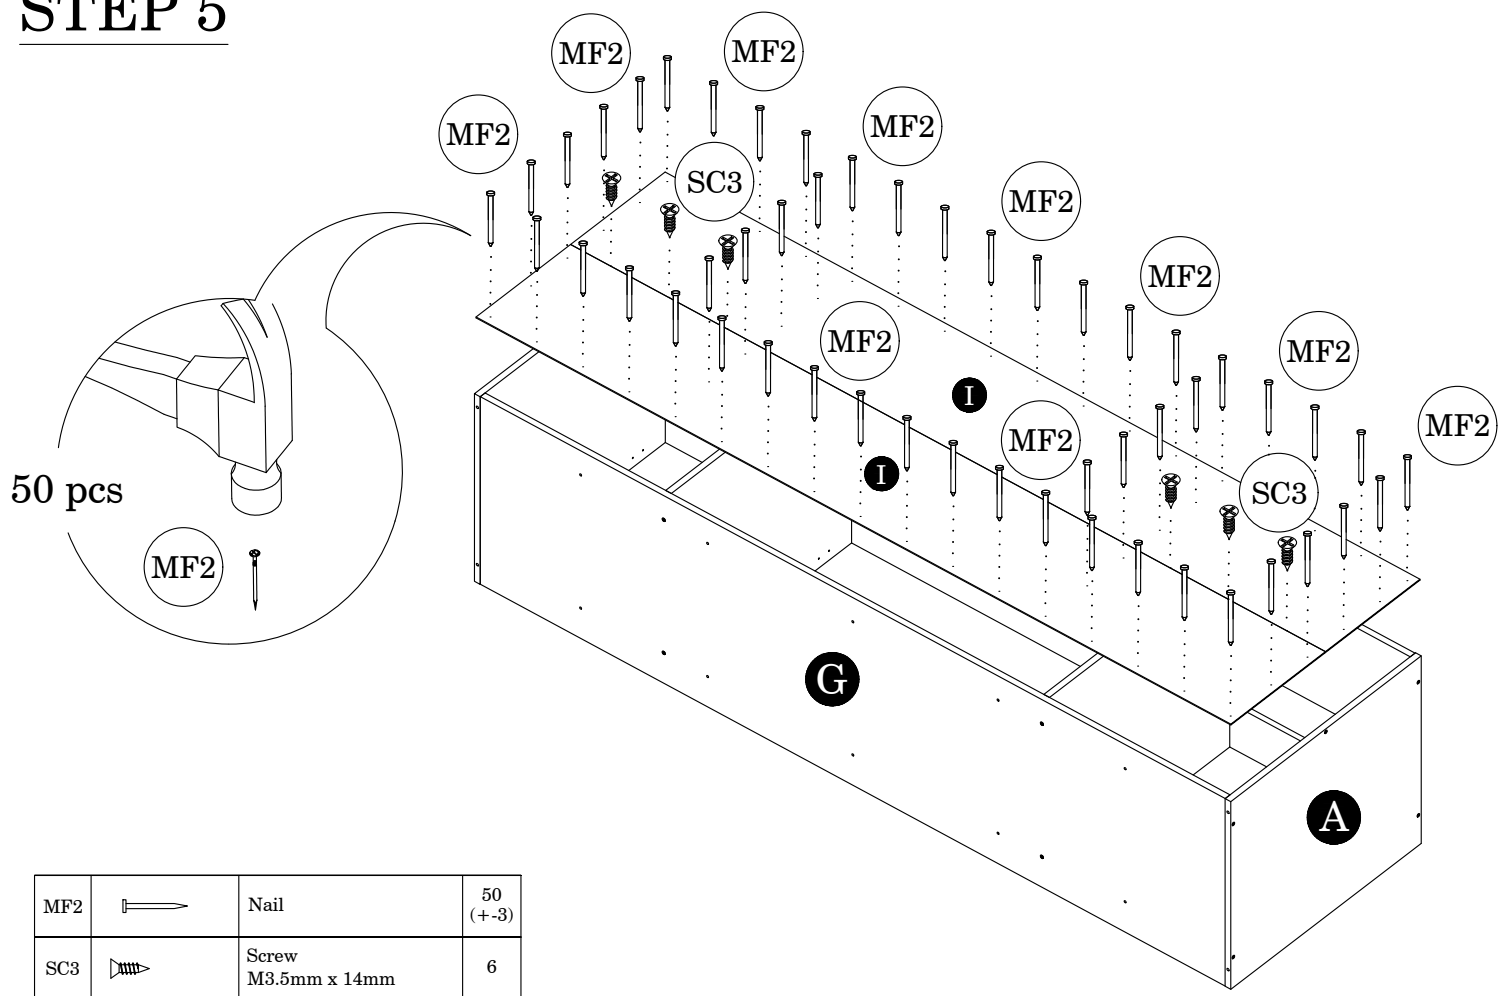


STEP 6

DH4		Soft Closing Hinges 2/8	4 Sets
DH5		Soft Closing Hinges 5/8	4 Sets
HD6		Plastic Handle 128mm	4
SC3		Screw M3.5mm x 14mm	32
SC13		Screw M4mm x 30mm	8

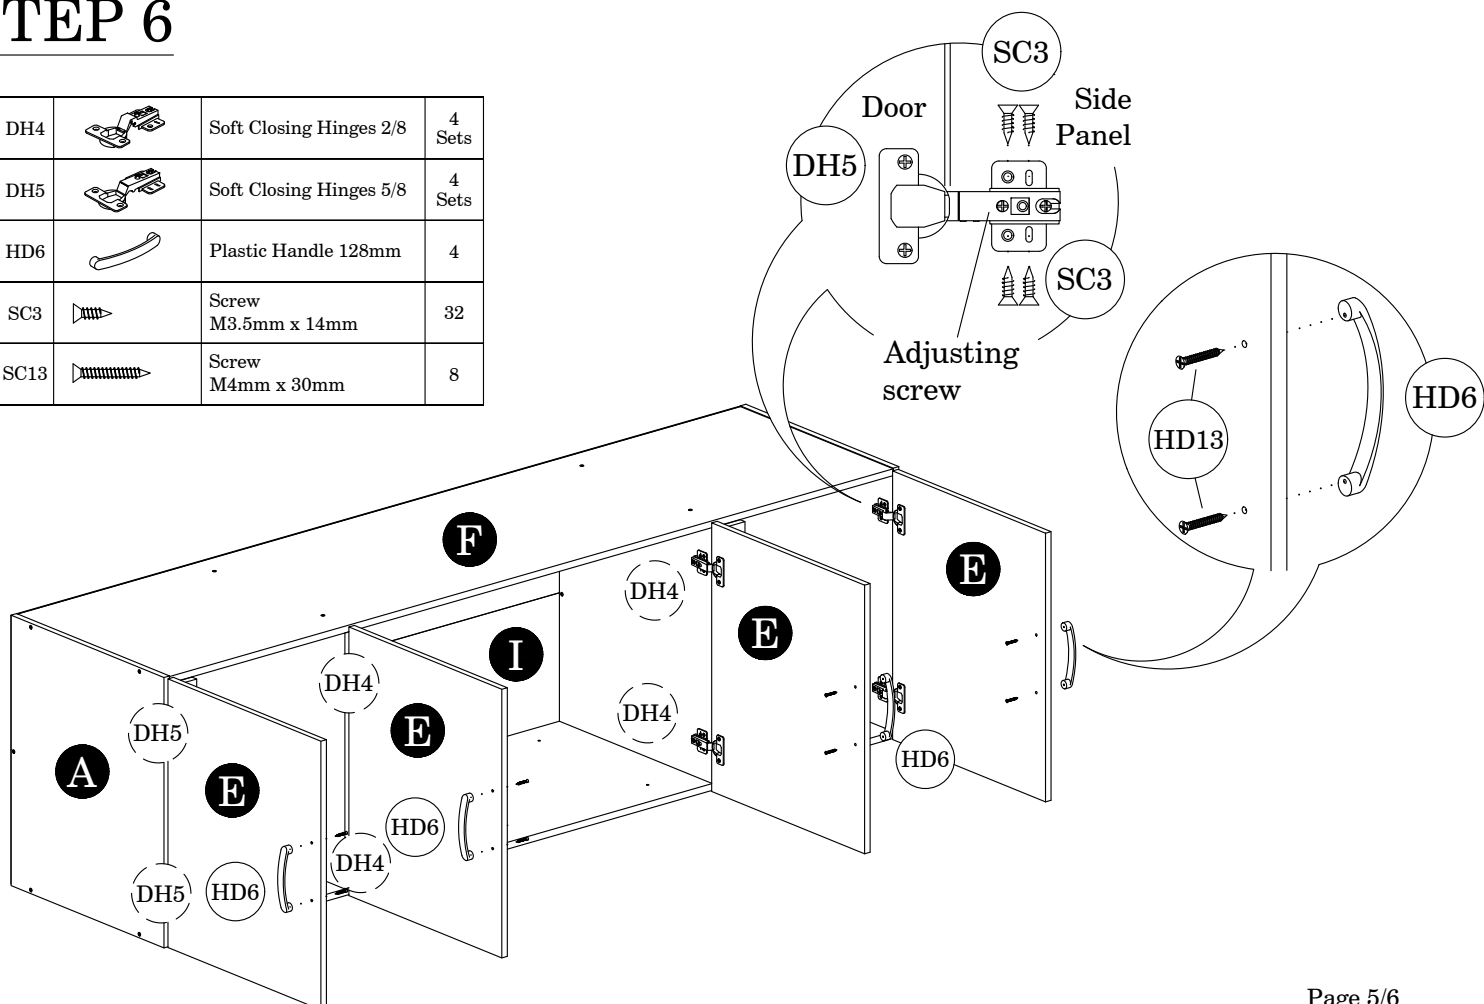


STEP 7

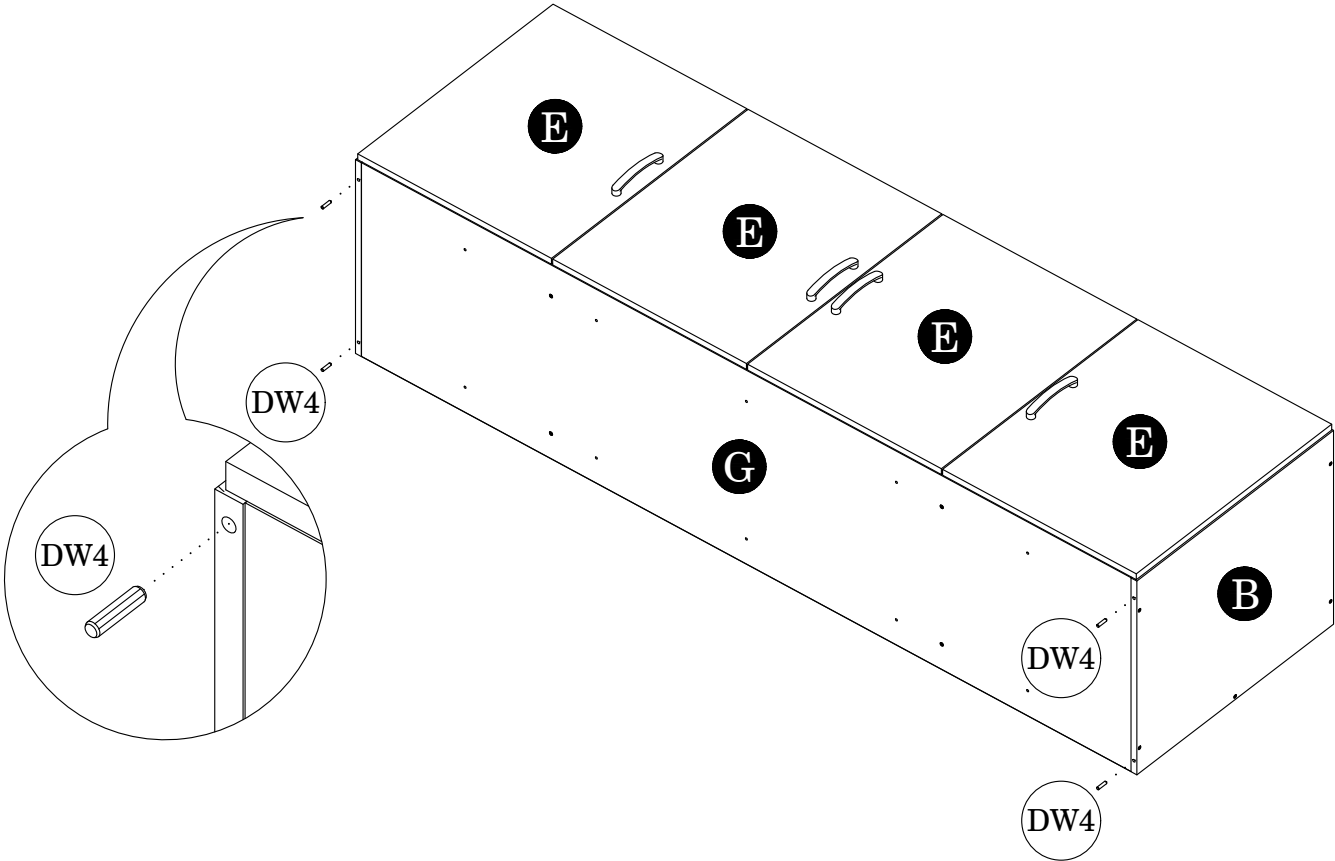

DW4		Wood Dowel 6 x 25mm	4
-----	---	---------------------	---

STEP 8

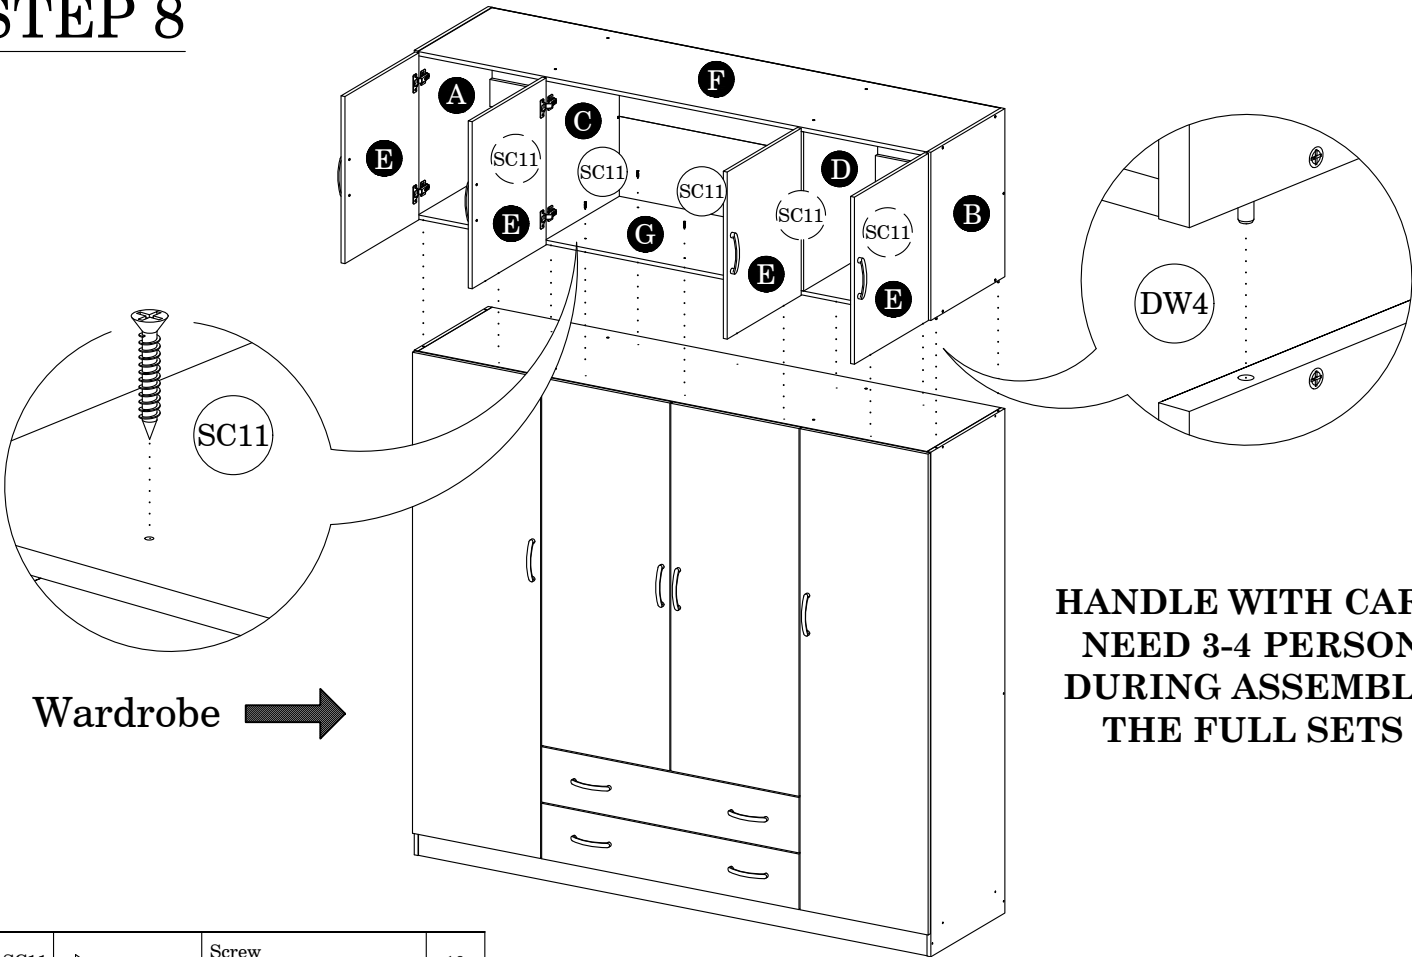

SC11		Screw M4 x 25mm	10
------	---	-----------------	----