

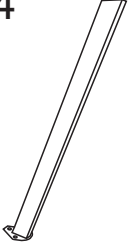





ASSEMBLY INSTRUCTION

390-000008

Ax1	Bx4	Cx12	Dx1	Ex4
				
Top	leg	Screw	Wrench	Foot

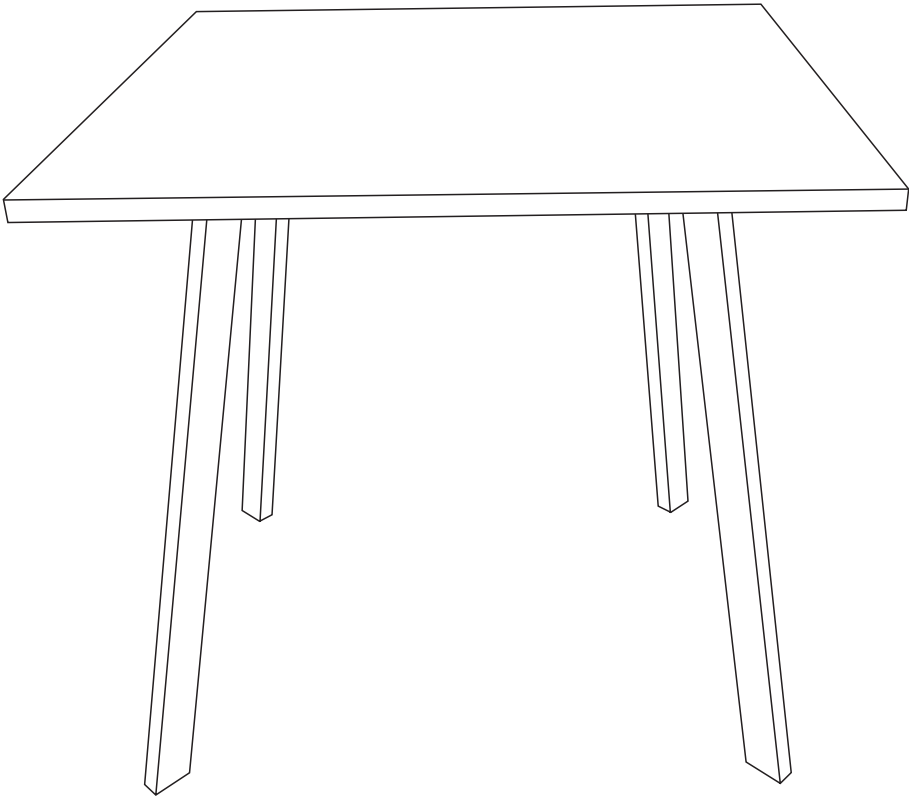


STEP 1:

To put legs B on the top A firstly

To fix screws C with Wrench D

To fix foots E

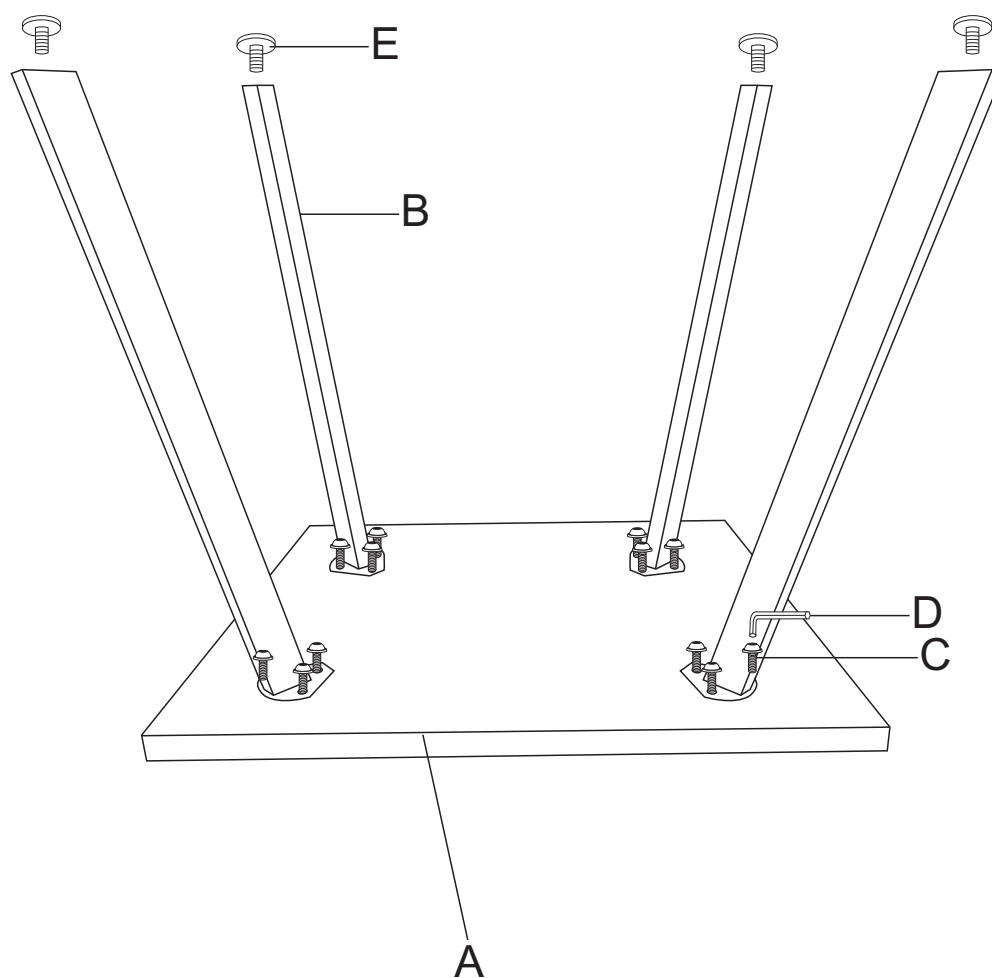

FINISH