








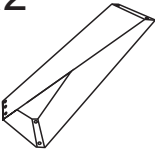


ASSEMBLY INSTRUCTION

390-000021


<div>Ax1</div> <div></div> <div>Top</div>	<div>Bx1</div> <div></div> <div>Frame</div>	<div>Cx2</div> <div></div> <div>Leg</div>	<div>Dx1</div> <div></div> <div>Minifix</div>	<div>Ex10 8*16</div> <div></div> <div>Screw</div>
<div>Fx4 8*45</div> <div></div> <div>Screw</div>	<div>Gx14</div> <div></div> <div>Gasket</div>	<div>Hx1</div> <div></div> <div>Wrench</div>	<div>Ix4</div> <div></div> <div>foot</div>	



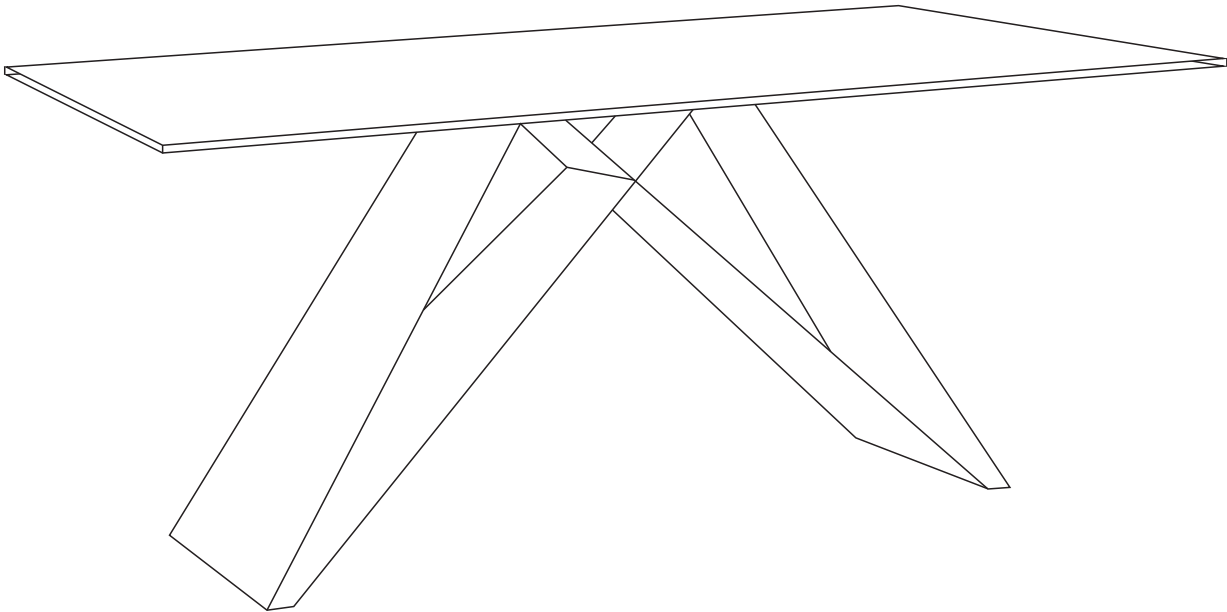STEP 1:

To fix Minifix D between legs B firstly


To fix Gasket G and screws E with Wrench H

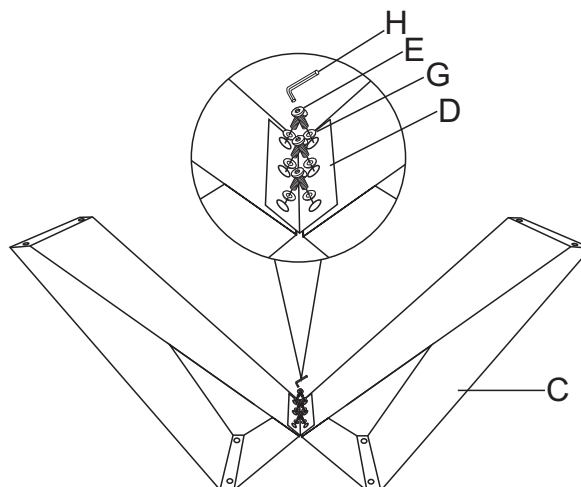

STEP 2:

To put frame B on top A firstly


To fix Gaskets G and Screws F with Wrench H

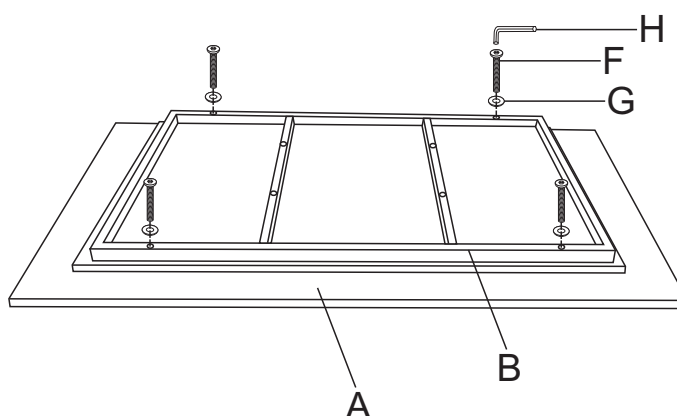

STEP 3:

To put all the legs on the frame firstly

To fix Gasket G and screws E with Wrench H

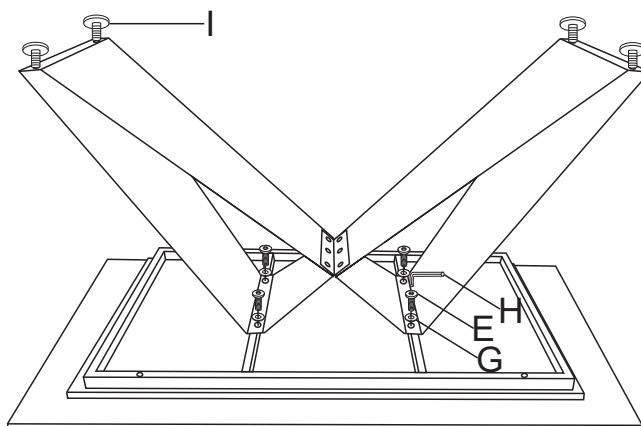

FINISH