

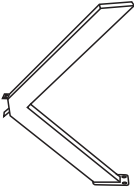




ASSEMBLY INSTRUCTION


390-000031

Ax1  Top	Bx1  Frame	Cx2  Leg
Dx4  foot	Ex12  8*16 Screw	Fx1  Wrench

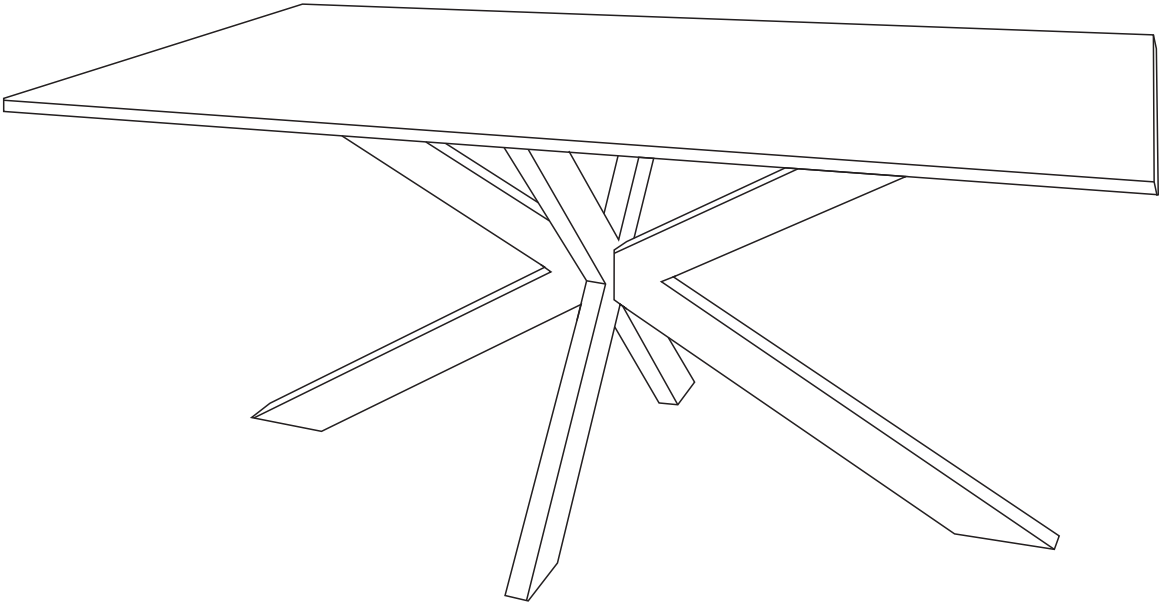


STEP 1:

To fix frame B and legs C together firstly

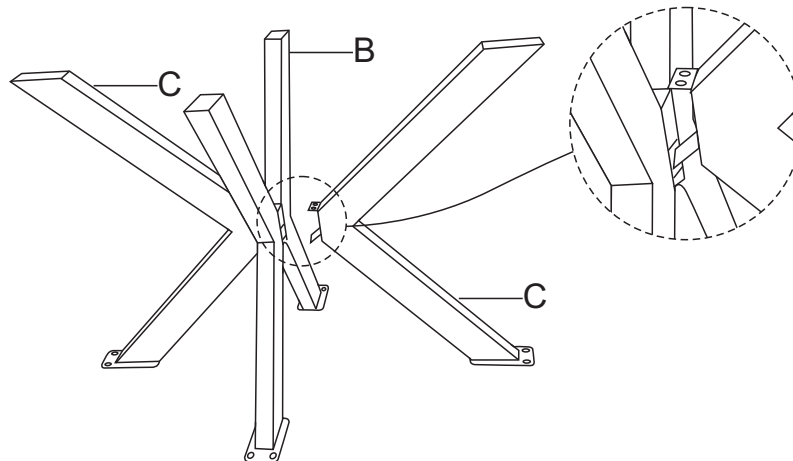

STEP 2:

To fix screws E with Wrench F

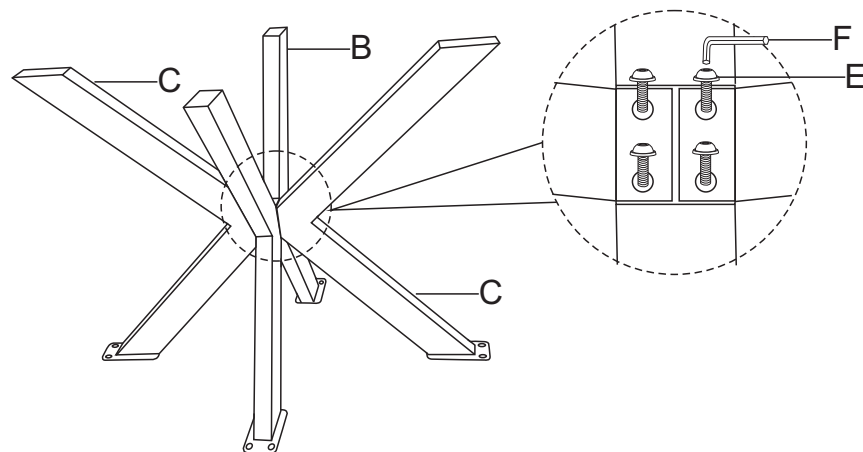


STEP 3:

To put all the legs on top A firstly

To fix screws E with Wrench F

To fix feet D

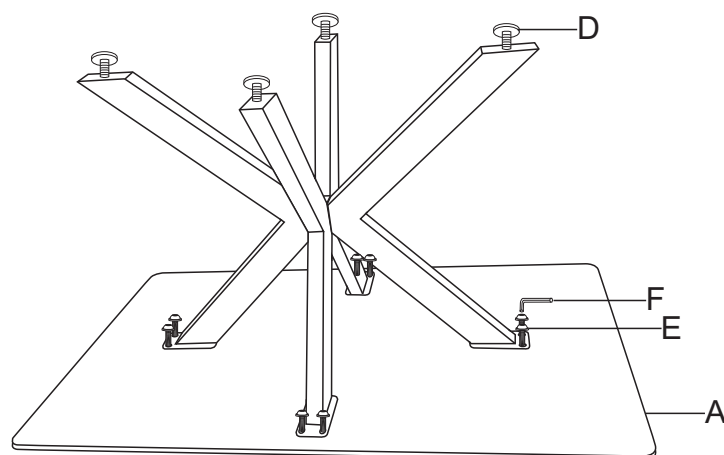

FINISH