
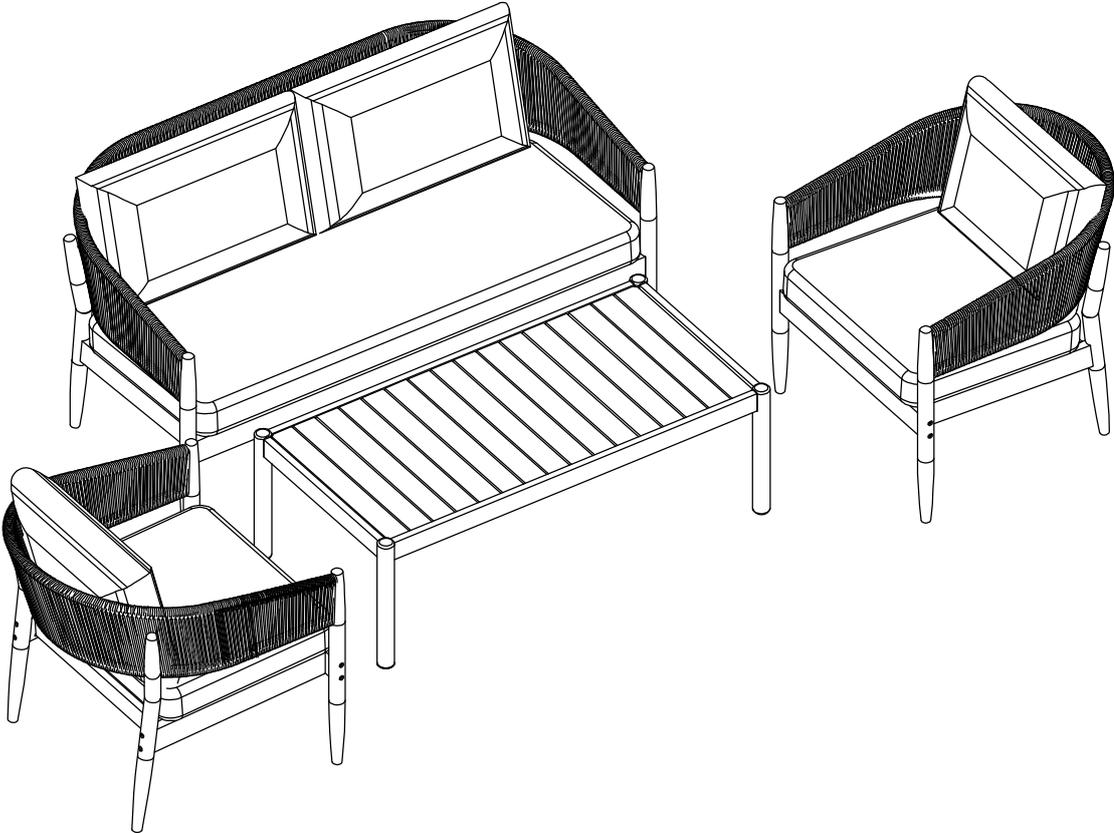
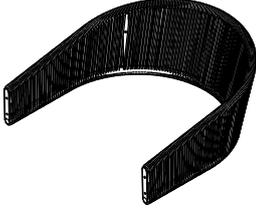

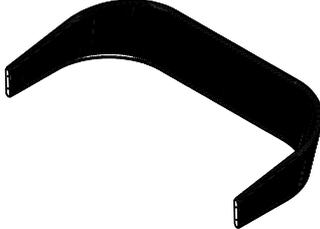
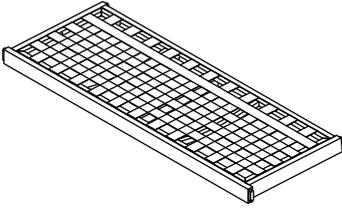

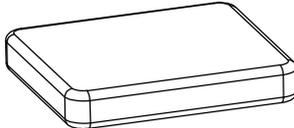
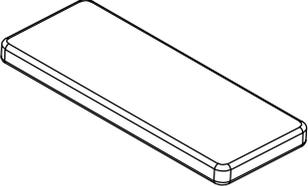
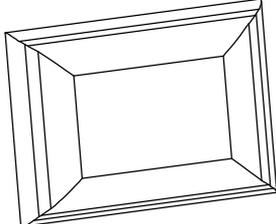


405-000001

# ASSEMBLY INSTRUCTIONS

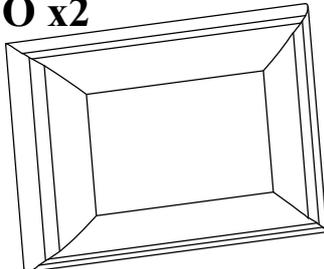


# Part List:

<p><b>A x2</b></p> 	<p><b>B x2</b></p> 	<p><b>C x1</b></p> 	<p><b>D x1</b></p> 
<p><b>E x1</b></p> 	<p><b>F x3</b></p> 	<p><b>G x3</b></p> 	<p><b>H x3</b></p> 
<p><b>I x3</b></p> 	<p><b>J x1</b></p> 	<p><b>K x4</b></p> 	<p><b>L x2</b></p> 
<p><b>M x1</b></p> 	<p><b>N x2</b></p> 	<p><b>O x2</b></p> 	


# Hardware List:

<p><b>① x24</b></p>  <p><b>24PCS</b> <b>(Extra 2 pcs)</b> <b>Screw (M6*70)</b></p>	<p><b>② x12</b></p>  <p><b>12PCS</b> <b>(Extra 2 pcs)</b> <b>Screw (M6*45)</b></p>	<p><b>③ x28</b></p>  <p><b>28PCS</b> <b>(Extra 2 pcs)</b> <b>Bolt (M6*20)</b></p>	<p><b>④ x28</b></p>  <p><b>36PCS</b> <b>(Extra 2 pcs)</b> <b>Flat washer</b></p>
<p><b>⑤ x8</b></p>  <p><b>8PCS</b> <b>(Extra 2 pcs)</b> <b>Bolt (M6*40)</b></p>	<p><b>⑥ x2</b></p>  <p><b>2PCS</b> <b>Allen Key</b></p>		


# STEP 1

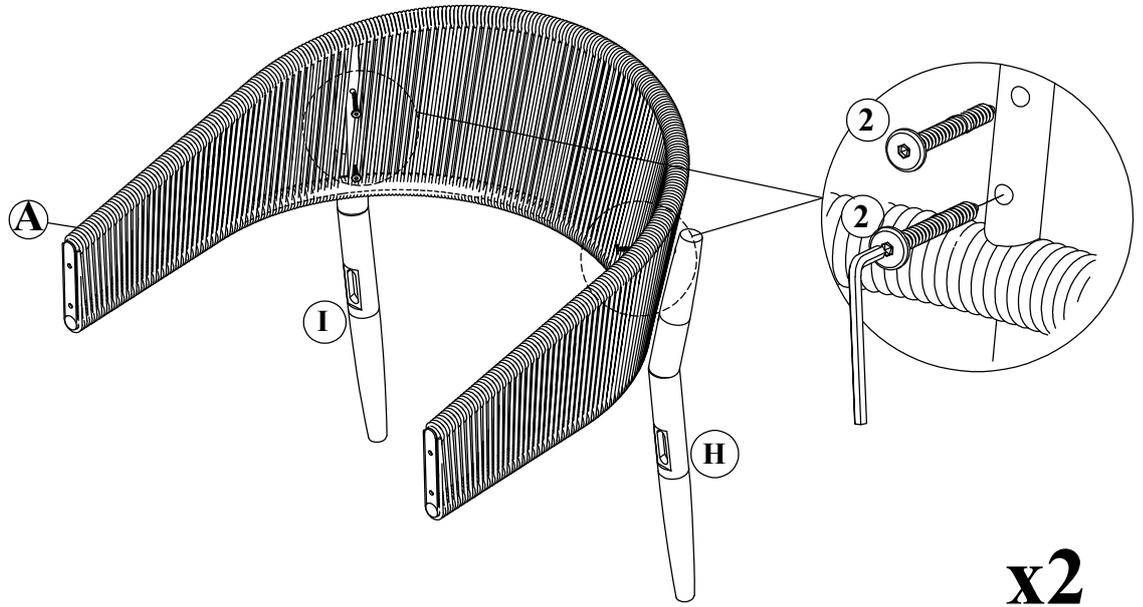

# STEP 2

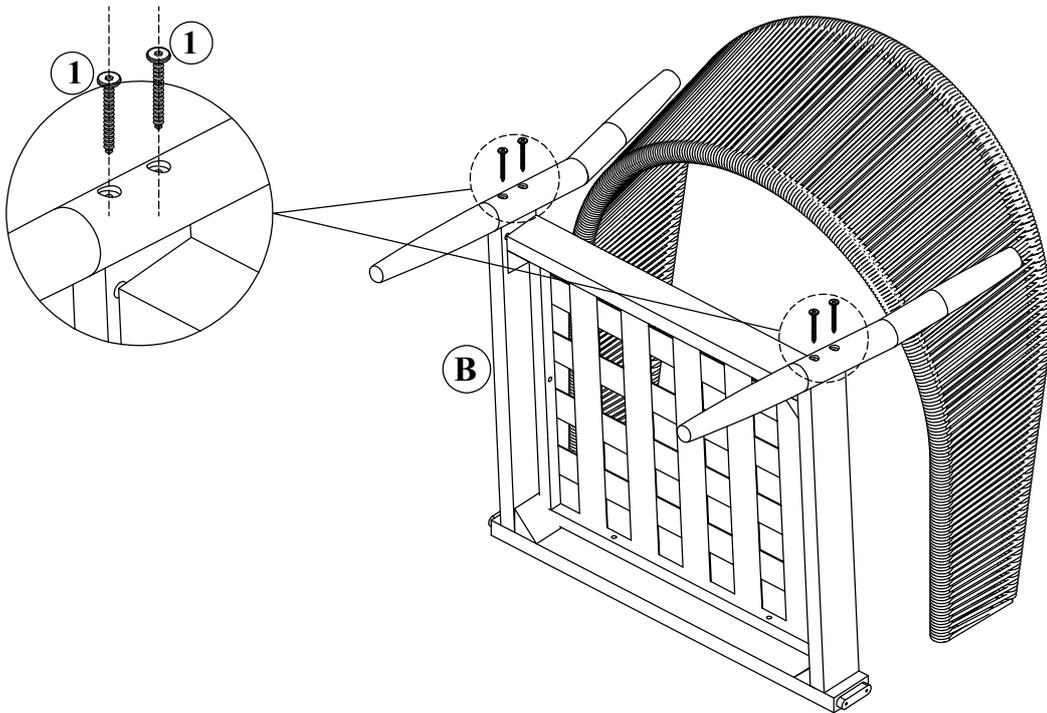


# STEP 3

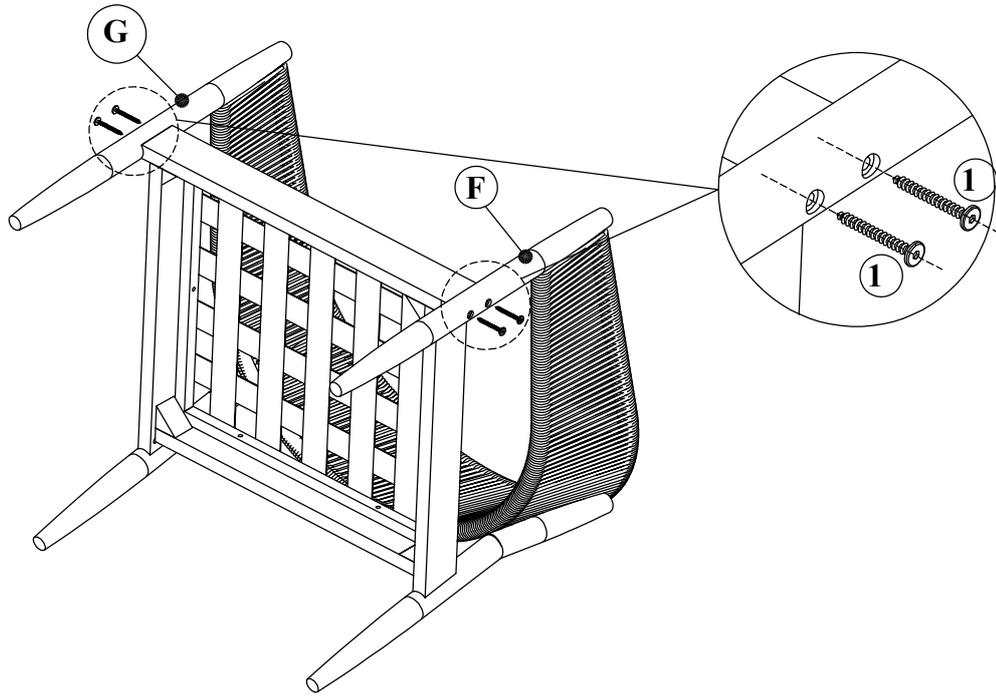


x2

# STEP 4

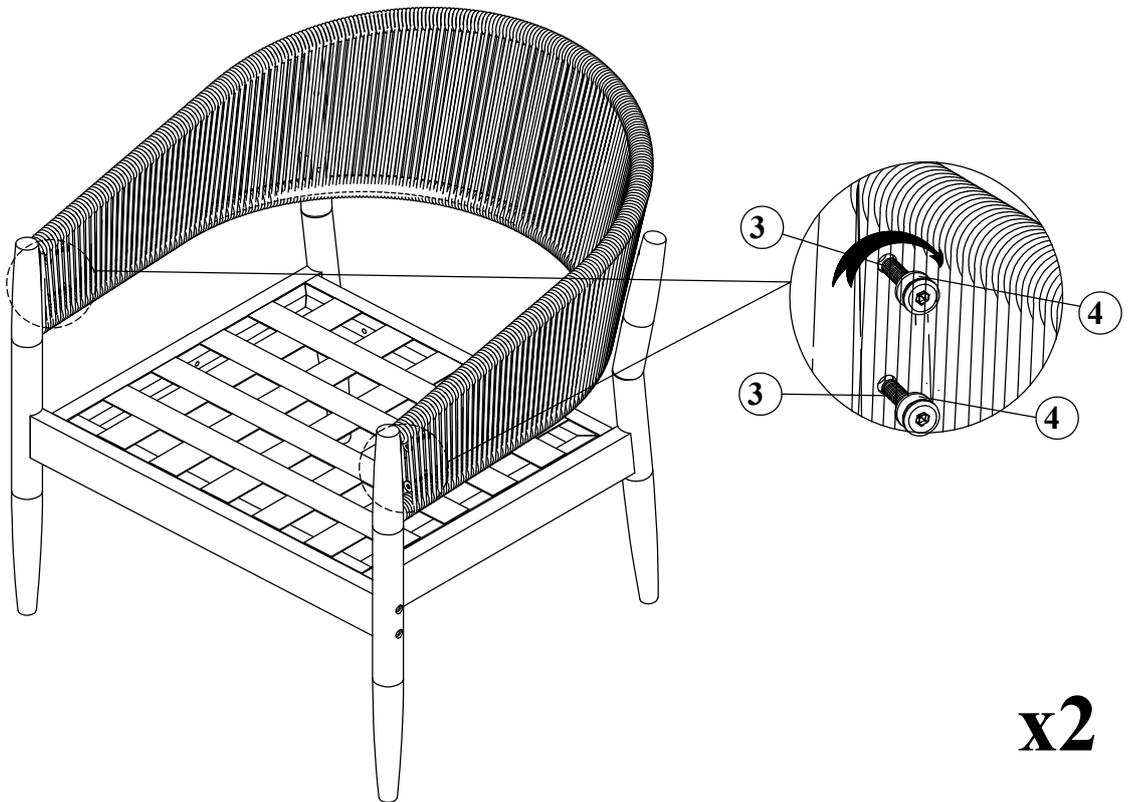


x2

# STEP 5

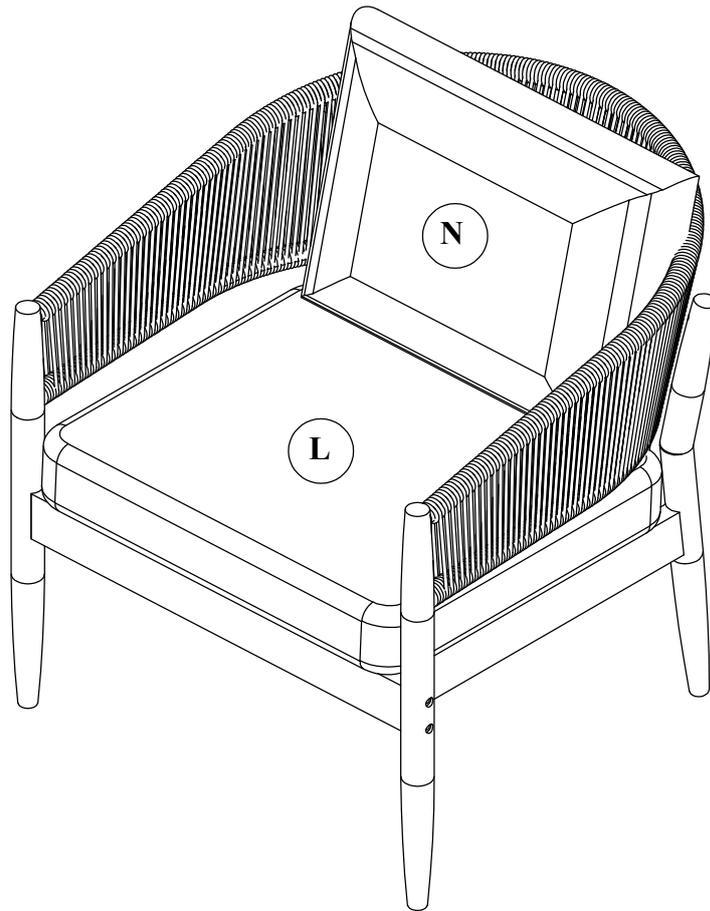


x2


# STEP 6

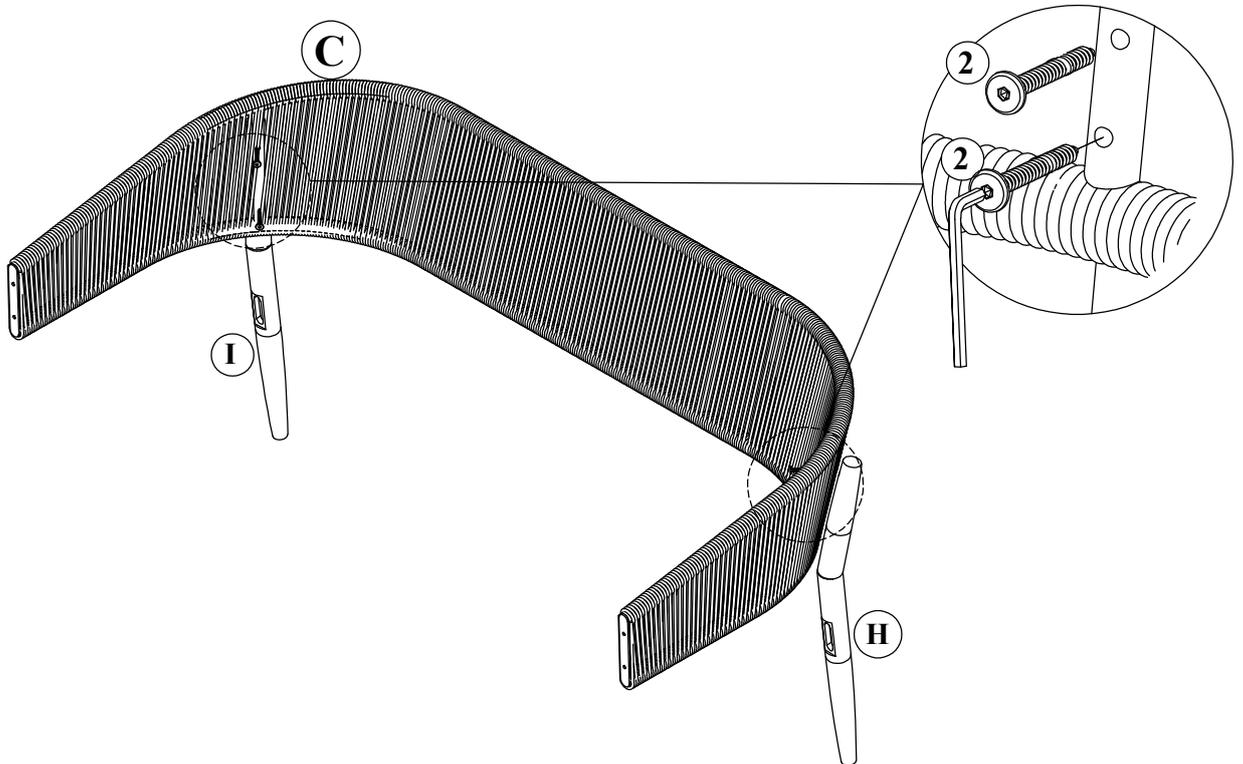


# STEP 7

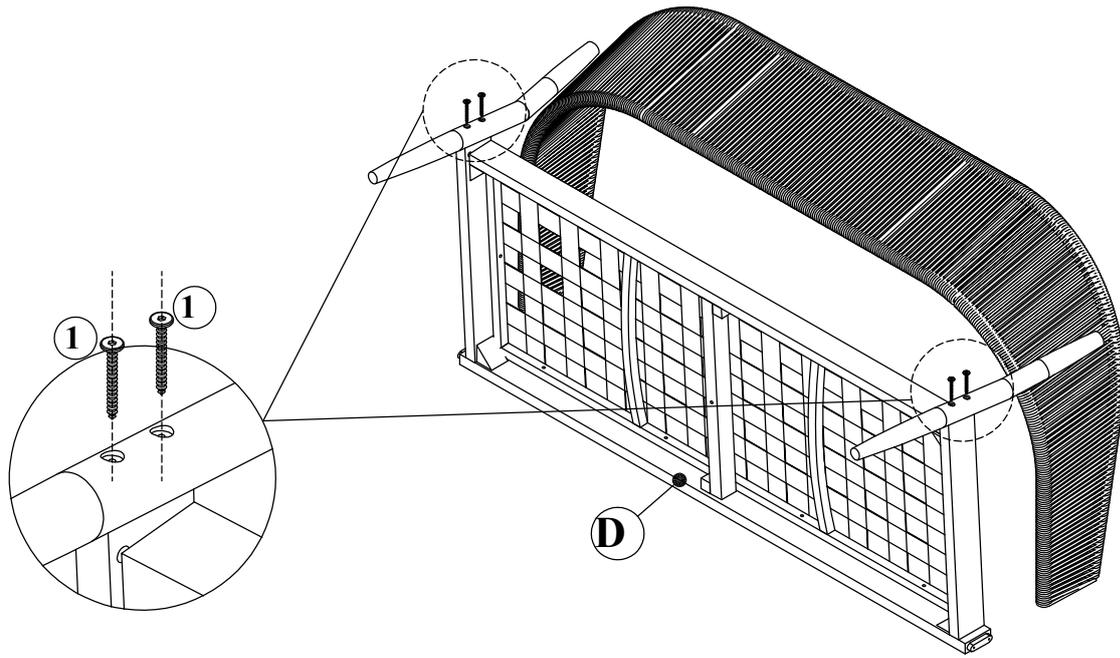


# STEP 8

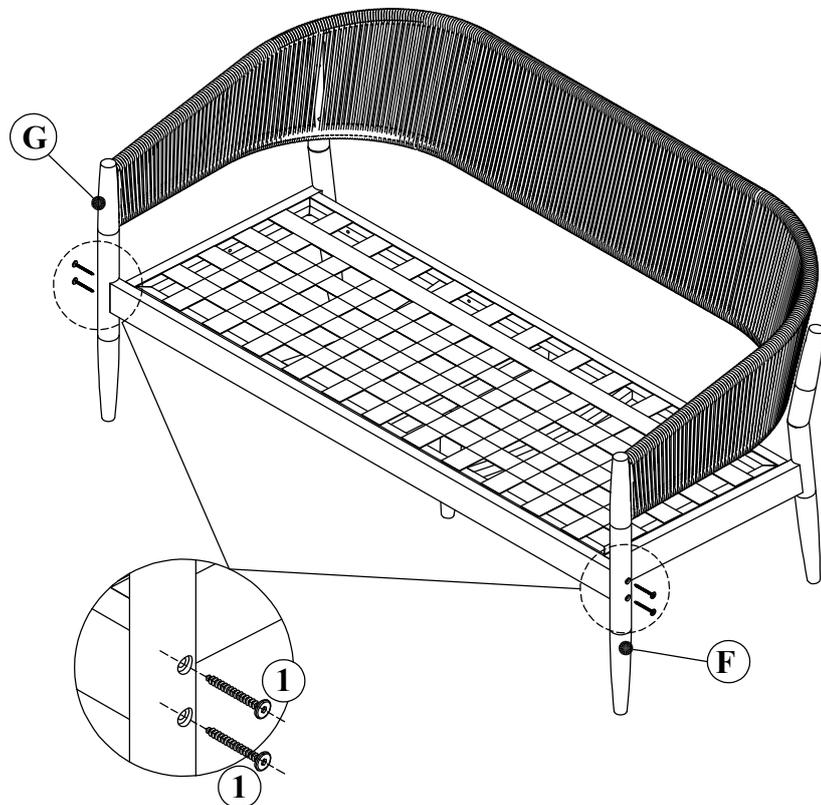


# STEP 9

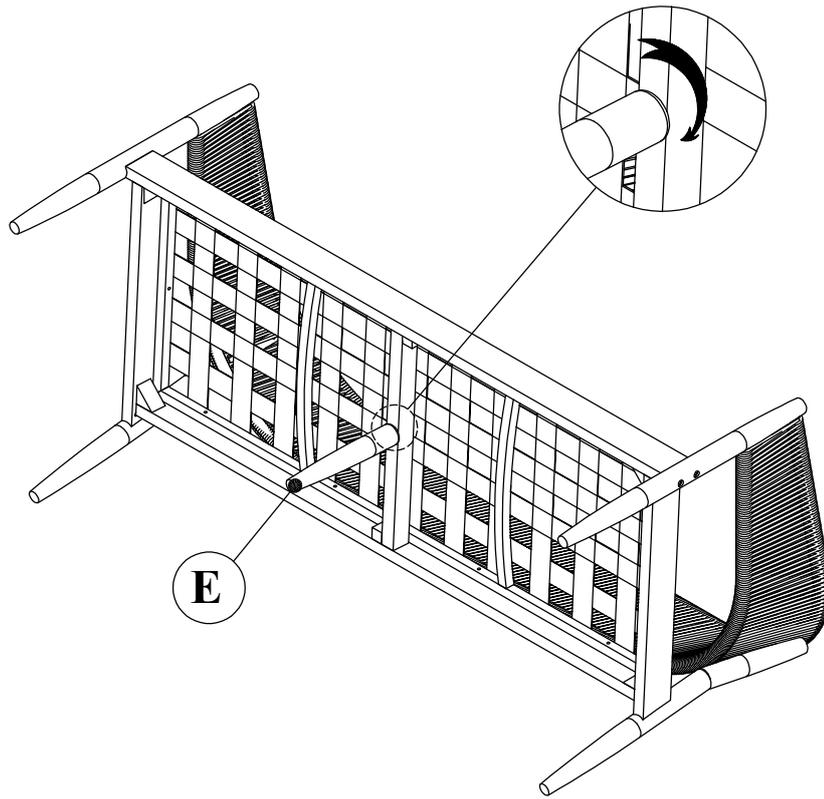


# STEP 10

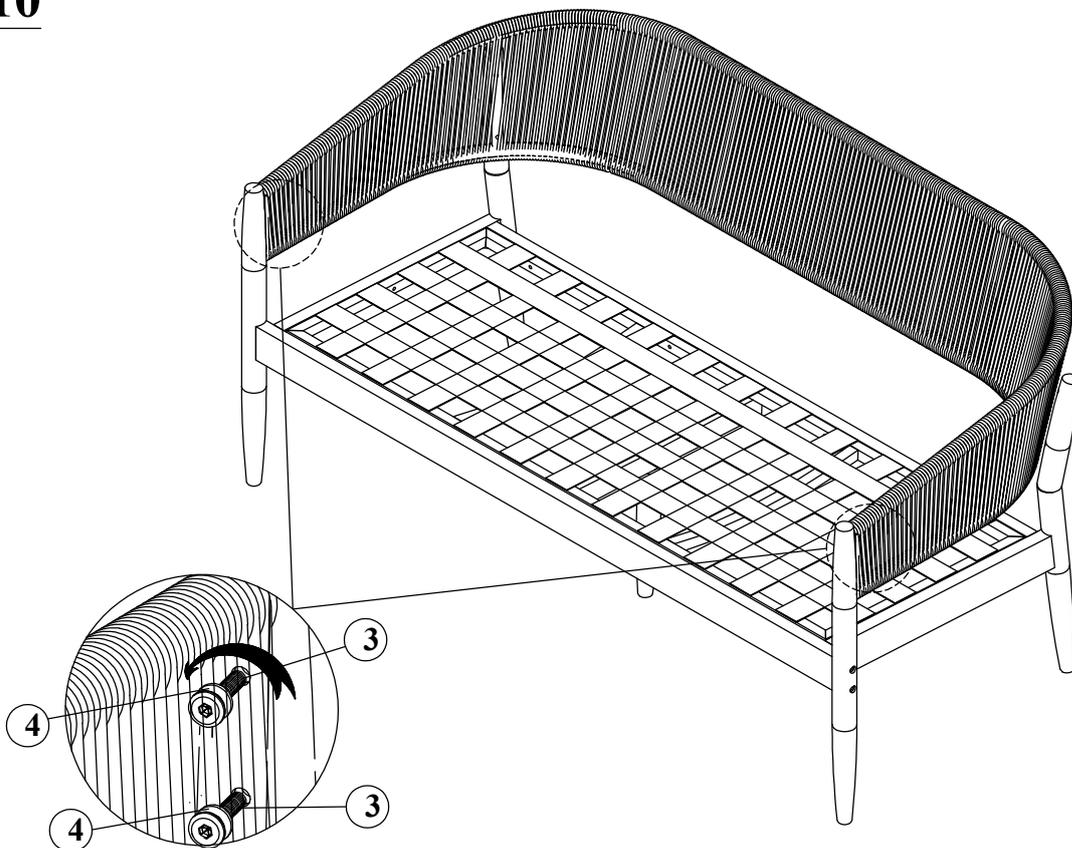


# STEP 11

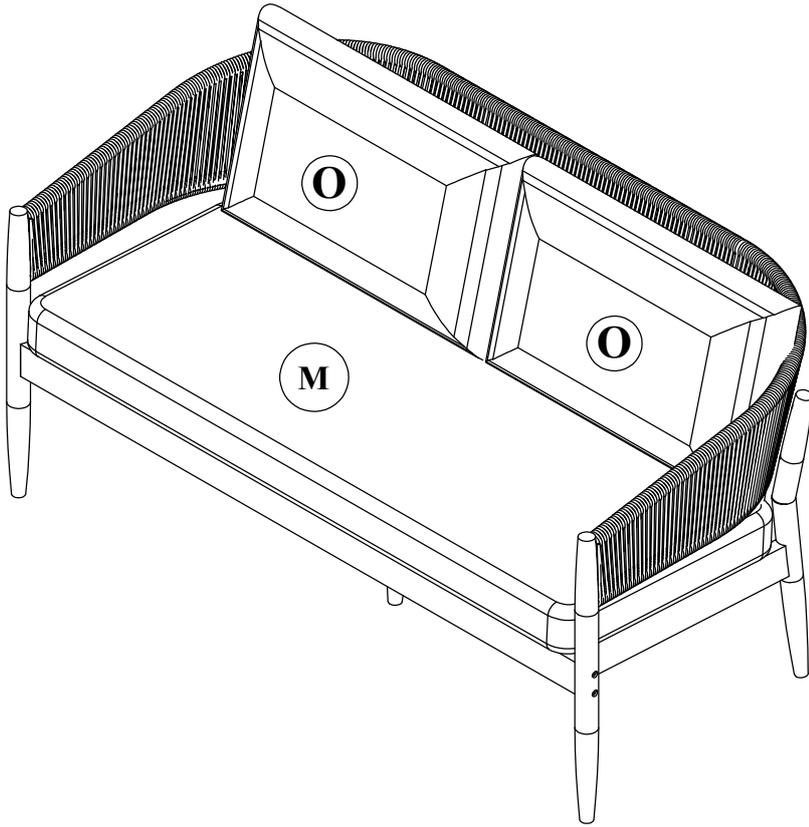

# STEP 12

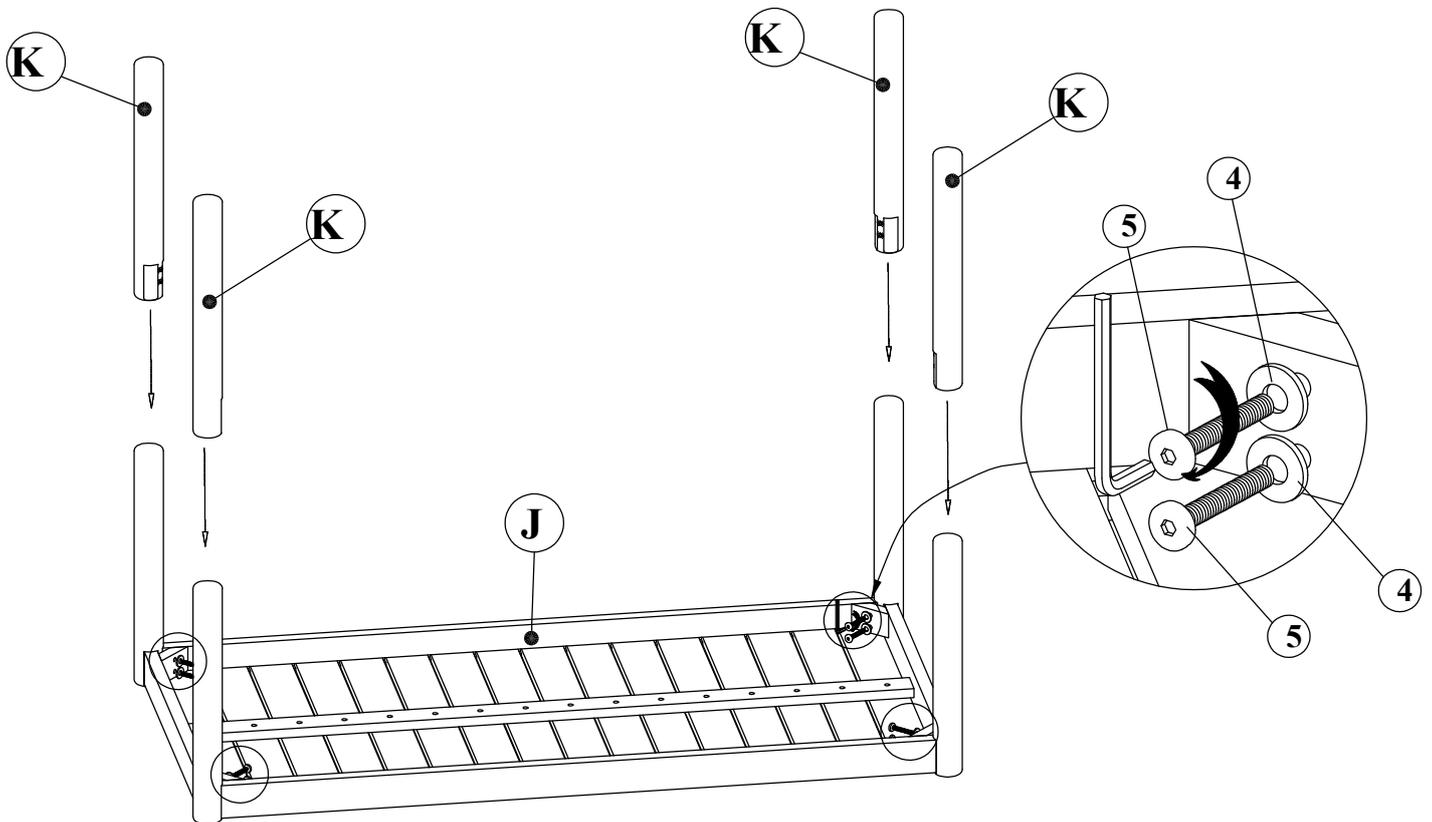

**STEP 13**

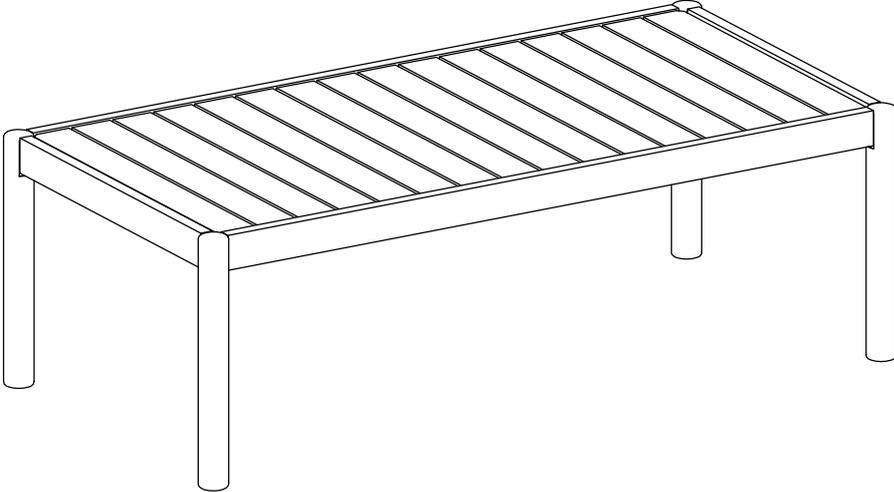

**STEP 14**

