

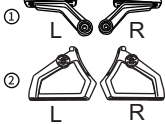
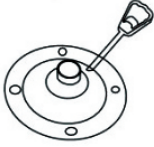
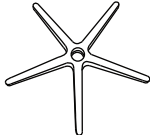










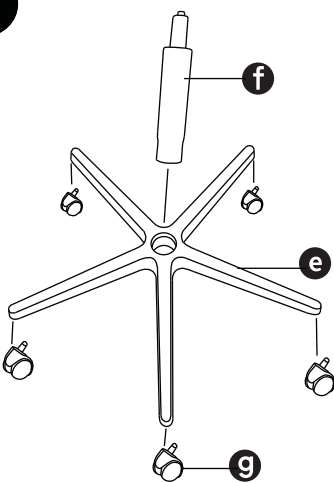
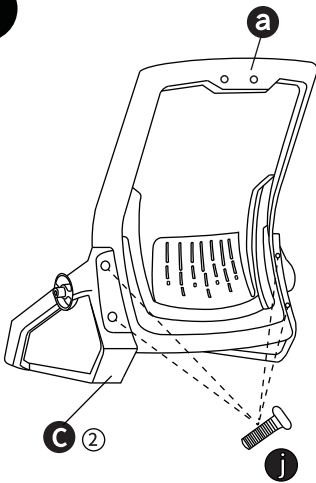
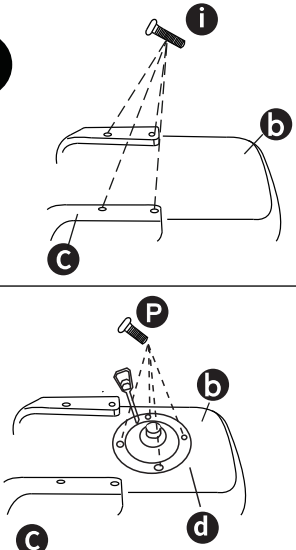
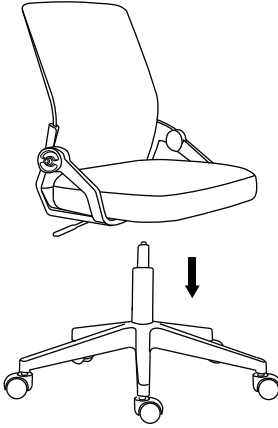
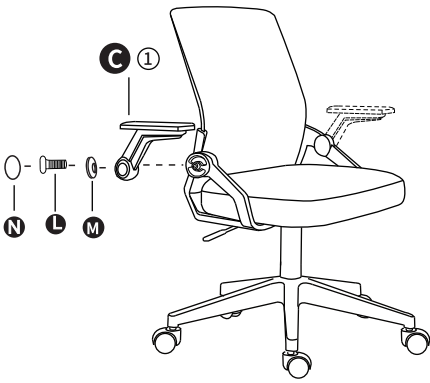


420-000009



# INSTALLATION STEP DIAGRAM

PARTES							
<b>a</b> BACK 	<b>b</b> SEAT 	<b>c</b> ARMRESTS 	<b>d</b> MECHANISM 	<b>e</b> BASE 	<b>f</b> GAS LIFT 	<b>g</b> CASTER  5pcs	<b>h</b> WRENCH  M6mm 1pcs
<b>i</b> M6*30mm  6pcs	<b>j</b> M6*25mm  4pcs	<b>L</b> M6*16mm  2pcs	<b>M</b> PAD M6*18*1.2mm  2pcs	<b>N</b> DECORATIVE COVER (IN BAG WITH THE ARMREST)  2pcs	<b>o</b> HEADREST 	<b>P</b> M6*20mm  4pcs	

INSTRUCCIONES		
<b>1</b> 	<b>2</b> 	<b>3</b> 
<b>4</b> 	<b>5</b> 	<b>6</b> 